

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Philips DVD750VR User Manual

Redi-Remote RT483521837351

Redi-Remote Replacement Remote Control User Manual

For Philips DVD750VR DVD Player (Model: RT483521837351)

1. INTRODUCTION

This manual provides instructions for the Redi-Remote Replacement Remote Control, model RT483521837351. This remote is specifically designed as a direct replacement for the original Philips remote control number 483521837351 and is compatible with the Philips DVD750VR DVD player. It is important to note that this remote is a custom replacement unit and not an original Philips product. It is engineered to perform all essential functions of the specified Philips DVD750VR unit without requiring any programming.

Important Compatibility Note: This remote control is exclusively for use with the Philips DVD750VR model. It will **NOT** work with the Philips DVD750 model or any other devices.

2. SETUP

2.1 Battery Installation

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert four AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

2.2 Initial Use

This Redi-Remote replacement control requires **no programming**. Once batteries are correctly installed, it is ready for immediate use with your Philips DVD750VR DVD player.

3. OPERATING INSTRUCTIONS

3.1 Basic Operation

To operate your Philips DVD750VR DVD player, point the remote control directly at the DVD player and press the desired function button. Ensure there are no obstructions between the remote control and the DVD player's infrared sensor.

3.2 Accessing Lower Buttons

The remote control features a sliding cover over the lower half of the buttons. To access these additional functions, gently slide the cover downwards to reveal the hidden buttons.

3.3 Device Control Limitations

This Redi-Remote is designed to control only the Philips DVD750VR DVD player. It cannot be programmed to control auxiliary devices such as televisions, sound systems, or other DVD players.



Figure 1: Redi-Remote Replacement Remote Control for Philips DVD750VR. This image displays the front view of the remote control, highlighting its button layout and overall design.

4. MAINTENANCE

4.1 Battery Replacement

If the remote control's performance degrades or it stops responding, replace all four AAA batteries with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace if necessary.
 - Verify there are no obstructions between the remote and the DVD player.
 - Confirm you are pointing the remote directly at the DVD player's infrared sensor.
- **Remote controls some functions but not others:**
 - Check if the lower button cover is fully open to access all functions.
 - Ensure the remote is compatible with your specific DVD player model (Philips DVD750VR). This remote is not designed for the DVD750 model.
- **Remote does not control other devices:**
 - This remote is a dedicated replacement for the Philips DVD750VR and cannot be programmed to control any auxiliary devices.

6. SPECIFICATIONS

Model Number	RT483521837351
Compatible Device	Philips DVD750VR DVD Player
Replacement For	Philips Remote Control 483521837351
Dimensions (L x W x H)	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces (approximately)
Batteries Required	4 x AAA (included)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Max Number of Supported Devices	1

7. WARRANTY AND SUPPORT

Information regarding product warranty and customer support for this Redi-Remote replacement control was not provided in the available product details. For any concerns with the remote after purchase, please refer to the seller's contact information or the platform where the purchase was made.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMW4VLS>

More documents and user manuals: <https://manuals.plus/>