

[Manuals.plus](#) /

› [Fossil](#) /

› Fossil ML5641600 Motorcycle Wooden Desk Clock User Manual

Fossil ML5641600

Fossil ML5641600 Motorcycle Wooden Desk Clock User Manual

Model: ML5641600

INTRODUCTION

Thank you for purchasing the Fossil ML5641600 Motorcycle Wooden Desk Clock. This analog desk clock features a vintage motorcycle design on its face and is crafted from solid wood. This manual provides essential information for the proper setup, operation, and maintenance of your clock to ensure its longevity and accurate timekeeping.



Image 1: The Fossil ML5641600 Motorcycle Wooden Desk Clock as packaged.

SAFETY INFORMATION

- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Remove exhausted batteries promptly to prevent leakage and damage.
- Dispose of batteries according to local regulations.
- Place the clock on a stable, flat surface to prevent it from falling.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.

PACKAGE CONTENTS

Upon opening the package, please ensure all items are present and in good condition:

- Fossil ML5641600 Motorcycle Wooden Desk Clock
- User Manual (this document)
- *Note: AA battery is not typically included and must be purchased separately.*

SETUP

Follow these steps to set up your Fossil desk clock:

1. **Insert Battery:** Locate the battery compartment on the back of the clock. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
2. **Set Time:** On the back of the clock, locate the time-setting knob (usually a small wheel or dial). Rotate this knob clockwise or counter-clockwise until the clock hands display the correct time.
3. **Placement:** Place the clock on a flat, stable surface where it will not be easily knocked over.



Image 2: Front view of the Fossil ML5641600 clock, illustrating the analog display.

OPERATING INSTRUCTIONS

The Fossil ML5641600 is an analog clock designed for simple time display. Once the battery is inserted and the time is set, the clock will operate continuously.

- **Reading the Time:** The clock features an hour hand, a minute hand, and a second hand. The hour hand indicates the hour, the minute hand indicates the minutes, and the second hand sweeps to indicate seconds.
- **Adjusting Time:** If the time needs adjustment due to daylight saving or travel, repeat step 2 from the "Setup" section.

MAINTENANCE

- **Cleaning:** To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the wood finish or the clock mechanism.
- **Battery Replacement:** When the clock hands begin to slow down or stop, it is an indication that the battery needs to be replaced. Follow the "Insert Battery" step in the "Setup" section to replace the AA battery.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent potential leakage and damage to the mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or stops intermittently.	Dead or low battery. Incorrect battery insertion.	Replace the AA battery with a fresh one. Ensure the battery is inserted with correct polarity (+/-).
Clock runs too fast or too slow.	Battery power is low.	Replace the AA battery with a fresh one. If the issue persists, the clock mechanism may require professional inspection.
Hands are stuck or not moving smoothly.	Obstruction or damage to the mechanism.	Gently check for any visible obstructions. Do not force the hands. If damaged, contact customer support.

SPECIFICATIONS

Brand: Fossil

Model Number: ML5641600

Display Type: Analog

Power Source: 1 x AA Battery (not included)

Material: Wood

Product Dimensions: Approximately 4.5 inches (W) x 5 inches (H) x 2 inches (D)

Item Weight: 1.3 pounds

UPC: 762346110071

ASIN: B00CNRR0FG

WARRANTY AND SUPPORT

For specific warranty information regarding your Fossil ML5641600 Motorcycle Wooden Desk Clock, please refer to the documentation included with your purchase or visit the official Fossil website. Fossil provides customer support for product inquiries, troubleshooting assistance, and warranty claims.

You can typically find support contact information on the manufacturer's website: www.fossil.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question