

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zanussi](#) /

› **Zanussi Dishwasher Cutlery Basket Instruction Manual for Z1019, Z2200, Z30, Z50, Z60, Z6430, Z70, Z80, Z906, Z916, Z919 Models**

Zanussi Z1019 Z2200 Z30 Z50 Z60 Z6430 Z70 Z80 Z906 Z916 Z919

Zanussi Dishwasher Cutlery Basket Instruction Manual

Models: Z1019, Z2200, Z30, Z50, Z60, Z6430, Z70, Z80, Z906, Z916, Z919, DI 110TCR, DI760SS, DW401/A, DW41/B, DW66TCR/A, DW900, DW906, DW910TCR, ID6745B, Z2200MS

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your genuine Zanussi replacement white cutlery basket. This accessory is designed to fit various Zanussi dishwasher models, ensuring your cutlery is properly cleaned during wash cycles. Please verify your dishwasher model number against the compatibility list provided to ensure correct fitment.



Image showing the white replacement cutlery basket for Zanussi dishwashers.

SETUP AND INSTALLATION

- 1. Preparation:** Ensure your dishwasher is empty and turned off before attempting to replace any parts.
- 2. Remove Old Basket:** Carefully lift the existing cutlery basket out of its designated slot in the lower dishwasher rack. If the old basket is damaged or broken, handle with care to avoid injury.
- 3. Install New Basket:** Position the new Zanussi cutlery basket into the same slot in the lower dishwasher rack. Ensure it sits securely and does not obstruct the spray arms or other moving parts. The basket should fit snugly without excessive force.

OPERATING INSTRUCTIONS

Proper loading of the cutlery basket is essential for effective cleaning and to prevent damage to your cutlery or dishwasher.

- Loading Cutlery:** Place knives and forks with handles facing down to ensure the blades and tines are thoroughly cleaned. Spoons can be placed with handles up or down.
- Avoid Overloading:** Do not overcrowd the basket. Ensure there is sufficient space between items for

water and detergent to circulate freely. Overloading can lead to poor cleaning results.

- **Sharp Items:** For safety, place sharp knives and other pointed utensils with their points facing down.
- **Placement in Dishwasher:** Always place the cutlery basket in the designated area of the lower rack. Ensure it does not interfere with the rotation of the spray arms.

MAINTENANCE

Regular maintenance of your cutlery basket will prolong its life and ensure optimal cleaning performance.

- **Regular Cleaning:** Periodically rinse the basket under running water to remove any food debris or residue that may accumulate in the compartments.
- **Inspect for Damage:** Regularly check the basket for cracks, breaks, or signs of wear. A damaged basket can affect cleaning performance or potentially scratch other items in the dishwasher.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on the basket, as this can damage the plastic material.

TROUBLESHOOTING

- **Cutlery Not Clean:** If cutlery is not coming out clean, ensure the basket is not overloaded and items are spaced correctly. Check that the spray arms are not obstructed and can rotate freely.
- **Basket Does Not Fit:** Verify that your dishwasher model is listed as compatible with this specific Zanussi cutlery basket. If it is not, the basket may not be the correct replacement part for your appliance.
- **Basket Movement:** If the basket moves excessively during a wash cycle, ensure it is correctly seated in its designated slot in the lower rack.

SPECIFICATIONS

Feature	Detail
Item Weight	0.33 Kilograms
Batteries Required	No
Manufacturer	Zanussi
Manufacturer's Code	50266728000

WARRANTY AND SUPPORT

As a genuine Zanussi product, this cutlery basket is manufactured to high standards. For any issues related to manufacturing defects or if you require further assistance, please contact Zanussi customer support or the retailer from whom you purchased the product. Please have your dishwasher model number and the manufacturer's code for the cutlery basket (50266728000) available when contacting support.

