

Hotpoint INDESIT HOTPOINT CREDA C00259035#11

Genuine INDESIT IWDE126 IWDE12 IWME126 Washing Machine White Door Handle Kit

Model: INDESIT HOTPOINT CREDA C00259035#11

1. INTRODUCTION

This instruction manual provides essential information for the installation and maintenance of your genuine replacement white door handle kit for Indesit and Hotpoint washing machines. This kit is designed to replace a broken or faulty door handle, ensuring the proper functioning and safety of your appliance. Please read all instructions carefully before proceeding with installation.

2. SAFETY INFORMATION

Always prioritize safety when performing repairs on any appliance. Disconnect the washing machine from the power supply before attempting any installation or repair. If you are unsure about any step, it is recommended to seek assistance from a qualified technician. Repairs on gas appliances should only be performed by a Gas Safe registered engineer. This product is not a gas appliance component.

3. PRODUCT COMPATIBILITY

This genuine replacement door handle kit is compatible with a range of Hotpoint and Indesit washing machine models. Verify your appliance model number against the list below to ensure compatibility:

- Hotpoint: AWM108EU.N, BHWD129UK, BHWD129UK/1, BHWD129UKA, BHWD149UK, BHWD149UK/1, BHWD149UKA, BHWDD74UK, BHWM129UK, BHWM129UK/1, BHWM129UK/2, BHWM129UK1E, BHWM129UKA, BHWM149UK, BHWM149UK2, BHWM149UKA, BHWM149UKE, BHWMD732UK, BHWMD742UK
- Indesit: IWDE126UK, IWDE12UK, IWDE146UK, IWME126UK, IWME12UK, IWME146UK, IWME147UK, IWME147UKE
- Scholtes: SL70PWMAIUK, SL75PWDAIUK

This kit may also fit other washing machines sold by various manufacturers and brands not explicitly listed. Always cross-reference with your appliance's specific part requirements.

4. COMPONENTS INCLUDED

The door handle kit includes the following components:

- Door Handle (white, T-shaped)
- Handle Latch Pin
- Hinge Pin
- Spring

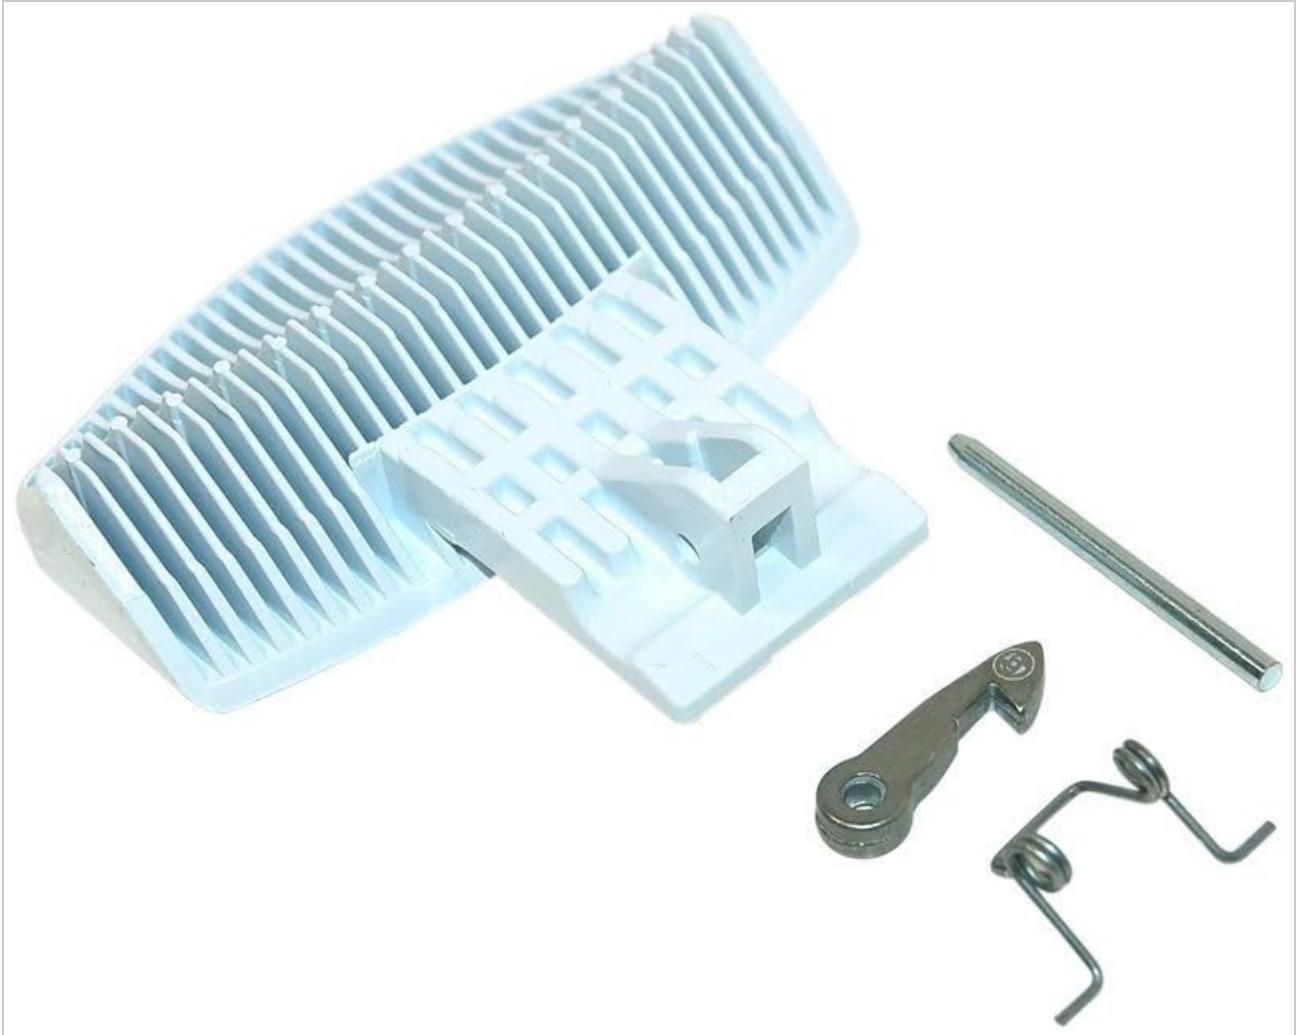


Image: Contents of the door handle kit, showing the white plastic handle, metal latch pin, hinge pin, and springs.

5. SETUP AND INSTALLATION

Installation of the door handle kit typically involves disassembling the washing machine door to replace the broken components. This process requires careful handling and basic tools. Ensure the washing machine door is open before attempting to replace the handle, as some models may not have a manual unlock feature if the door is stuck closed.

General Installation Steps (May vary by model):

1. **Disconnect Power:** Unplug the washing machine from the electrical outlet.
2. **Access Door Components:** Carefully remove the inner panel of the washing machine door. This usually involves unscrewing several screws around the perimeter.
3. **Remove Old Handle:** Identify the broken handle components. Remove the old latch pin, hinge pin, and spring. Note their orientation for reassembly.
4. **Install New Components:** Insert the new spring into its designated slot. Position the new handle, then insert the new hinge pin and latch pin to secure it. Ensure all parts move freely and correctly.

- 5. **Reassemble Door:** Reattach the inner door panel, ensuring all screws are tightened securely.
- 6. **Test Functionality:** Plug the washing machine back in and test the door handle to ensure it latches and unlatches properly.

For specific model instructions, refer to your washing machine's original service manual or consult online resources for your particular model.

6. OPERATING

Once the new door handle kit is correctly installed, the washing machine door should open and close smoothly, and the latch mechanism should engage securely. Operate the door handle by gently pulling it to open the door and pushing it firmly to close until it latches. Avoid excessive force when operating the handle to prevent damage.

7. MAINTENANCE

The door handle kit is designed for durability. To ensure its longevity:

- **Regular Cleaning:** Wipe the handle and surrounding area with a soft, damp cloth to remove dirt and detergent residue.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or solvents, as these can damage the plastic and metal components.
- **Gentle Operation:** Always operate the handle with gentle, firm pressure. Avoid slamming the door or forcing the handle.

8. TROUBLESHOOTING

If you encounter issues after installing the new door handle:

- **Door Not Latching:** Check if the latch pin is correctly aligned with the door lock mechanism on the washing machine body. Ensure no obstructions are present.
- **Handle Feels Loose:** Verify that all screws securing the inner door panel are tightened and that the hinge pin and latch pin are fully seated.
- **Difficulty Opening/Closing:** Ensure the spring is correctly installed and providing tension. Check for any binding or misalignment of the handle components.

If problems persist, re-examine the installation steps or consult a professional appliance repair technician.

9. SPECIFICATIONS

Attribute	Value
Manufacturer	Hotpoint
Model Number	INDESIT HOTPOINT CREDA C00259035#11
Product Dimensions	9.11 x 1 x 1 cm
Item Weight	1 Gram
Style	Modern
Material	Plastic (Acrylonitrile Butadiene Styrene)

Shape	T-shaped
Included Components	Handle latch pin, hinge pin, and spring
Batteries Required	No

10. WARRANTY AND SUPPORT

This product is a genuine replacement part. For information regarding returns or specific product support, please refer to the retailer's return policy or contact the seller directly. Standard return policies typically allow for returns within a specified period if the item is faulty or not as described.

For general inquiries or further assistance, please contact the manufacturer or an authorized service center for your washing machine brand.

© 2024 Hotpoint/Indesit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question