

Hotpoint C00145707

Genuine INDESIT Tumble Dryer Drive Belt C00145707 1860H9EL Instruction Manual

Brand: Hotpoint | Model: C00145707

1. PRODUCT OVERVIEW

This document provides instructions for the Genuine INDESIT Tumble Dryer Drive Belt, model C00145707 1860H9EL. This drive belt is a replacement component designed to restore the tumbling function of compatible tumble dryers. It is essential for the proper operation of the appliance, ensuring the drum rotates to dry clothes effectively.



Image of the Genuine INDESIT Tumble Dryer Drive Belt C00145707 1860H9EL, showing its ribbed surface and flexible material.

2. COMPATIBILITY

This drive belt is suitable for a range of tumble dryer models from various brands. Please verify your appliance's model number against the list below to ensure compatibility before installation.

- **Ariston:** ALE60VFR, AS60VAG, AS60VEX, AS60VEX60, AS60VEXPAL, AS60VSK, AS60VXAUS, AS65VXSNA, AS66VXNA, ASL60VEX, ASL65VXSNA
- **Clatronic:** WT5011V
- **Creda:** TVR2, TVS3, TVU1
- **Export:** SLE62, WT5011V
- **Hotpoint:** TVAL73C6GZUK, TVAL73C6PZUK, TVAL73CGZUK, TVAL73CPZUK, TVAM70CGZUK, TVAM70CPZUK, TVEL75B6AUK, TVEL75C6GUK, TVEL75C6PUK, TVEM70C6GUK, TVEM70C6PUK, TVF760A, TVF760G, TVF760K, TVF760P, TVF770A, TVF770G, TVF770K, TVF770P, TVFG65B6GUK, TVFG65C6GUK, TVFG65C6PUK, TVFG85C6GUK, TVFG85C6KUK, TVFG85C6PUK, TVFM60B6GUK, TVFM60B6PUK, TVFM60C6GUK, TVFM60C6PUK, TVM560G, TVM560P, TVM562G, TVM562P, TVM570G, TVM570P, TVM572G, TVM572P, TVYL655C6GUK, TVYL655C6PUK, TVYM650C6PUK,

VTD00G, VTD00P, VTD00T, VTD20G, VTD20P, VTD20T, VTD60G, VTD60P, VTD60T, VTD65A

- **Indesit:** IDV65SUK, IDV65UK, IDV75SUK, IDV75UK, IDVA735SUK, IDVA735UK, IS60V, IS60VEX, IS60VEXPAL, IS60VFR, IS60VNL, IS60VS, IS60VSK, IS60VU, ISA60VUK, ISL60V, ISL60VEX, ISL60VNL, ISL60VSK
- **Proline:** TDV62

3. SAFETY INFORMATION

Before attempting any repair or installation, please read and understand the following safety precautions:

- **Disconnect Power:** Always unplug the tumble dryer from the main power supply before beginning any work to prevent electrical shock.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves, to protect your hands.
- **Professional Assistance:** If you are unsure about any step or lack the necessary tools or expertise, it is recommended to seek assistance from a qualified appliance technician.
- **Sharp Edges:** Be aware of sharp edges or components inside the appliance during disassembly and reassembly.
- **Proper Disposal:** Dispose of the old belt and any other removed parts responsibly according to local regulations.

4. INSTALLATION (SETUP)

Replacing a tumble dryer drive belt typically involves disassembling parts of the dryer to access the drum and motor. The exact steps may vary depending on your specific dryer model. The following are general guidelines:

1. **Prepare the Appliance:** Ensure the tumble dryer is unplugged from the power outlet. Move the dryer to an open area for easier access.
2. **Access the Drum:** Depending on the dryer design, you may need to remove the top panel, front panel, or rear panel to gain access to the drum and motor assembly. This often involves unscrewing fasteners and carefully detaching panels.
3. **Remove the Old Belt:** Locate the old drive belt. It will typically be wrapped around the dryer drum and a motor pulley. Carefully remove the old belt, noting its routing path if possible.
4. **Install the New Belt:** Place the new C00145707 1860H9EL drive belt around the dryer drum. Ensure the ribbed side of the belt faces the drum.
5. **Route the Belt:** Route the belt around the motor pulley and any tensioner pulleys. The belt should be taut but not excessively stretched. Ensure it is correctly seated in the grooves of the pulleys.
6. **Test Belt Tension:** Manually rotate the drum a few times to ensure the belt is properly aligned and moves smoothly without slipping.
7. **Reassemble the Dryer:** Carefully reattach all panels and fasteners that were removed. Ensure all connections are secure.
8. **Final Test:** Plug the dryer back into the power outlet and run a short cycle to confirm the drum rotates correctly and the dryer operates as expected.

Refer to your specific tumble dryer's service manual for detailed, model-specific instructions and diagrams.

5. MAINTENANCE

The drive belt is a wear-and-tear component and does not typically require routine maintenance beyond proper installation. However, to maximize its lifespan and the efficiency of your tumble dryer:

- **Avoid Overloading:** Do not overload the dryer, as this can put excessive strain on the drive belt and motor.
- **Regular Cleaning:** Keep the dryer's interior, especially around the drum and pulleys, free from lint and debris, which can interfere with belt operation.
- **Inspect Periodically:** If you notice any unusual noises or a decrease in tumbling performance, inspect the belt for signs of wear, cracking, or fraying.

6. TROUBLESHOOTING

If your tumble dryer is not functioning correctly after belt replacement, consider the following common issues:

- **Dryer Not Tumbling:** Ensure the belt is correctly routed around both the drum and the motor pulley. Check for proper tension. If the belt is too loose, it may slip.
- **Unusual Noises:** A new belt might make some noise initially, but persistent squealing or grinding could indicate improper installation, misalignment, or interference with other components. Recheck the belt's path and ensure no parts are rubbing.
- **Dryer Not Starting:** Confirm the dryer is properly plugged in and the circuit breaker has not tripped. This issue is usually not belt-related unless the belt is severely jammed, preventing the motor from turning.
- **Belt Slipping:** Ensure the belt is the correct size and type for your model. Verify that the motor pulley and tensioner pulley are clean and free of grease or debris.

If troubleshooting steps do not resolve the issue, consult a qualified technician.

7. SPECIFICATIONS

Model Number	C00145707 1860H9EL
Brand	Hotpoint (Compatible with Indesit, Ariston, Creda, Proline)
Material	Rubber
Belt Style	Drive Belt
Compatible Devices	Tumble Dryer
Product Dimensions	Approximately 0.39 x 0.39 x 0.39 inches (packaged)
Item Weight	Approximately 0.035 ounces (1 Grams)

8. WARRANTY AND SUPPORT

For warranty information regarding this Genuine INDESIT Tumble Dryer Drive Belt, please refer to the original purchase documentation or contact the seller directly. Support for installation or troubleshooting beyond this manual's scope should be directed to a qualified appliance repair professional or the manufacturer of your specific tumble dryer model.

