

Crosley CR6019A

Crosley CR6019A Executive Portable USB Turntable

User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Crosley CR6019A Executive Portable USB Turntable. Please read this manual thoroughly before using your turntable to ensure proper function and longevity of the device.

PRODUCT OVERVIEW

The Crosley CR6019A Executive Portable USB Turntable is designed for playing vinyl records and converting them to digital files. It features a suitcase-style enclosure for portability and includes built-in stereo speakers.

Key Features:

- Belt-driven turntable mechanism supporting 3 speeds: 33 1/3, 45, and 78 RPM records.
- Dynamic full-range stereo speakers for direct audio playback.
- Auxiliary input for connecting external audio devices.
- RCA audio output for connecting to external speaker systems.
- USB enabled for connecting to Windows PC or Mac for digital conversion.
- Vinyl-wrapped suitcase enclosure with brass-plated hardware for portability and protection.

Components:



Figure 1: Top view of the turntable with the lid open, revealing the platter, tonearm, and control panel.



Figure 2: Side view of the turntable, showing one of the integrated stereo speakers.



Figure 3: Detail of the control panel with power/volume knob, headphone jack, and speed selector.



Figure 4: The turntable in its closed, portable suitcase configuration.

Product Video Overview:

Your browser does not support the video tag.

Video 1: An overview of the Crosley CR6019A Executive Portable USB Turntable, demonstrating its features and connectivity options.

SETUP

1. **Unpacking:** Carefully remove the turntable from its packaging. Retain all packaging materials for future transport or service.
2. **Power Connection:** Connect the power adapter to the DC IN jack on the rear of the unit and plug it into a wall outlet.
3. **Platter Setup:** Ensure the platter is securely seated. Remove any shipping materials or twist ties from the tonearm.
4. **Tonearm Protection:** Unlock the tonearm clip to release the tonearm.

OPERATING INSTRUCTIONS

Playing Records:

1. Open the turntable lid.
2. Place a record on the turntable platter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch. For 45 RPM records, place the included 45 RPM adapter on the center spindle.
4. Turn the ON/OFF/VOLUME knob clockwise to power on the unit and adjust the volume.
5. Release the tonearm from its rest.
6. Gently place the stylus on the desired track of the record. The platter will begin to rotate.
7. At the end of the record, the turntable will stop automatically, but the tonearm will not return to its rest. Manually return the tonearm to its rest and secure it with the clip.

Using Auxiliary Input:

Connect an external audio device (e.g., smartphone, MP3 player) to the AUX IN jack on the rear of the turntable using a 3.5mm audio cable. The audio from the external device will play through the turntable's speakers.

USB Conversion:

The turntable allows you to convert your vinyl records into digital audio files using a computer. You will need to install audio recording software (e.g., Audacity, often included or available for download) on your computer.

1. Connect the turntable to your computer using the supplied USB cable.
2. Install and open the audio recording software on your computer.
3. Follow the software's instructions to configure the input device (your turntable) and begin recording.
4. Play your vinyl record as described above while recording through the software.
5. Save your digital audio files in your preferred format.

MAINTENANCE

Stylus Care:

- Avoid touching the stylus tip with your fingers.
- Clean the stylus regularly with a soft brush, brushing from back to front.
- Replace the stylus approximately every 250-300 hours of use, or if you notice a decrease in sound quality.

Record Care:

- Handle records by their edges to avoid touching the grooves.
- Store records in their sleeves and upright in a cool, dry place.
- Clean records with a dedicated record cleaning brush or solution to remove dust and static.

General Unit Care:

- Wipe the turntable's exterior with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Keep the lid closed when not in use to protect the platter and tonearm from dust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not active.	Ensure power adapter is securely connected to the unit and a working power outlet.
No sound or low volume	Volume too low; stylus dirty or damaged; external speakers not connected properly.	Increase volume. Clean or replace stylus. Check RCA connections if using external speakers.
Record skipping	Record is dirty or scratched; stylus is worn or damaged; turntable not on a stable surface.	Clean record. Replace stylus. Place turntable on a flat, stable surface away from vibrations.

Problem	Possible Cause	Solution
USB recording issues	Software not configured correctly; USB cable loose.	Refer to your recording software's manual for proper setup. Ensure USB cable is firmly connected.

SPECIFICATIONS

Feature	Detail
Brand	Crosley
Model Name	CR6019A
Speeds	33 1/3, 45, 78 RPM
Connectivity	Wired (USB, RCA, Aux-in)
Built-In Media	Dynamic full range stereo speakers
Material	Plastic (Vinyl-wrapped enclosure)
Item Weight	7 Pounds
Power Source	Corded Electric

WARRANTY & SUPPORT

Your Crosley CR6019A Executive Portable USB Turntable comes with a **1 Year Manufacturer's Warranty**. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please visit the official Crosley website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.