

BLACK+DECKER TO4314SSD

BLACK+DECKER TO4314SSD Rotisserie Convection Countertop Toaster Oven Instruction Manual

Model: TO4314SSD

1. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.

- Do not place cardboard, plastic, paper, or other combustible materials in the oven.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

2. PRODUCT FEATURES

- **Rotisserie Function:** The toaster oven will rotate meat while cooking with fast and even convection heat.
- **Five Functions:** Bake, broil, toast, keep warm, and rotisserie for all your cooking needs, right on the countertop.
- **Capacity:** Fits 12" Pizza or 6 Slices of Bread.
- **Maximum Temperature:** 450°F.
- **Power:** 120V; 1500W.
- **Dedicated Toast Timer:** Allows for predictable shade selection with every use.
- **60-Minute Timer:** Gives you control over cooking, and features stay-on functionality for longer cooking tasks. The oven will shut off when the timer expires.

3. COMPONENTS AND ACCESSORIES



Figure 3.1: Front view of the Black+Decker TO4314SSD Toaster Oven, showcasing its stainless steel finish and control panel.



INCLUDES

2 SLIDE RACKS, BAKING PAN,
ROTISSERIE RACK AND
SLIDE-OUT CRUMB TRAY

Figure 3.2: Included accessories: two slide racks, a baking pan, rotisserie rack, and a slide-out crumb tray.

- **Main Unit:** Stainless steel convection toaster oven.
- **Control Knobs:** For temperature, function, timer, and toast shade.
- **Slide Racks (2):** For holding food items during baking or toasting. These are removable for cleaning and rotisserie use.
- **Baking Pan:** A flat pan for baking various foods.
- **Rotisserie Rack:** A specialized rod and forks for rotisserie cooking.
- **Slide-Out Crumb Tray:** Located at the bottom for easy cleaning of crumbs.
- **Handle:** For safely removing hot racks and pans.

4. SETUP

1. **Unpack:** Carefully remove the toaster oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.

2. **Clean:** Wash all removable parts (racks, baking pan, rotisserie accessories, crumb tray) in warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
3. **Placement:** Place the toaster oven on a stable, level, heat-resistant surface. Ensure there is adequate ventilation around the unit (at least 4 inches of space on all sides and above). Do not place it directly under cabinets or near flammable materials.
4. **First Use (Burn-Off):** Before first use, plug in the oven and turn the temperature knob to 450°F (230°C) and the function knob to 'Bake'. Set the timer for 15 minutes. This helps burn off any manufacturing oils and odors. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS



5 FUNCTIONS

BAKE, BROIL, TOAST, KEEP WARM,
AND ROTISSERIE

Figure 5.1: The control panel with knobs for temperature, function, timer, and toast shade.



CONVECTION HEATING FOR FAST EVEN COOKING

Figure 5.2: Convection heating ensures fast and even cooking, ideal for items like pizza.



ENJOY MOIST, DELICIOUS MEATS
WITH THE EASY-TO-USE ROTISSERIE FUNCTION

Figure 5.3: The rotisserie function allows for even cooking of meats, ensuring juicy results.



DEDICATED TOAST TIMER

GET PERFECT TOAST EVERY TIME

Figure 5.4: The dedicated toast timer provides precise control over toast shade.

General Operation:

The toaster oven features four control knobs for precise cooking:

- **Top Knob:** Temperature control (Warm to 450°F / 230°C).
- **Second Knob:** Function selector (Keep Warm, Rotisserie, Convection, Bake, Broil, Toast/Bagel).
- **Third Knob:** Timer (up to 60 minutes with stay-on option).
- **Bottom Knob:** Toast Shade selector (for Toast/Bagel function).

Cooking Functions:

1. Bake:

- Place food on the baking pan or appropriate oven-safe dish on the wire rack.
- Turn the Function knob to 'Bake'.
- Turn the Temperature knob to the desired temperature.
- Turn the Timer knob to the desired cooking time. The oven will preheat and begin baking.

2. Broil:

- Place food on the baking pan. For best results, position food closer to the top heating elements.
- Turn the Function knob to 'Broil'.
- Turn the Temperature knob to 'Broil' (usually 450°F / 230°C).
- Turn the Timer knob to the desired broiling time. Monitor food closely to prevent burning.

3. Toast/Bagel:

- Place bread or bagels directly on the wire rack.
- Turn the Function knob to 'Toast' or 'Bagel'.
- Turn the Toast Shade knob to select your desired darkness.
- Turn the Timer knob past 20 minutes, then back to the desired toast time. The oven will begin toasting.

4. Rotisserie:

- Prepare meat (e.g., chicken up to 3.5 lbs) by securing it onto the rotisserie rod with the forks.
- Insert the rotisserie assembly into the oven's rotisserie slots. Ensure the drip pan is placed below.
- Turn the Function knob to 'Rotisserie'.
- Turn the Temperature knob to the recommended temperature for your meat.
- Turn the Timer knob to the desired cooking time. The rotisserie will begin to turn.

5. Keep Warm:

- Place cooked food on the baking pan or oven-safe dish.
- Turn the Function knob to 'Keep Warm'.
- Turn the Temperature knob to 'Warm'.
- Turn the Timer knob to the desired duration or to 'Stay On' for continuous warming.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster oven.

- **Always unplug** the appliance and allow it to cool completely before cleaning.
- **Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly.
- **Racks and Pans:** Wash the wire racks, baking pan, and rotisserie accessories in warm, soapy water. These parts are also dishwasher safe.
- **Interior:** Wipe the interior walls with a damp cloth and mild liquid soap solution. Do not use abrasive cleaners or metal scouring pads. For stubborn stains, a non-abrasive sponge or cloth can be used.
- **Exterior:** Wipe the exterior surfaces with a damp cloth. Dry thoroughly. Do not use abrasive cleaners or polishes.
- **Door:** Clean the glass door with a damp cloth or glass cleaner. Do not use abrasive cleaners or metal tools that could scratch the glass.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Appliance not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check circuit breaker; turn timer knob to desired setting.
Food is not cooking evenly.	Incorrect rack position; food too large; uneven food placement.	Adjust rack position (refer to recipe); ensure food fits properly; arrange food evenly on the rack/pan.
Smoke or odor during first use.	Manufacturing oils burning off.	This is normal. Ensure good ventilation. It should dissipate after initial use.
Rotisserie function not rotating.	Meat not balanced; rotisserie rod not properly seated.	Ensure meat is balanced on the rod; check that the rotisserie rod is correctly inserted into the drive and support slots.

8. SPECIFICATIONS

Brand: BLACK+DECKER

Model Name: TO4314SSD

Color: Stainless Steel

Product Dimensions: 17.52"D x 15.94"W x 13.9"H

Item Weight: 3.2 ounces

Special Feature: Rotisserie Feature

Control Type: Knob

Door Style: Dropdown Door

Power Source: Corded Electric

Temperature Range: Up to 450°F

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official BLACK+DECKER website.

Additional support and a comprehensive user guide in PDF format can be found via the following link [User Guide \(PDF\)](#)

Protection plans are also available for purchase to extend coverage beyond the standard warranty period.

