

KitchenAid KEK1522OB

KitchenAid Pro Line Electric Kettle Instruction Manual

Model: KEK1522OB | Brand: KitchenAid

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your KitchenAid Pro Line Electric Kettle. Designed for precision and convenience, this kettle allows you to quietly boil water to your desired temperature for various beverages and instant meals. Please read all instructions carefully before first use and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PARTS AND FEATURES



Figure 3.1: Front view of the KitchenAid Pro Line Electric Kettle in Onyx Black, showcasing its sleek design and integrated temperature gauge.



Figure 3.2: Angled view of the kettle, highlighting the handle and base with temperature selection dial.



Figure 3.3: Top-down view of the kettle, showing the lid and its release mechanism.



Figure 3.4: Close-up of the water level window, indicating measurements for accurate filling up to 1.5 liters (52 oz).



Figure 3.5: The temperature selection dial located on the kettle's power base, allowing precise temperature control from 50°C to 100°C (122°F to 212°F).



Figure 3.6: The analog temperature gauge on the kettle body, providing a real-time display of the water temperature.



Figure 3.7: The angled spout designed for controlled and precise pouring.



Figure 3.8: The large, soft-grip ergonomic handle for comfortable and secure handling.



Figure 3.9: The convenient lid release button located on the handle for easy filling.

Key Features:

- **52 oz. (1.5 Liters) Capacity:** Ideal for multiple servings.
- **Cordless Kettle with Removable Power Base:** Allows for easy transfer and serving.
- **Dual-Wall Stainless-Steel Construction:** Keeps heat in while the outside remains cool to the touch.
- **Water Level Window Display:** Ensures quick and accurate filling.
- **Adjustable Temperature Settings:** From 122°F (50°C) to 212°F (100°C) for precise heating.
- **Temperature Gauge:** Reads precise temperature even when the kettle is removed from the base.
- **Removable Scale Filter:** For easy cleaning and maintenance.

4. SETUP

Unpacking:

- Carefully remove the kettle and all accessories from the packaging.
- Remove any packing materials, stickers, or labels.

Before First Use:

1. Wash the interior of the kettle and the removable scale filter with warm, soapy water. Rinse thoroughly.
2. Wipe the exterior of the kettle and the power base with a damp cloth. Do not immerse the power base in water.

3. Fill the kettle with fresh water to the maximum fill line (1.5 liters).
4. Place the kettle securely on the power base.
5. Plug the power cord into a grounded electrical outlet.
6. Set the temperature dial to 100°C (212°F) and allow the water to boil.
7. Discard the boiled water. Repeat this process 2-3 times to ensure the kettle is clean and free of any manufacturing residues or initial odors.

5. OPERATING INSTRUCTIONS

Filling the Kettle:

1. Ensure the kettle is unplugged from the power outlet.
2. Press the lid release button on the handle to open the lid.
3. Fill the kettle with fresh water, observing the water level window. Do not fill below the minimum or above the maximum (1.5L / 52 oz) fill lines.
4. Close the lid securely.

Setting Temperature and Boiling:

1. Place the filled kettle onto the power base.
2. Plug the power cord into a grounded electrical outlet.
3. Rotate the temperature selection dial on the power base to your desired temperature setting (from 50°C to 100°C or 122°F to 212°F). Illuminated white LED lights will indicate your selection.
4. The kettle will begin heating the water. The analog temperature gauge on the kettle body will show the current water temperature.
5. Once the selected temperature is reached, the kettle will automatically shut off and emit a chime sound.
6. Carefully lift the cordless kettle from the base to pour. The exterior remains cool to the touch due to the dual-wall construction.

Recommended Temperatures:

- **Green Tea:** 70-80°C (158-176°F)
- **White Tea:** 70-80°C (158-176°F)
- **Oolong Tea:** 80-90°C (176-194°F)
- **Black Tea:** 95-100°C (203-212°F)
- **Herbal Tea:** 100°C (212°F)
- **Instant Coffee/Soup/Oatmeal:** 100°C (212°F)

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your electric kettle.

Daily Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Hand wash the interior of the kettle and the removable scale filter with warm, soapy water. Rinse thoroughly.
- Ensure all parts are dry before storing or next use.

Descaling (Removing Mineral Deposits):

Over time, mineral deposits (limescale) may build up inside the kettle, especially in areas with hard water. This can affect performance and taste. Descale your kettle regularly, depending on water hardness and frequency of use.

1. Fill the kettle with a solution of equal parts white vinegar and water, or use a commercial descaling solution designed for kettles.
2. Allow the solution to soak in the kettle for at least 30 minutes, or longer for heavy buildup. Do not boil the descaling solution.
3. Empty the kettle and rinse the interior thoroughly several times with fresh water.
4. If a vinegar odor persists, boil a kettle full of fresh water and discard it. Repeat if necessary.

7. TROUBLESHOOTING

If you experience issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat water.	Kettle not properly seated on base; Power cord not plugged in; No power at outlet; Kettle has boiled dry.	Ensure kettle is correctly placed on the power base. Check if the power cord is securely plugged into a working outlet. Reset circuit breaker if necessary. If boiled dry, allow kettle to cool before refilling.
Water takes too long to boil.	Mineral deposits (limescale) inside kettle.	Descale the kettle as per the 'Maintenance and Cleaning' section.
Kettle shuts off before boiling.	Temperature setting is too low; Mineral deposits.	Adjust the temperature dial to a higher setting (e.g., 100°C/212°F for full boil). Descale the kettle.
Lid mechanism is stiff or broken.	Wear and tear; Debris obstructing mechanism.	Ensure no debris is blocking the lid mechanism. If the issue persists, contact KitchenAid Customer Service for assistance.
Unusual odor on first use.	New product residue.	This is normal. Follow the 'Before First Use' instructions to boil and discard water several times. The odor should dissipate.

8. SPECIFICATIONS

Feature	Detail
Model Name	KEK1522OB
Brand	KitchenAid
Color	Onyx Black
Capacity	52 oz. (1.5 Liters)
Product Dimensions	9"L x 10.5"W x 8.8"H

Feature	Detail
Item Weight	6 Pounds
Special Feature	Anti Scale Mesh Filter, Variable Temperature Control
Finish Type	Glossy
Included Components	Kettle, Power Base
Product Care Instructions	Hand wash, Wipe clean
Country/Region of Origin	China
UPC	883049286341

9. WARRANTY AND SUPPORT

Warranty Information:



The KitchenAid Pro Line Electric Kettle comes with a **5-year unlimited warranty**. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.





Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact KitchenAid Customer Service. Refer to the official KitchenAid website or your product packaging for the most current contact information (phone numbers, email, or online support portal).

When contacting support, please have your product model number (KEK1522OB) and date of purchase readily available.

Related Documents - KEK1522OB

	<p>KitchenAid KEK1025 Precision Kettle Quick Start Guide</p> <p>Get started quickly with your KitchenAid KEK1025 Precision Kettle. This guide provides step-by-step instructions, usage tips, and an altitude boiling point reference chart for optimal brewing.</p>
	<p>KitchenAid KEK1701 Electric Kettle Product Guide</p> <p>A comprehensive product guide for the KitchenAid KEK1701 Electric Kettle, covering parts and features, safety precautions, product usage, electrical requirements, care and cleaning, descaling, and warranty information.</p>

	<p>KitchenAid 5KEK1701A Water Kettle Owner's Manual and Safety Guide</p> <p>This owner's manual provides essential safety instructions, operating procedures, care and cleaning guidelines, and customer service information for the KitchenAid 5KEK1701A Water Kettle.</p>
	<p>KitchenAid 730-0953A Freestanding Outdoor Grill Owner's Manual & Installation Guide</p> <p>Comprehensive owner's manual and installation guide for the KitchenAid 730-0953A freestanding outdoor grill, covering safety, assembly, usage, care, and troubleshooting.</p>
	<p>KitchenAid 720-0953A Freestanding Outdoor Grill Owner's Manual</p> <p>Official owner's manual, installation guide, and use & care instructions for the KitchenAid 720-0953A freestanding outdoor grill. Covers safety, assembly, operation, maintenance, and troubleshooting.</p>
	<p>KitchenAid 7 & 9 Speed Hand Mixers: Instructions, Recipes, and Warranty</p> <p>Comprehensive guide for KitchenAid 7 and 9 Speed Hand Mixers, including setup, operation, safety, troubleshooting, care, and a collection of recipes. Features warranty information and product details.</p>

[\[pdf\]](#) User Manual Owner's Manual Instructions Guide Accessories

Owners ManualShop Kitchenaid® Pro Line® Series Electric Kettle KEK1522CA Waterford

AppliancesKEK1522CA owners manual enwpcstorage nyc3 cdn digitaloceanspaces live documents en

ManualOwners AppliancesShop KEK1522MS K W Appliance PlusKEK1522CA enKEK1522MS

PlusMagasinez Bouilloire électrique série Meubles JacobKEK1522CA enKEK1522CA frwpcstorage fr

JacobMagasinez KEK1522OB frKEK1522OB JacobShop Unionville ApplianceKEK1522CA

ApplianceMagasinez KEK1522FP enKEK1522FP frKEK1522MS frKEK1522FP ||| ||| KEK1522

INSTRUCTIONS INSTRUCTIONS INSTRUCCIONES W WELCOME TO THE WORLD OF KITCHENAID.

We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance ||| KEK1522 INSTRUCTIONS INSTRUCTIONS

INSTRUCCIONES W WELCOME TO THE WORLD OF KITCHENAID. We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance ||| KEK1522 INSTRUCTIONS INSTRUCTIONS INSTRUCCIONES W WELCOME TO

THE WORLD OF KITCHENAID. We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance ||| KEK1522

INSTRUCTIONS INSTRUCTIONS INSTRUCCIONES W WELCOME TO THE WORLD OF KITCHENAID.

We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance ||| KEK1522 INSTRUCTIONS INSTRUCTIONS

INSTRUCCIONES W WELCOME TO THE WORLD OF KITCHENAID. We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance ||| KEK1522 INSTRUCTIONS INSTRUCTIONS INSTRUCCIONES W WELCOME TO

 
THE WORLD OF KITCHENAID. We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance ||| KEK1522

INSTRUCTIONS INSTRUCTIONS INSTRUCCIONES W WELCOME TO THE WORLD OF KITCHENAID.

We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance

KEK1522 INSTRUCTIONS INSTRUCTIONS INSTRUCCIONES W WELCOME TO THE WORLD OF KITCHENAID. We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance, keep this guide handy. It will empower you with the best...

lang:en score:31 filesize: 2.61 M page_count: 37 document date: 2024-02-04

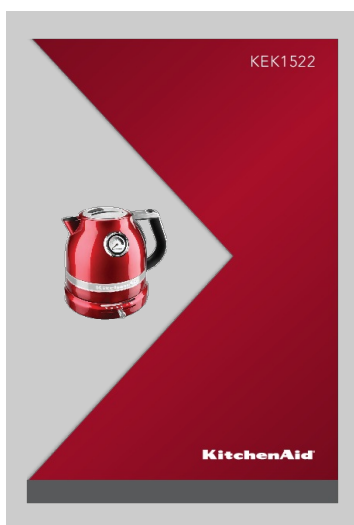

[\[pdf\]](#) User Manual Owner's Manual Instructions Guide Accessories

Owner s manual enKitchenAid Electric Kettle KEK1522OB Appliance Canada275372 enmedia datatail

docs 275372 en Manual KitchenAid Pro Line 1 5 qt Tea KitchenAid® kad2389 KEK1522Owner

KEK1522OBKitchenAid Canadaowner manualsecure img1 ag wfcdn dm document 17a5a6ae 7f5e 42e1

b932 555bb29479ec owner manualmedia |||

KEK1522 Welcome to the world of KitchenAid. We re committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance, keep this guide handy. It will empower you with the best way to use and care for your product. You...

lang:en score:26 filesize: 3.64 M page_count: 32 document date: 2013-03-25



[\[pdf\]](#) Specifications

Specifications KitchenAid Pro Line 1 5 qt Electric Tea Kettle KitchenAid® kad2389 KEK1522KitchenAid

KEK1522OBspecificationssecure img1 ag wfcdn dm document 413774b0 1944 4ac4 a3ac

63044c983547 specifications |||

 
KEK1522 electric kettle Exceptional Performance - Temperature Control -

Temperature Gauge - Water L ... del KEK1522CA COLOR Candy Apple Red UPC

883049 28635 8 KEK1522FP Frosted Pearl 883049 28637 2 **KEK1522OB** Onyx Black

883049 28634 1 KEK1522SR Sugar Pearl Silver 883049 28638 9 Enduring Desig...

lang:en **score:23** filesize: 647.94 K page_count: 2 document date: 2013-06-05

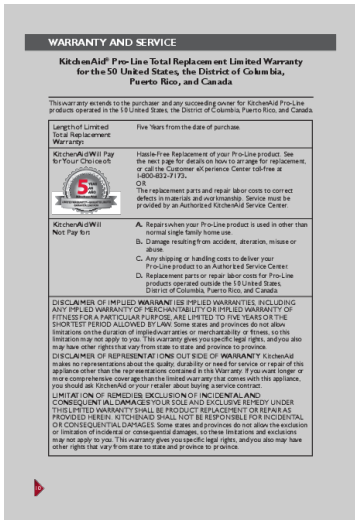


[\[pdf\]](#) Warranty

Warranty Details enKitchenAid Electric Kettle KEK1522OB Appliance Canada275372 enmedia datatall

docs warranty 275372 en |||

Warranty and service KitchenAid Pro-Line Total Replacement Limited Warranty for the 50 United States, the District of Columbia, Puerto Rico, and Canada This warranty extends to the purchaser and any succeeding owner for KitchenAid Pro-Line products operated in the 50 United States, the District of ...

 lang:en **score:16** filesize: 631.81 K page_count: 7 document date: 2013-08-05

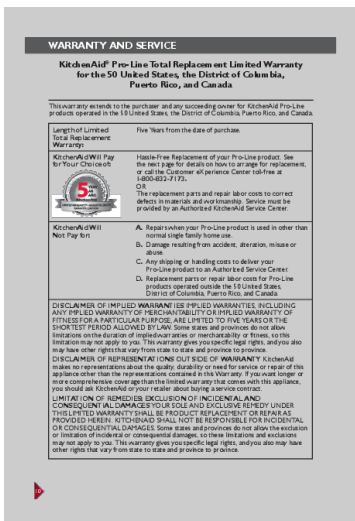

[\[pdf\]](#) Warranty

Warranty A complete description of your warranty coverage and contact information for service support

Applies to models kek1522fp kek1522ms kek1522ob kek1522sr kek1522ca memillqxjvpi images

webfronts cache |||

Warranty and service KitchenAid Pro-Line Total Replacement Limited Warranty for the 50 United States, the District of Columbia, Puerto Rico, and Canada This warranty extends to the purchaser and any succeeding owner for KitchenAid Pro-Line products operated in the 50 United States, the District of ...

lang:en **score:15** filesize: 506.89 K page_count: 7 document date: 2018-10-31