

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid 1.5 L Pro Line Series Electric Kettle User Manual

KitchenAid KEK1522FP

KitchenAid 1.5 L Pro Line Series Electric Kettle

Model: KEK1522FP

User Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your KitchenAid 1.5 L Pro Line Series Electric Kettle. Please read all instructions carefully before first use and retain for future reference.

The KitchenAid Pro Line Electric Kettle is designed to quickly and quietly boil water to precise temperatures, ideal for various beverages and instant foods. Its robust construction and thoughtful features ensure convenience and safety in your kitchen.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.

PRODUCT FEATURES AND COMPONENTS

The KitchenAid Pro Line Electric Kettle is designed with user convenience and safety in mind. Key components include:

- **1.5 Liter Capacity:** Generous capacity for multiple servings.
- **Dual-Wall Stainless Steel Construction:** Keeps water hot inside while the exterior remains cool to the touch for safety.
- **Adjustable Temperature Control:** Select precise temperatures from 122°F (50°C) to 212°F (100°C) for optimal brewing.
- **Water Level Window:** Provides clear visibility for accurate filling.
- **Temperature Gauge:** Displays the current water temperature, even when the kettle is off the base.
- **Soft-Grip Handle:** Ergonomically designed for comfortable and secure pouring.
- **Cordless Design with Removable Power Base:** Allows for easy lifting and pouring, with convenient cord storage under the base.
- **Removable Scale Filter:** Helps prevent mineral buildup and ensures clean water.
- **Illuminated LED Lights:** Indicate selected temperature settings.
- **Automatic Shut-Off:** For added safety and energy efficiency.



Front view of the KitchenAid 1.5 L Pro Line Electric Kettle in Frosted Pearl White, showcasing the temperature gauge and base temperature selector.



The KitchenAid Electric Kettle positioned on a kitchen counter, ready for use with tea and pastries, highlighting its sleek design in a home setting.



Detailed view of the clear water level window, allowing for precise filling and monitoring of water volume.



A close-up of the kettle's power base, showing the temperature selection dial with settings from 50°C to 100°C.



Detailed view of the analog temperature gauge on the kettle's body, providing real-time temperature readings.



A close-up of the kettle's soft-grip handle and the conveniently located lid release button for easy access.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for storage or future transport.
2. **First Use Cleaning:** Before first use, fill the kettle with fresh water to the MAX fill line. Boil the water, then discard it. Repeat this process at least two times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable surface away from the edge of the counter. Ensure the cord is not dangling where it can be pulled or tripped over.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The cord can be wrapped neatly under the base for hidden storage.

OPERATING INSTRUCTIONS

1. **Filling the Kettle:** Press the lid release button to open the lid. Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN line or above the MAX line (1.5 liters / 52 oz). Close the lid securely.
2. **Placing on Base:** Place the kettle firmly onto the power base.
3. **Selecting Temperature:** Use the temperature selection dial on the base to choose your desired water temperature. The range is from 122°F (50°C) to 212°F (100°C). Illuminated white LED lights will indicate your selection.

- 4. **Starting Boil:** Press the ON/OFF button. The kettle will begin heating the water to the selected temperature. The temperature gauge will show the water's current temperature.
- 5. **Automatic Shut-Off:** The kettle will automatically turn off once the selected temperature is reached. A chime will sound to indicate completion.
- 6. **Pouring:** Carefully lift the kettle from the base and pour the hot water. The soft-grip handle and angled spout are designed for controlled pouring.
- 7. **Reheating:** If the kettle has cooled, simply place it back on the base and press the ON/OFF button to reheat to the last selected temperature, or adjust the temperature as needed.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your electric kettle.

- **Exterior Cleaning:** Unplug the kettle and allow it to cool completely. Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance.
 - a. Fill the kettle with 1 part white vinegar and 2 parts water.
 - b. Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy buildup.
 - c. Empty the kettle and rinse thoroughly with fresh water.
 - d. For stubborn deposits, gently scrub the interior with a non-abrasive brush or sponge.
 - e. Repeat if necessary.
- **Removable Scale Filter:** The filter located inside the spout can be removed for cleaning. Rinse it under running water and gently brush away any deposits. Ensure it is securely re-inserted before use.
- **Storage:** Ensure the kettle is clean and dry before storing. The cord can be wrapped under the power base for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power base not connected properly; no water in kettle; kettle not properly seated on base.	Ensure power cord is securely plugged into a working outlet. Check that the kettle is correctly placed on the power base. Add water to the kettle.
Water takes too long to boil.	Limescale buildup; too much water.	Descale the kettle as per the "Maintenance and Cleaning" section. Do not fill above the MAX line.
Kettle turns off before boiling.	Temperature setting is too low; limescale buildup.	Adjust the temperature dial to a higher setting (e.g., 100°C/212°F for full boil). Descale the kettle.
Lid does not open/close smoothly.	Debris or mineral buildup around the hinge.	Clean around the lid mechanism. If the issue persists, contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	KitchenAid
Model Name	KEK1522FP
Color	Frosted Pearl White
Capacity	1.5 Liters (52 oz.)
Special Feature	Automatic Shut-Off, Adjustable Temperature Control
Finish Type	Powder Coated
Product Dimensions	10.5"L x 10.5"W x 8.8"H
Item Weight	5.99 pounds
Country/Region of Origin	China
UPC	883049286372

WARRANTY AND SUPPORT

The KitchenAid 1.5 L Pro Line Series Electric Kettle comes with a **5-year unlimited warranty**. This warranty covers defects in materials and workmanship under normal household use.

For warranty service, technical support, or to inquire about replacement parts, please contact KitchenAid Customer Service. Have your model number (KEK1522FP) and proof of purchase readily available.

You can find more information and contact details on the official KitchenAid website www.kitchenaid.com

Additional protection plans may be available for purchase from various retailers. Please refer to the specific terms and conditions of any extended warranty plans.