

[Manuals.plus](#) /

> [X Rocker](#) /

> X Rocker Surge Video Gaming Floor Rocker Chair Instruction Manual

## X Rocker Surge

# X Rocker Surge Video Gaming Floor Rocker Chair Instruction Manual

Model: Surge (5172601)

## 1. INTRODUCTION

Thank you for choosing the X Rocker Surge Video Gaming Floor Rocker Chair. This manual provides essential information for the safe and efficient use of your new gaming chair. Designed for an immersive gaming experience, the Surge chair combines comfort with advanced audio features and a space-saving foldable design.

## 2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Keep this manual for future reference.

- Follow standard safety precautions for foldable chairs, including proper assembly.
- Adhere to weight limits to prevent damage or injury.
- Ensure stability during use to avoid tipping.
- Keep all cables and wires organized to prevent tripping hazards.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Chair
- Accessory box (containing tools and small parts)

## 4. ASSEMBLY AND SETUP

The X Rocker Surge chair is designed for quick and easy assembly, typically taking approximately 5 minutes. No complex tools are required beyond those provided in the accessory box.

#### 4.1. Initial Unpacking

Carefully remove all components from the packaging. Ensure no parts are damaged during this process.

#### 4.2. Attaching the Swivel Base (if applicable)

If your model includes a swivel base, attach it to the main chair body using the provided screws and wrench. Ensure all connections are secure.

#### 4.3. Unfolding the Chair

The chair arrives in a folded state for compact shipping. Gently unfold the chair until it locks into the desired upright position. Ensure the backrest is securely engaged.



Image: The X Rocker Surge Gaming Chair in its fully unfolded, ready-to-use position, showcasing its ergonomic design.

## 5. OPERATING INSTRUCTIONS

### 5.1. Audio Connectivity

The X Rocker Surge features a built-in sound system for an immersive audio experience. It supports both wireless Bluetooth and wired connections.

- **Wireless Bluetooth:** Power on the chair's audio system and activate Bluetooth pairing mode. Search for 'X Rocker Surge' on your gaming console (PS5, Xbox Series X/S, Xbox One, PlayStation 4, Nintendo Switch), TV, PC, or smart device and pair.

- **Wired Connection:** Use the provided audio cables to connect the chair to your device's audio output. An additional digital audio transmitter may be required depending on your TV outputs (sold separately).



Image: Close-up of the X Rocker Surge control panel, showing input ports and volume controls for audio management.

## 5.2. Adjusting Recline

The chair offers rocking and reclining features. Adjust your position by shifting your weight to find the most comfortable angle for extended use.

## 6. FEATURES

### 6.1. Built-in Sound System

Experience high-quality surround sound with 2 headrest-mounted speakers and a powerful backrest subwoofer. This system delivers immersive audio with minimal latency.



Image: Detail of the built-in speakers located in the headrest of the X Rocker Surge chair, designed for immersive audio.

### 6.2. Premium Comfort and Durability

Crafted with durable, sleek, and extra-padded vegan leather, the seat and headrest are designed for comfort during long gaming sessions or movie marathons. The construction ensures lasting support.

### 6.3. Foldable and Compact Design

The chair easily folds down for convenient storage when not in use, making it ideal for smaller spaces like bedrooms, dorms, or apartments. Its lightweight and portable design allows for easy relocation.



Image: The X Rocker Surge Gaming Chair shown in its folded configuration, highlighting its compact design for easy storage.

### 6.4. Multi-Platform Compatibility

Connects to various gaming consoles, TVs, PCs, and smart devices via Bluetooth or wired options.

## 7. MAINTENANCE

To maintain the quality and longevity of your X Rocker Surge chair:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, fold the chair and store it in a dry place away from direct sunlight or extreme temperatures.

## 8. TROUBLESHOOTING

If you encounter issues with your X Rocker Surge chair, consider the following:

- **No Audio:** Ensure all wired connections are secure and correctly plugged into the audio output of your device and the chair's input panel. For Bluetooth, confirm the chair is paired and selected as the audio output on your device. Check the volume levels on both the chair and your connected device.
- **Chair Not Folding/Unfolding:** Check for any obstructions in the folding mechanism. Ensure the backrest is fully extended or collapsed to engage the locking mechanism.
- **Stability Issues:** Verify that the chair is placed on a flat, stable surface. If a swivel base is used, ensure it is correctly and securely attached.

## 9. SPECIFICATIONS

Feature	Detail
Brand	X Rocker
Model Name	Surge
Model Number	5172601
Color	Black With Red
Material	Textile, Faux Leather, Foam (Fill)
Product Dimensions (D x W x H)	36.81"D x 32.28"W x 20.89"H
Item Weight	36.16 Pounds
Additional Features	Foldable, Wireless (Bluetooth)
Assembly Required	No (Estimated time: 5 minutes)
Recommended Uses	Gaming, Reading, Relaxing

## 10. OFFICIAL PRODUCT VIDEO

Watch this video for an overview of X Rocker gaming furniture, showcasing various products and features.

Your browser does not support the video tag.

Video: X Rocker 2021 - A brief overview of X Rocker's gaming furniture line, including various chair models and their features.

## 11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included in your product packaging or visit the official X Rocker website. Keep your proof of purchase for any warranty claims.