

## Candy CCV 6525 X

# Candy CCV 6525 X Electric Cooker User Manual

Model: CCV 6525 X

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Candy CCV 6525 X electric cooker. Please read these instructions carefully before using the appliance and keep them for future reference.



Image: Front view of the Candy CCV 6525 X electric cooker. This freestanding appliance features a sleek stainless steel casing, a glass-ceramic hob with four cooking zones, and a large oven compartment with a transparent door. The control panel is located above the oven door, featuring rotary knobs and a digital display.

## SAFETY INSTRUCTIONS

- Electrical Safety:** Ensure the appliance is properly earthed. Do not use adapters or extension cords. Disconnect from power before cleaning or maintenance.
- Child Safety:** Keep children away from the appliance during operation. The surfaces can become very hot.

- **General Use:** Do not store flammable materials in or near the oven. Always use oven mitts when handling hot dishes.
- **Ventilation:** Ensure adequate ventilation around the appliance.

## SETUP AND INSTALLATION

---

### Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Report any damage to your retailer immediately.

### Positioning

Place the cooker on a flat, stable surface. Ensure there is sufficient clearance from adjacent furniture or walls as per local regulations. The appliance dimensions are 60 x 60 x 85 cm (Width x Depth x Height).

### Electrical Connection

The electrical connection must be carried out by a qualified electrician in accordance with local wiring regulations. The appliance requires a dedicated circuit.

## OPERATING INSTRUCTIONS

---

### Using the Glass-Ceramic Hob

The hob features multiple cooking zones. To activate a zone, turn the corresponding control knob to the desired heat setting. The hob surface will heat up quickly. Always use flat-bottomed cookware that matches the size of the cooking zone.

### Using the Oven

The oven has a capacity of 54 liters. To operate the oven, select the desired cooking function and temperature using the control knobs. The digital display will show the selected settings. Allow the oven to preheat to the desired temperature before placing food inside.

#### Oven Functions:

- **Conventional Cooking:** Heat from top and bottom elements.
- **Grill:** For grilling and toasting.
- **Fan Assisted Cooking:** Even heat distribution for multi-level cooking.
- **Defrost:** Gentle defrosting without heat.

#### Timer Function

The integrated timer can be set to alert you when cooking time is complete. Refer to the digital display and control panel for setting the timer.

## MAINTENANCE AND CLEANING

---

### Cleaning the Glass-Ceramic Hob

Allow the hob to cool completely before cleaning. Use a specialized glass-ceramic cleaner and a soft cloth. Do not use abrasive cleaners or scourers.

### Cleaning the Oven

The oven features an A-Class Clean enamel interior for easy maintenance. Wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, use a non-abrasive oven cleaner. Remove oven racks and accessories for separate cleaning.

## Cleaning the Exterior

Clean the stainless steel exterior with a soft cloth and a mild, non-abrasive cleaner specifically designed for stainless steel. Avoid harsh chemicals.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Appliance not turning on	No power supply; tripped circuit breaker; faulty connection.	Check power plug and wall socket. Reset circuit breaker. Contact a qualified technician if problem persists.
Hob not heating	Incorrect knob setting; faulty heating element.	Ensure knob is set correctly. If still not heating, contact service.
Oven not heating	Incorrect function/temperature setting; oven door not closed properly; faulty heating element.	Verify settings. Ensure door is fully closed. Contact service if issue continues.
Uneven cooking in oven	Improper rack position; overloaded oven; faulty fan.	Adjust rack position. Do not overload. Contact service if fan is suspected.

## SPECIFICATIONS

---

**Brand:** Candy

**Model:** CCV 6525 X

**Type:** Freestanding Electric Cooker

**Dimensions (W x D x H):** 60 x 60 x 85 cm

**Weight:** 43 kg

**Oven Capacity:** 54 liters

**Energy Efficiency Class:** A

**Hob Type:** Glass-Ceramic

**Casing Material:** Stainless Steel

## WARRANTY AND SUPPORT

---

Your Candy CCV 6525 X electric cooker comes with a manufacturer's warranty. For detailed information regarding warranty terms and conditions, please refer to the warranty card included with your appliance or visit the official Candy website.

For technical assistance, spare parts, or to schedule a service appointment, please contact Candy customer support. Have your model number (CCV 6525 X) and serial number ready when contacting support.

For information on returns and refunds, please consult your retailer's policy or visit the relevant help page, such as [Amazon.it Returns Policy](#).

## Documents - Candy – CCV 6525 X



[\[pdf\]](#)

Karton Porzellan standherde und mikrowellen 2014 Billiger de CCV 6525 X STANDHERDE PERFEKT AUSGESTATTET SCHNELL UND SPARSAM Abmessung candy hoover F S A u fl 2 0 4 Katalogansicht img billiger dynimg lueW41gyTr5wU FUmojsurt4H9rychjeBa9LTdXG2DASKLJ9pRaRnqkZJoiH5U9G1 fs7KgsmKZmrBIKXYf7Ds ||| STANDHERDE UND MIKROWELLEN 2014 KOCHEN MIT STIL Das neue Candy Standherde-Sortiment erfüllt in tech ... DHERDE ENERGIE- UND PLATZSPARENDE CANDY.DE 4 STANDHERDE PERFEKT AUSGESTATTET, SCHNELL UND SPARSAM **CCV 6525 X** Abmessung H x B x T 85 x 60 x 60 cm Energieeffizienzklasse A Elektro-Standherd Farbe Ed... lang:de score:28 filesize: 4.19 M page\_count: 20 document date: 2014-04-14