

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Honeywell](#) /

› Honeywell 1106C Wheel Cart for 1106 File Chest Instruction Manual

Honeywell 1106C

Honeywell 1106C Wheel Cart Instruction Manual

MODEL: 1106C

1. Introduction

This manual provides essential instructions for the assembly, operation, and maintenance of your Honeywell 1106C Wheel Cart. This cart is specifically designed to provide effortless mobility for the Honeywell 1106 File Chest, ensuring secure and stable transport. Please read this manual thoroughly before use to ensure proper setup and safe operation.



Image 1.1: The Honeywell 1106C Wheel Cart, fully assembled and ready for use.

2. Safety Information

Adhere to the following safety guidelines to prevent injury or damage to the product:

- Always ensure the file chest is securely placed and centered on the cart before moving.
- Do not overload the cart beyond its specified weight capacity.
- Exercise caution when moving the cart over uneven surfaces or thresholds.
- Keep hands and feet clear of the wheels during movement.

- Store the cart on a flat, stable surface when not in use.

3. Package Contents

Verify that all components are present and undamaged upon opening the package:

- Cart Frame (1 unit)
- Caster Wheels (4 units)
- Fasteners (screws/bolts, quantity as required for assembly)
- Instruction Manual (this document)

4. Assembly Instructions

The Honeywell 1106C Wheel Cart is designed for fast and easy setup. Follow these steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Identify Frame:** Locate the main cart frame. It consists of interconnected metal bars designed to support the file chest.

EFFORTLESS HANDLING WITH A LIGHTWEIGHT BUILD

Designed for quick, smooth mobility without the hassle.




SMOOTH ROLLING, EVERY TIME


High-quality wheels for effortless, quiet movement on any surface.


Image 4.1: The main frame structure of the Honeywell 1106C Wheel Cart.

3. **Attach Caster Wheels:** For each of the four corners of the cart frame, align a caster wheel with the pre-drilled holes. Secure each wheel using the provided fasteners. Ensure all fasteners are tightened firmly to prevent wobbling.



OTHER BRANDS
This is a Simple Wheel Cart.







Honeywell
**PORTABLE WHEEL
CART FOR 1106
FILE CHEST.**

**WHY US OVER
OTHER BRANDS?**

- Fits Honeywell 1106 File Chest
- Ease of transport
- Lightweight & portable
- Durable construction
- Minimal assembly



**OTHER
BRANDS**



**HONEYWELL
BRANDS**

	×	✓
	✓	✓
	×	✓
	×	✓
	×	✓

Image 4.2: Detail of a caster wheel and its attachment point on the cart frame.

4. **Verify Stability:** Once all wheels are attached, gently push down on the cart frame at various points to ensure it is stable and all wheels rotate freely.

5. Operating Instructions

To use your Honeywell 1106C Wheel Cart with the 1106 File Chest:

1. **Position the Cart:** Place the assembled wheel cart on a flat, stable surface where you intend to load the file chest.
2. **Place File Chest:** Carefully lift the Honeywell 1106 File Chest and center it onto the wheel cart. Ensure the chest sits firmly within the cart's frame, with its weight evenly distributed.

PERFECT FIT FOR 1106 FILE CHEST

Designed for secure and stable transport.



FAST AND EASY SETUP

Assemble in just a few minutes without hassle.

Image 5.1: The Honeywell 1106 File Chest securely positioned on the wheel cart.

- 3. Move the Cart:** Gently push or pull the cart to move the file chest. The smooth-rolling caster wheels are designed for effortless movement across various surfaces.
- 4. Secure Placement:** When the cart reaches its desired location, ensure it is on a level surface to prevent unintended movement.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your wheel cart:

- **Cleaning:** Wipe the cart frame and wheels with a damp cloth to remove dust and debris. Avoid abrasive cleaners.
- **Wheel Inspection:** Periodically check the caster wheels for any signs of wear, damage, or accumulation of hair/fibers that might impede smooth rolling. Clean or replace as necessary.
- **Fastener Check:** Ensure all fasteners remain tight. Re-tighten if any looseness is detected.

7. Troubleshooting

Refer to the table below for common issues and their solutions:

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Wheels do not roll smoothly	Debris in wheels, loose fasteners, damaged wheel	Clean wheels, tighten fasteners, replace damaged wheel
Cart feels unstable	Uneven load, loose fasteners, damaged frame	Ensure even load, tighten fasteners, inspect frame for damage
Difficulty moving cart	Overloaded, rough surface, wheel obstruction	Reduce load, move on smoother surface, clear wheel obstructions

8. Specifications

Key specifications for the Honeywell 1106C Wheel Cart:

- **Brand:** Honeywell
- **Model:** 1106C
- **Color:** Black
- **Product Dimensions (Approximate):**
 - Width: 16.9 inches (42.9 cm)
 - Depth: 13 inches (33.0 cm)
 - Height: 7.5 inches (19.1 cm)
- **Product Weight:** 3.44 lbs (1.56 kg)
- **Compatibility:** Designed for Honeywell 1106 File Chest

EFFORTLESS TRANSPORT MADE SIMPLE

Designed for smooth mobility, durable construction, and hassle-free movement wherever you need it.



Image 8.1: Visual representation of the Honeywell 1106C Wheel Cart's approximate width and depth.

9. Warranty and Support

For warranty information or technical support, please refer to the official Honeywell product website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.