

Manuals.plus /

› INLAND /

› Inland 2.4GHz Wireless Optical Mouse 07439 User Manual

INLAND 07439

Inland 2.4GHz Wireless Optical Mouse 07439 User Manual

Model: 07439

INTRODUCTION

This manual provides instructions for the Inland 2.4GHz Wireless Optical Mouse, model 07439. This wireless mouse offers a reliable 2.4GHz connection up to 10 meters, providing a clutter-free desktop experience. Its optical tracking and adjustable DPI settings ensure precise control for various computing tasks.

PACKAGE CONTENTS

- Inland 2.4GHz Wireless Optical Mouse
- Mini USB Receiver
- User Manual

Note: Batteries are not included and must be purchased separately.

SETUP

1. Install Batteries:

Locate the battery compartment on the underside of the mouse. Open the cover and insert two (2) AAA alkaline batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.



Image: Side view of the Inland wireless mouse, illustrating the general area of the underside where the battery compartment is located. The mouse is blue with a black base.

2. **Connect USB Receiver:**

The mini USB receiver is typically stored inside the battery compartment or packaged alongside the mouse. Remove the receiver. Plug the mini USB receiver into an available USB port on your computer. Your operating system should automatically detect and install the necessary drivers.



Image: Top view of the Inland wireless mouse, highlighting the scroll wheel and the DPI adjustment button. The mouse is dark blue/black.

3. **Power On:**

Locate the power on/off switch on the underside of the mouse. Slide the switch to the "ON" position. The mouse is now ready for use.

OPERATING INSTRUCTIONS

- **Basic Functionality:**

The mouse functions as a standard two-button optical mouse with a scroll wheel. Move the mouse to control the cursor on your screen. Use the left button for primary clicks and the right button for secondary clicks (context menus).

- **DPI Adjustment:**

The mouse features a DPI change button, typically located near the scroll wheel. Press this button to cycle through different DPI (Dots Per Inch) sensitivity settings, usually between 800 DPI and 1600 DPI.

This allows you to adjust cursor speed to your preference.

- **Power On/Off:**

To conserve battery life, slide the power switch on the underside of the mouse to the "OFF" position when not in use for extended periods, or when transporting the mouse.

MAINTENANCE

- **Battery Replacement:**

When the mouse performance degrades or stops responding, it is likely time to replace the batteries. Follow the steps in the "Install Batteries" section to replace the two (2) AAA alkaline batteries. Dispose of old batteries responsibly.

- **Cleaning:**

To clean the mouse, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid getting liquids inside the mouse. Do not use harsh chemicals or abrasive materials.

TROUBLESHOOTING

Problem	Solution
Mouse not responding	<ul style="list-style-type: none">◦ Ensure the mouse is powered "ON".◦ Check battery levels and replace if necessary.◦ Ensure the USB receiver is securely plugged into a working USB port.◦ Try plugging the USB receiver into a different USB port.◦ Restart your computer.
Erratic cursor movement	<ul style="list-style-type: none">◦ Clean the optical sensor on the underside of the mouse.◦ Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent).◦ Check for interference from other wireless devices.
Short battery life	<ul style="list-style-type: none">◦ Ensure you are using high-quality alkaline batteries.◦ Turn off the mouse using the power switch when not in use.

SPECIFICATIONS

- **Model:** 07439
- **Brand:** INLAND
- **Connectivity:** 2.4GHz Wireless (RF)
- **Movement Detection:** Optical
- **DPI Settings:** 800 DPI - 1600 DPI (Adjustable)
- **Buttons:** 2 (Left, Right) + Scroll Wheel + DPI Button
- **Wireless Range:** Up to 10 meters (33 feet)
- **Battery Type:** 2 x AAA Alkaline Batteries (not included)

- **Estimated Battery Life:** Up to 6 months
- **Compatible Devices:** Personal Computer
- **Hand Orientation:** Ambidextrous
- **Item Weight:** 9.07 g

WARRANTY AND SUPPORT

This Inland 2.4GHz Wireless Optical Mouse (Model 07439) comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For technical support or warranty claims, please contact Inland customer service. Refer to your product packaging or the Inland official website for the most current contact information.

Please retain your proof of purchase for warranty validation.