



Manuals.plus /

› Nespresso /

› Nespresso DKB2C1 Descaling Kit for Coffee Machines

## Nespresso CBU2

# Nespresso DKB2C1 Descaling Kit for Coffee Machines

Official Nespresso Descaling Solution for Optimal Machine Performance

## INTRODUCTION

---

This manual provides instructions for using the Nespresso DKB2C1 Descaling Kit. Regular descaling is crucial for maintaining the performance and longevity of your Nespresso coffee machine. Limescale accumulation, caused by water hardness and infrequent descaling, can significantly impair coffee flow and temperature. This kit is designed to effectively remove these deposits, ensuring your machine continues to deliver high-quality coffee.



Image: Nespresso DKB2C1 Descaling Kit, showing the two 100ml bottles of descaling solution.

## IMPORTANT SAFETY INFORMATION

---

- Keep out of reach of children.
- Avoid contact with eyes and skin. In case of contact, rinse immediately with plenty of water and seek medical advice.
- Do not ingest. If swallowed, seek medical advice immediately and show this container or label.
- Always follow the specific descaling instructions provided in your Nespresso machine's user manual.

## SETUP AND PREPARATION

---

Before starting the descaling process, ensure your Nespresso machine is turned off and cooled down. Remove any capsules from the machine and empty the drip tray and water tank. Refer to your specific Nespresso machine's user manual for detailed instructions on how to prepare your model for descaling.

## OPERATING INSTRUCTIONS

---

The Nespresso DKB2C1 Descaling Kit contains two 100ml bottles of descaling solution. Follow these general steps, always prioritizing the instructions in your machine's user manual:

1. **Prepare the Solution:** Pour one 100ml bottle of Nespresso descaling solution into the water tank of your

machine.

2. **Add Water:** Fill the water tank with fresh water up to the descaling level indicated in your machine's manual, or as instructed by the machine's descaling program.
3. **Start Descaling Cycle:** Place a large container (at least 1 liter capacity) under the coffee outlet. Activate the descaling mode on your Nespresso machine as per its specific instructions. The machine will then dispense the descaling solution.
4. **Rinse Cycle:** After the descaling solution has been dispensed, empty and rinse the water tank thoroughly. Refill the tank with fresh water and run at least two full rinsing cycles to ensure all descaling solution residues are removed.
5. **Heavy Limescale Accumulation:** If your machine has significant limescale buildup, indicated by very slow coffee flow or reduced temperature, it is recommended to use a **double dose** of descaling solution. This means using both 100ml bottles from the kit in a single descaling cycle, followed by thorough rinsing. This instruction supersedes any contrary advice in your machine's standard manual for severe cases.
6. **Final Steps:** Once rinsing is complete, exit the descaling mode, empty and clean the drip tray, and refill the water tank with fresh water. Your machine is now ready for use.

## MAINTENANCE SCHEDULE

---

Regular descaling is essential for optimal machine performance and coffee quality. It is generally recommended to descale your Nespresso machine every **three months** or after approximately **300 coffees**, whichever comes first. Your machine may also have an indicator light that signals when descaling is required.

Benefits of regular descaling:

- Maintains consistent coffee temperature.
- Ensures optimal coffee flow and extraction.
- Extends the lifespan of your Nespresso machine.
- Preserves the taste and aroma of your coffee.

## TROUBLESHOOTING

---

If you experience issues after descaling, consider the following:

- **Slow Coffee Flow or Reduced Temperature:** If these issues persist after a single descaling cycle, it indicates heavy limescale accumulation. Repeat the descaling process using a double dose of the solution as described in the "Operating Instructions" section. Ensure thorough rinsing afterwards.
- **Descaling Light Still On:** Some machines require specific button combinations to reset the descaling indicator. Consult your machine's user manual for instructions on how to turn off the descaling alert.
- **Unusual Taste:** Ensure all rinsing cycles were completed thoroughly. Residual descaling solution can affect coffee taste. Run additional rinsing cycles with fresh water.
- **Other Issues:** For any other persistent problems, refer to your specific Nespresso machine's user manual or contact Nespresso Customer Support.

## SPECIFICATIONS

---

<b>Brand</b>	Nespresso
<b>Model Number</b>	CBU2
<b>Item Form</b>	Liquid
<b>Volume</b>	200 Milliliters (2 x 100ml bottles)
<b>Special Feature</b>	Descaler
<b>Ingredients</b>	Acids (Citric Acid based formula)
<b>Material Feature</b>	Non-toxic, BPA-free
<b>Specific Uses</b>	Coffee Machine Descaling
<b>Product Dimensions (L x W x H)</b>	28.09 x 7.7 x 3.91 cm
<b>Item Weight</b>	270 grams

## WARRANTY INFORMATION

---

This Nespresso Descaling Kit is a consumable product. Specific warranty information for this product is not provided. For details regarding the warranty of your Nespresso coffee machine, please refer to the documentation supplied with your machine or contact Nespresso Customer Support.

## SUPPORT

---

For further assistance, questions regarding the descaling process, or specific machine issues, please contact Nespresso Customer Support. You can find contact information on the official Nespresso website or through the documentation provided with your coffee machine.

You can also visit the official Nespresso store online: [Nespresso Brand Store](#)