

[manuals.plus](#) /› [Tupperware](#) /› [Tupperware Ultra Pro Oval Oven Safe 3.5qt / 3.3 L Casserole Dish Instruction Manual](#)**Tupperware COMINHKR070305**

Tupperware Ultra Pro Oval Oven Safe Casserole Dish Instruction Manual

Model: COMINHKR070305

INTRODUCTION

The Tupperware Ultra Pro Oval Oven Safe Casserole Dish is designed for versatile cooking, serving, storing, and freezing. Its durable material allows for use in conventional ovens, microwaves, refrigerators, and freezers, making it a convenient solution for various culinary needs. This manual provides essential information for the proper use and care of your Ultra Pro product.

SETUP

Unpacking

Carefully remove the Ultra Pro Oval Casserole Dish and its lid from the packaging. Inspect all components for any signs of damage. If any damage is observed, do not use the product and contact customer support.

Initial Cleaning

Before first use, wash the casserole dish and lid thoroughly with warm, soapy water. Rinse completely and dry with a soft cloth. The product is also dishwasher safe.

OPERATING INSTRUCTIONS

General Use

The Tupperware Ultra Pro Oval Casserole Dish is designed for multi-purpose use:

- **Oven Safe:** Suitable for use in conventional ovens. Ensure the oven temperature does not exceed recommended limits (typically up to 482°F / 250°C, refer to specific Tupperware guidelines if available).
- **Microwave Safe:** Can be used for cooking and reheating in microwave ovens.
- **Freezer Safe:** Ideal for freezing prepared meals or ingredients.
- **Refrigerator Safe:** Perfect for storing leftovers in the refrigerator.

The lid can be used during cooking in the oven or microwave to retain moisture and heat, or for storage. When cooking with the lid, ensure there is a small vent to allow steam to escape, or remove the lid for browning.



Image 1: The Tupperware Ultra Pro Oval Casserole Dish with its lid, showcasing its sleek design. This image illustrates the product in its complete form, ready for various culinary applications.



Image 2: The Tupperware Ultra Pro Oval Casserole Dish containing a cooked meal, possibly a pasta bake or casserole, placed on a serving tray. This demonstrates the product's utility for cooking and serving directly.

MAINTENANCE

Cleaning

The Ultra Pro Oval Casserole Dish is dishwasher safe. For hand washing, use a soft sponge or cloth with warm, soapy water. Avoid abrasive cleaners or scouring pads, as these can damage the surface. For

stubborn food residues, soak the dish in warm water before cleaning.

Storage

Store the casserole dish and lid in a clean, dry place. The lid can be inverted and placed on top of the dish for compact storage.

TROUBLESHOOTING

- Food Sticking:** Ensure adequate cooking oil or non-stick spray is used, especially for recipes prone to sticking. Avoid overheating an empty dish.
- Stains or Discoloration:** Certain foods (e.g., tomato-based sauces) may cause staining over time. This is cosmetic and does not affect the product's performance. For best results, clean immediately after use.
- Lid Not Sealing Properly:** Check for any food debris or damage around the rim of the dish or lid that might prevent a proper seal.
- Warping:** Avoid extreme temperature changes, such as placing a hot dish directly into cold water, which can cause thermal shock. Always allow the dish to cool gradually.

SPECIFICATIONS

Feature	Detail
Brand	Tupperware
Model Number	COMINHKR070305
Capacity	3.5 Quarts / 3.3 Liters
Material	Plastic
Color	Cosmos Black
Shape	Oval
Product Dimensions (L x W x H)	12" x 9.13" x 3.5"
Item Weight	3 Pounds
Care Instructions	Freezer Safe, Microwave Safe, Oven Safe, Refrigerator Safe, Dishwasher Safe
Lid Included	Yes



Image 3: A visual representation of the Tupperware Ultra Pro Oval Casserole Dish with its key dimensions labeled: 12 inches length, 9.12 inches width, and 3.5 inches height. This provides clear size information for users.

WARRANTY INFORMATION

 
Tupperware products are known for their durability and quality. For detailed warranty information regarding your Ultra Pro Oval Casserole Dish, please refer to the official Tupperware website or the warranty documentation provided with your purchase. Tupperware typically offers a limited lifetime warranty against chipping, cracking, breaking, or peeling under normal, non-commercial use.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Tupperware Ultra Pro Oval Casserole Dish, please contact Tupperware customer service. You can find contact information on the official Tupperware website or through your local Tupperware consultant.

Related Documents - COMINHKR070305

 <p>Micro Healthy Delight</p> <p>Tupperware®</p> <p>Micro Healthy Delight</p> <p>Tupperware®</p> <p>© 2017 Tupperware. All Rights Reserved.</p>	<p>Tupperware Micro Healthy Delight: Microwave Cookware Guide</p> <p>Discover how to prepare healthy and delicious meals with the Tupperware Micro Healthy Delight. This guide provides essential cooking instructions, safety precautions, and warranty information for optimal use in your microwave.</p>
 <p>Silicone Bags</p>  <p>MIN: -45°C / 15°F MAX: 220°C / 428°F</p> <p>Tupperware®</p> <p>www.tupperware.audFoodBags</p> <p>© Tupperware. All Rights Reserved.</p>	<p>Tupperware Silicone Bags - Versatile Food Storage</p> <p>Discover the benefits and uses of Tupperware Silicone Bags, ideal for sous vide cooking, freezing, and storing food. Learn about their temperature range and care instructions.</p>
 <p>Micro Delight</p> <p>Tupperware®</p> <p>© 2017 Tupperware. All Rights Reserved.</p>	<p>Tupperware Micro Delight: Easy Microwave Omelet Maker</p> <p>Learn how to prepare perfect omelets, frittatas, and more with the Tupperware Micro Delight microwave cooker. Includes usage instructions, safety tips, and warranty information.</p>
 <p>Breakfast Maker Instructions</p> <p>Cooking Instructions & Testing Reheat once from Microwave Breakfast Maker For heating: Carefully add egg mixture, cover with lid and heat for 1 minute. For reheating, cover with lid and heat for 30 seconds. For a soft-boiled egg, heat for 1 minute. For a hard-boiled egg, heat for 1 minute and 30 seconds. For a fried egg, heat for 1 minute and 30 seconds. For a frittata, heat for 2 minutes. For a quiche, heat for 3 minutes. For a souffle, heat for 2 minutes and 30 seconds.</p> <p>Tupperware</p>	<p>Tupperware Microwave Breakfast Maker Recipes and Instructions</p> <p>Discover a collection of easy and delicious recipes for the Tupperware Microwave Breakfast Maker. This guide includes instructions for various breakfast dishes, snacks, and desserts, perfect for quick microwave cooking.</p>
 <p>Tupperware WOW POP Microwave Popcorn Maker</p>  <p>FRAGILE</p> <p>Tupperware®</p> <p>© Tupperware. All Rights Reserved.</p>	<p>Tupperware WOW POP Microwave Popcorn Maker: Instructions and Safety Guide</p> <p>Comprehensive guide for the Tupperware WOW POP Microwave Popcorn Maker, covering usage, safety instructions, quantity guide, and warranty information. Learn to make perfect popcorn.</p>



[Tupperware TCare Bowl Anti-Skid User Manual and Care Guide](#)

Learn how to use and care for your Tupperware TCare Bowl Anti-Skid. This guide provides instructions on features, benefits, safety, cleaning, and warranty information for this baby feeding bowl.