

[Manuals.plus](#) /

› [Top Secret Toys](#) /

› Giga Pets Cryptids Digital Pet Instruction Manual

Top Secret Toys 1163

Giga Pets Cryptids Digital Pet Instruction Manual

Model: 1163
Brand: Top Secret Toys

INTRODUCTION

Welcome to the world of Giga Pets Cryptids! This interactive digital pet device allows you to care for and play with three unique cryptid creatures: Bigfoot, Nessie, and Mothman. This manual provides comprehensive instructions on setting up, operating, and maintaining your Giga Pet Cryptids device to ensure a fun and engaging experience.





Image: The Giga Pets Cryptids device, an orange translucent virtual pet unit, featuring pixelated characters of Bigfoot, Mothman, and the Loch Ness Monster.

SETUP

Battery Installation

Your Giga Pets Cryptids device requires **one CR2032 battery** (included). Follow these steps to install or replace the battery:

1. Locate the battery compartment on the back of the device.
2. Using a small Phillips head screwdriver, carefully unscrew the battery compartment cover.
3. Insert the CR2032 battery with the positive (+) side facing up.
4. Replace the cover and secure it with the screw.
5. The device should power on automatically. If not, press the reset button (usually a small recessed button on the back or side) with a pointed object like a paperclip.

Initial Power On and Pet Selection

Upon first power-on or after a reset, you will begin with Bigfoot as your initial cryptid pet. As you progress through the game, you

will unlock Nessie and Mothman.

OPERATING YOUR GIGA PET

The Giga Pets Cryptids device features four primary buttons: **LEFT**, **MODE**, **ENTER**, and **RIGHT**. These buttons are used to navigate menus, select actions, and play mini-games.

Basic Interactions

- **Feeding:** Select the food icon to feed your pet. Different foods may affect your pet's stats.
- **Playing:** Engage in mini-games to keep your pet happy and earn points.
- **Training:** Teach your pet tricks or improve its skills.
- **Cleaning:** Ensure your pet's environment is clean to maintain its health.
- **Health Check:** Monitor your pet's health, hunger, happiness, and discipline levels.



Image: A close-up of the Giga Pets Cryptids device, highlighting the various care options such as naming, feeding, training, and cleaning your virtual pet.

Unlocking New Pets

The Giga Pets Cryptids device allows you to unlock Nessie and Mothman as you progress. Continue to care for your current pet, play mini-games, and explore all features to discover how to unlock the other cryptids.



Capture them all!

Begin as Bigfoot and then unlock Nessie and Mothman as the game progresses!

Image: A young child happily holding the Giga Pets Cryptids device, with illustrations of Bigfoot, Nessie, and Mothman, emphasizing the goal to "Capture them all!"

FEATURES AND MINI-GAMES

Each Giga Pet Cryptid has unique characteristics, multiple evolutions, and a variety of mini-games to keep you entertained.

- **7 Evolutions:** Your pet will evolve through different stages from baby to adult, with a surprise evolution to discover.
- **13 Mini-Games:** Each cryptid has its own set of mini-games, including dodging submarines, bowling, and catching falling cars. Playing these games helps improve your pet's happiness and skills.
- **Portable Design:** The device is designed as a keychain, allowing you to take your virtual pet with you wherever you go.



**ALL NEW THINGS
await you!**



**Mysterious creatures that need to be
captured rather than adopted**



Multiple evolutions to experience



13 Mini Games!

Image: The Giga Pets Cryptids device displaying different pixelated evolutions of the cryptid pets and screenshots from various mini-games, illustrating the diverse gameplay.



Image: A young boy wearing a backpack with the Giga Pets Cryptids device attached as a keychain, demonstrating its portability.

MAINTENANCE

To ensure the longevity of your Giga Pets Cryptids device, follow these maintenance guidelines:

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device will not be used for an extended period, remove the battery to prevent leakage.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn on.	Dead or incorrectly installed battery.	Replace the CR2032 battery, ensuring correct polarity. Press the reset button.
Screen is blank or distorted.	Low battery or internal error.	Replace battery. If issue persists, try resetting the device.
Pet runs away.	Neglect (not fed, cleaned, or played with).	Unlike traditional GigaPets, Cryptids do not die but may run away. Continue playing and caring for your pet, and it may return.
Buttons are unresponsive.	Low battery or internal malfunction.	Replace battery. Try resetting the device.

SPECIFICATIONS

- **Model Number:** 1163
- **Product Dimensions:** 2 x 1 x 2.25 inches
- **Item Weight:** 3.2 ounces
- **Battery Type:** 1 x CR2032 (included)
- **Recommended Age:** 5 years and up
- **Manufacturer:** Top Secret Toys
- **Release Date:** October 4, 2023

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Top Secret Toys directly. Refer to the packaging or the official Top Secret Toys website for contact details.

Online Resources: For additional tips, tricks, and community support, you may visit the [Top Secret Toys Store on Amazon](#).

© 2023 Top Secret Toys. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question