



Manuals.plus /

› Furby /

› Furby Boom Figure (Straight Stripes) Instruction Manual

**Furby A4337**

# Furby Boom Figure (Straight Stripes) Instruction Manual

Model: A4337

## INTRODUCTION

---

The Furby Boom Figure is an interactive electronic pet designed to develop a unique personality based on how you interact with it. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Furby Boom, along with details on its features and specifications.



Image: The Furby Boom Figure in a pink and black 'Straight Stripes' pattern, featuring large yellow ears and expressive LED eyes.

## SETUP

### Battery Installation

Your Furby Boom requires **4 AA batteries** (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the underside of your Furby Boom.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw. Do not overtighten.

**Important:** Always use new batteries of the same type. Do not mix old and new batteries, or different types

of batteries. Remove batteries if the toy will not be used for an extended period.

## Initial Power-On

Once batteries are installed, your Furby Boom will automatically power on and begin to interact. There is no separate power button.

## OPERATING YOUR FURBY BOOM

---

The Furby Boom is designed for interactive play. Its personality evolves based on how you engage with it. The more you play, the more English it will learn.

### Basic Interactions

- **Tickle:** Gently tickle its belly to elicit reactions.
- **Talk:** Speak to your Furby Boom. It will respond in Furbish and gradually learn English words and phrases.
- **Feed:** Place your finger in its mouth to 'feed' it.
- **Music:** Play music, and your Furby Boom may dance or sing along.
- **Shake:** Gently shake your Furby Boom for different responses.
- **Turn Upside Down:** Inverting your Furby Boom can also trigger unique reactions.
- **Pull Tail:** Gently pull its tail for various responses.

### Personality Development

Your Furby Boom's personality is dynamic. It can change based on the frequency and type of interactions. For example, consistent gentle interactions may lead to a sweet personality, while rougher play might result in a mischievous one. This is a normal feature of the toy.

## FURBY BOOM APP FEATURES

---

Enhance your Furby Boom experience by downloading the free Furby Boom app. The app offers additional interactive features and expands the play possibilities.



*Image: A Furby Boom Figure sits beside a tablet, which shows a virtual Furby egg on its screen, illustrating app integration.*

## App Download and Compatibility

- The Furby Boom app is available for free download on the Apple App Store (for iPad, iPod touch, and iPhone with iOS 5.0 or later) and Google Play.
- The app is not compatible with prior Furby generations.
- For the latest device compatibility information, please visit [Furby.com](http://Furby.com).

## Virtual Care and Furlblings

Through the app, you can:

- Give your Furby Boom virtual food, checkups, and showers.
- Collect and hatch virtual Furlblings eggs.
- Raise and play games with your virtual Furlblings.
- Collect all 50+ Furlblings eggs to fill your Furby Boom City and try to get the golden Furlblings egg.

Your browser does not support the video tag.

*Video: This video demonstrates the process of hatching virtual Furlblings within the Furby Boom app, showcasing the interactive features and animations.*

## MAINTENANCE

---

### Cleaning

To clean your Furby Boom, gently wipe the surface with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this can damage the electronic components.

## Storage

When not in use, store your Furby Boom in a clean, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

## Sleep Mode / Turning Off

To put your Furby Boom to sleep, gently hold its tail until it begins to snore and its eyes close. It will enter a peaceful slumber. Be aware that loud noises or movement can wake it up. There is no hard 'off' switch; removing batteries is the only way to completely power it down.

## TROUBLESHOOTING

---

If you encounter issues with your Furby Boom, refer to the following common solutions:

- **No Response / Not Turning On:** Check that the batteries are correctly installed and are fresh. Replace all 4 AA batteries if necessary. Ensure the battery compartment cover is securely fastened.
- **Unexpected Personality Changes:** Furby Boom's personality is designed to evolve based on interaction. This is a feature, not a malfunction. Continue interacting with it in the desired manner to influence its personality.
- **App Connectivity Issues:** Ensure your smart device meets the minimum operating system requirements (iOS 5.0+). Check that Bluetooth is enabled on your device and that the Furby Boom is within range. Close and reopen the app, or restart your smart device if problems persist.
- **Repetitive Phrases:** The more you interact and expose your Furby Boom to new words and sounds, the more varied its vocabulary will become.


Your browser does not support the video tag.

*Video: This comprehensive video provides an overview of the Furby Boom Figure, demonstrating various interactions, app features, and general operation.*

## SPECIFICATIONS

---

<b>Model Number</b>	A4337
<b>Brand</b>	Furby (Hasbro)
<b>Dimensions (L x W x H)</b>	5 x 7.99 x 9.02 inches
<b>Material Type</b>	Plush
<b>Power Source</b>	4 AA batteries (not included)
<b>Age Range</b>	6 years and up (Manufacturer Minimum Age: 72 months)
<b>Additional Features</b>	Interactive and Responsive Capabilities, App Integration

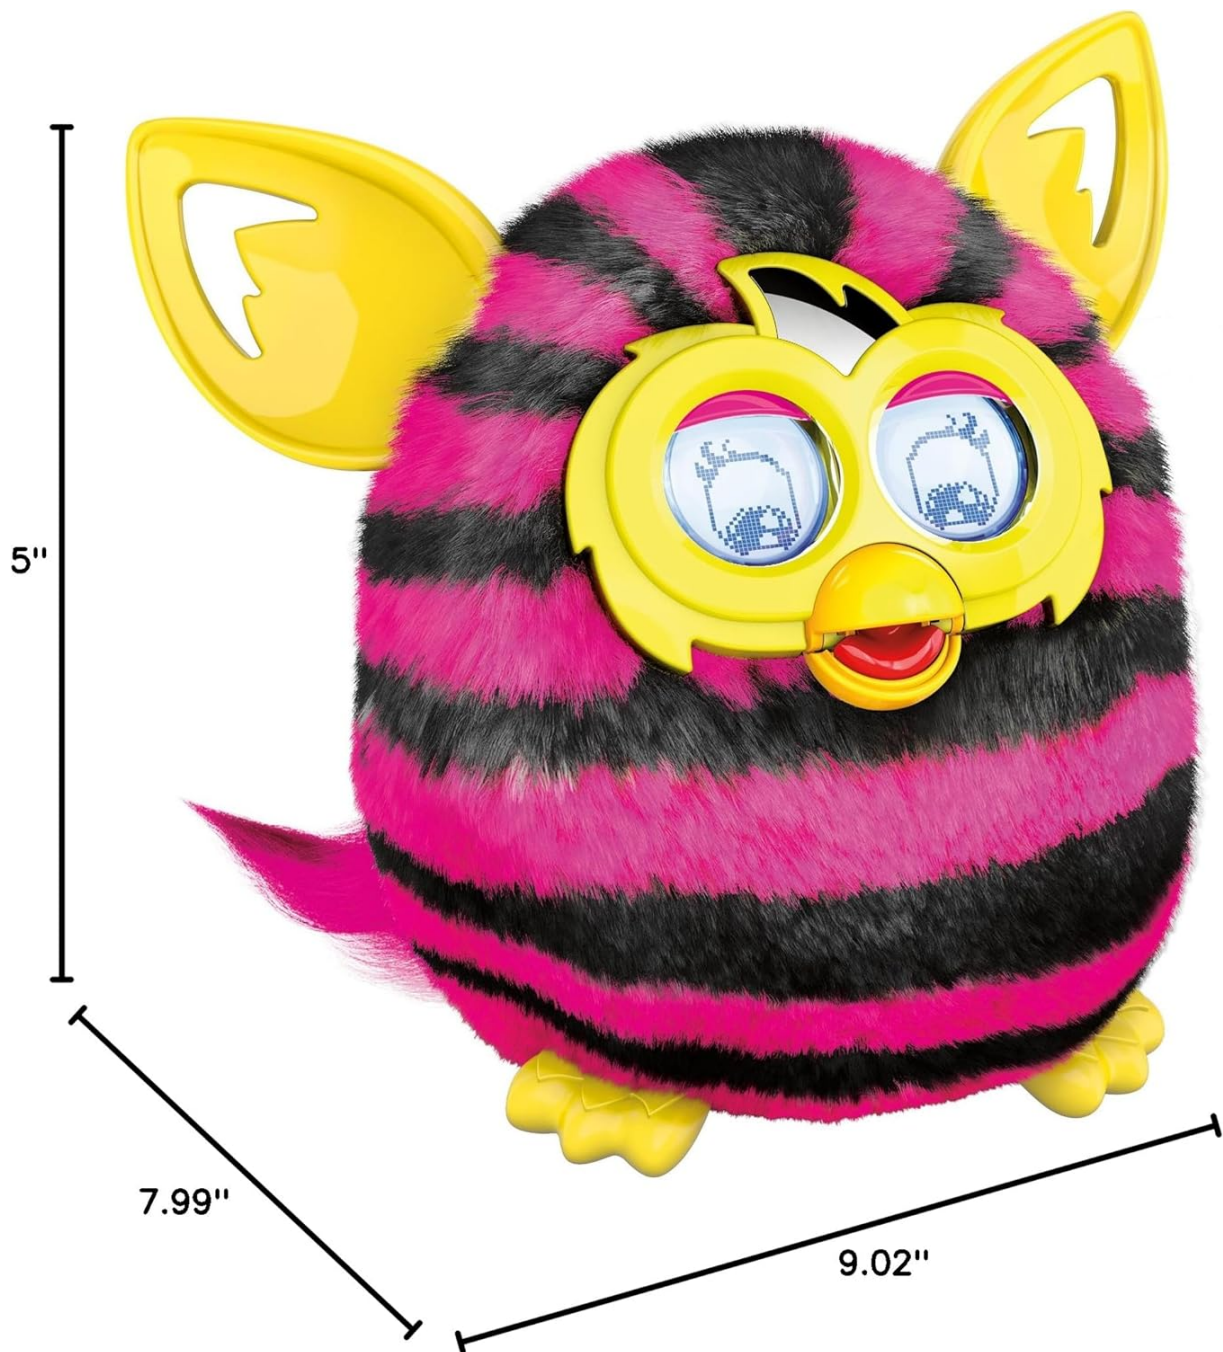

*Image: A diagram showing the dimensions of the Furby Boom Figure: 7.99 inches wide, 5 inches deep, and 9.02 inches high.*

## WARRANTY AND SUPPORT

---

### Warranty Information

This product is sold with **No Manufacturer Warranty** as per the provided product information.

### Customer Support

For further assistance, device compatibility updates, or additional information regarding your Furby Boom, please visit the official Furby website at [Furby.com](http://Furby.com).