

[manuals.plus](#) /

› [Furby](#) /

› [Furby Boom Figure \(Waves\) Model A4338 Instruction Manual](#)

Furby A4338

Furby Boom Figure (Waves) Instruction Manual

Model: A4338

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove your Furby Boom from its packaging. Ensure all components, including the Furby unit and this instruction manual, are present. Inspect the Furby for any visible damage before proceeding.



Image: The Furby Boom Figure (Waves) in its retail packaging, highlighting its features and app compatibility.

1.2 Battery Installation

Your Furby Boom requires **4 AA alkaline batteries** (not included). To install batteries:

1. Locate the battery compartment on the underside of your Furby.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Important: Batteries are not included with the product and must be purchased separately.

1.3 App Download (Optional)

To unlock the full interactive experience, download the free Furby Boom app. The app is available on the App Store for iOS devices and Google Play for Android devices.

- Search for "Furby Boom" in your device's app store.
- Download and install the application.

Note: The Furby Boom app is not compatible with prior Furby generations. For detailed compatibility information, please visit Furby.com.

2. OPERATING YOUR FURBY BOOM

2.1 Basic Interaction

Your Furby Boom is designed to be highly interactive. Its personality evolves based on how you treat it. Engage with your Furby in the following ways:

- **Tickle:** Gently tickle its stomach.
- **Pet:** Stroke its head or back.
- **Talk:** Speak to your Furby. It will gradually learn more English words as you interact with it.
- **Feed:** Use your finger to simulate feeding its mouth.
- **Play Music:** Furby Boom loves to dance to music.

The more you interact, the more its personality will develop and the more English it will speak.



Image: A Furby Boom Figure (Waves) in its natural state, ready for interaction.

2.2 App Integration and Virtual Play

The Furby Boom app enhances your play experience by allowing you to care for your Furby and interact with virtual Furblings.

- **Care:** Use the app to give your Furby virtual food, checkups, and showers.
- **Naming:** Give your Furby a name through the app. It will remember its name and the names of other Furby Boom friends it meets.
- **Hatch Furblings:** Collect virtual eggs within the app and hatch them to raise a city of virtual Furby Furblings. Your goal is to collect all 50+ Furbling eggs and the golden egg.
- **Play Games:** Team up with your Furby Boom and virtual Furblings to play various games within the app.



Image: A Furby Boom Figure (Waves) interacting with a tablet, showing the virtual egg hatching feature of the app.



Image: Two children engaging with a Furby Boom and its companion app on a tablet, demonstrating interactive play.



Image: Two children playing a game on a tablet, with the Furby Boom Figure (Waves) positioned next to the device, indicating integrated gameplay.

2.3 Understanding Furby's Responses

Furby Boom communicates through its eyes, sounds, and movements. Its digital eyes are highly expressive and will often indicate its current mood or needs. Pay attention to these visual cues to understand your Furby better.

Your browser does not support the video tag.

Video: An overview of the Furby Boom Figure (Waves) features, demonstrating interactions and app functionalities.

Your browser does not support the video tag.

Video: A demonstration of the virtual egg hatching process within the Furby Boom app.

3. MAINTENANCE

3.1 Cleaning

To clean your Furby Boom, gently wipe its fur with a soft, damp cloth. Do not immerse the Furby in water or use harsh cleaning agents, as this may damage the electronic components.

3.2 Storage

When not in use for extended periods, it is recommended to remove the batteries from your Furby Boom to prevent potential leakage and damage. Store the Furby in a cool, dry place away from direct sunlight.

4. TROUBLESHOOTING

4.1 Common Issues

- **Furby not responding:** Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary. Try gently shaking or petting your Furby to wake it up.
- **App connectivity issues:** Ensure your smart device is compatible with the Furby Boom app (check Furby.com). Make sure your device's volume is up and positioned correctly for the Furby to hear it. Close and reopen the app, or restart your device if problems persist.
- **Unexpected personality changes:** Furby's personality is dynamic and changes based on interactions. This is a normal feature of the product.

5. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.99 x 5 x 9.02 inches
Item Weight	14.2 ounces
Item Model Number	A4338
Manufacturer Recommended Age	6 years and up
Batteries	4 AA batteries required (not included)
Manufacturer	Hasbro

6. WARRANTY AND SUPPORT

6.1 Warranty Information

This product is manufactured by Hasbro. For information regarding product warranty, please refer to the official Hasbro website or contact their customer service directly. Specific warranty terms and conditions may vary by region.

6.2 Customer Support

For further assistance, technical support, or inquiries not covered in this manual, please visit the official Hasbro website or contact their customer support channels. Contact information can typically be found on the product packaging or Hasbro's official website.