

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution XRT110 Smart TV Remote Control User Manual for VIZIO TVs

Beyution XRT110

Beyution XRT110 Smart TV Remote Control User Manual for VIZIO TVs

Model: XRT110

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Beyution XRT110 Smart TV Remote Control. Designed as a replacement or secondary remote, it offers seamless control over various VIZIO Smart TV models. Please read this manual thoroughly to ensure proper usage and to maximize your remote control's functionality.

PRODUCT OVERVIEW

The Beyution XRT110 remote control features a standard layout for VIZIO Smart TVs, including dedicated buttons for popular streaming services and essential TV functions.





Figure 1: Front view of the Beyution XRT110 Smart TV Remote Control. This image displays the full layout of the remote, including the power button, input selection, dedicated app buttons for Amazon, Netflix, and M-GO, media playback controls, navigation pad, volume and channel controls, and a numeric keypad.

Button Functions:

- **Power ():** Turns the TV on or off.
- **INPUT:** Selects the video input source (e.g., HDMI 1, Component).
- **amazon:** Direct access to the Amazon streaming application.
- **NETFLIX:** Direct access to the Netflix streaming application.

- **M-GO:** Direct access to the M-GO streaming application.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits the current menu or application.
- **MENU:** Opens the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and selects options.
- **BACK:** Returns to the previous screen or menu.
- **GUIDE:** Opens the electronic program guide (if available).
- **Color Buttons (Yellow, Blue, Red, Green):** Used for specific functions within certain applications or menus, as indicated on-screen.
- **VOL (+/-):** Adjusts the volume level.
- **Mute ():** Mutes or unmutes the TV audio.
- **CH (Channel Up/Down):** Changes the TV channel.
- **Recall (⌂):** Returns to the previously viewed channel.
- **Numeric Keypad (0-9):** Directly enters channel numbers.
- **WIDE:** Adjusts the screen aspect ratio (functionality may vary by TV model).
- **Dash (-):** Used for entering sub-channels (e.g., 7-1).

SETUP

Battery Installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: This remote control does not require programming for compatible VIZIO TV models. It is ready for use once batteries are installed.

OPERATING INSTRUCTIONS

Basic TV Control:

- **Power On/Off:** Press the **Power** button once.
- **Volume Adjustment:** Press **VOL +** to increase volume, **VOL -** to decrease volume.
- **Channel Change:** Press **CH ▲** to go to the next channel, **CH ▼** to go to the previous channel. Use the numeric keypad for direct channel entry.
- **Input Selection:** Press the **INPUT** button repeatedly to cycle through available input sources (e.g., HDMI 1, HDMI 2, TV).

Smart TV App Access:

- Press the dedicated **amazon**, **NETFLIX**, or **M-GO** buttons to launch the respective streaming applications directly.
- Use the **Navigation Pad** and **OK** button to browse content within the applications.
- Press **BACK** to return to the previous screen or **EXIT** to close the application.

Menu Navigation:

- Press the **MENU** button to open the TV's main settings menu.
- Use the **Navigation Pad** (Up, Down, Left, Right) to highlight options.
- Press **OK** to select a highlighted option.
- Press **BACK** to go back one level in the menu, or **EXIT** to close the menu entirely.

COMPATIBLE VIZIO TV MODELS

The Beyution XRT110 remote control is compatible with a wide range of VIZIO Smart TV models. This list includes, but is not limited to, the following models:

- M320SL, M370SL
- E322AR, E422AR, E502AR
- E320i-A0, E320i-A2, E420i-A0, E420i-A1, E401i-A2, E291i-A1, E241i-A1W, E241i-A1, E390i-A1
- E420ME, E460ME, E321ME
- E470i-A0
- E551i-A2, E551D-A0, E551d-A0
- E500d-A0, E500D-A0, E500i-A0
- E420d-A0, E420D-A0
- E370VP, E320VT, E370VT, E420VT
- E422VLE, E472VLE, E552VLE

If your VIZIO TV model is not listed, please refer to your TV's original manual or contact VIZIO support to confirm compatibility with the XRT110 remote series.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote works intermittently.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver.
Specific buttons do not work.	Button malfunction or incompatibility with TV model.	Clean the remote. Verify your TV model is fully compatible with all XRT110 functions. Some advanced features may vary.
Smart app buttons (Amazon, Netflix) do not launch apps.	TV is not a Smart TV, or apps are not installed/configured.	Ensure your VIZIO TV is a Smart TV model with these apps installed and connected to the internet.

SPECIFICATIONS

- Model Number:** XRT110
- Brand:** Beyution
- Product Dimensions:** 5.7 x 2.2 x 0.7 inches
- Item Weight:** 2.4 ounces
- Batteries Required:** 2 x AAA (not included)
- Color:** Black
- Special Feature:** Ergonomic design
- Max Number of Supported Devices:** 1 (Television)

Compatible Devices: VIZIO Televisions (specific models listed above)

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly according to local regulations.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

SUPPORT AND WARRANTY

As a replacement remote control, the Beyution XRT110 typically does not come with a manufacturer's warranty from Beyution. For any issues or concerns regarding your purchase, please refer to the return and support policies of the retailer from whom you purchased the product.

For VIZIO TV-specific support or troubleshooting related to your television's functions, please consult your VIZIO TV's original user manual or visit the official VIZIO support website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question