

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Nexus NX2602 User Manual

Redi-Remote RTNX2602

Redi-Remote Replacement Remote Control for Nexus NX2602 User Manual

Model: RTNX2602

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, specifically designed for use with Nexus NX2602 units. This remote is a custom-built replacement and is not an original Nexus product. It is engineered to perform all functions of the original remote for the specified Nexus unit without requiring any programming.

The remote control measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness. It operates using infrared technology.



Image 1.1: Front view of the Redi-Remote Replacement Remote Control for Nexus NX2602. The remote is dark gray with a red power button, blue channel and volume buttons, and a numeric keypad. The lower section, which slides down, reveals additional function buttons.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. (Note: Batteries are typically included with the remote).
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

2.2 Initial Use

This Redi-Remote replacement control requires no programming. Once batteries are installed, it is ready for immediate use with your Nexus NX2602 unit.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Nexus NX2602 unit. Ensure there are no obstructions between the remote and the unit's infrared receiver.

3.1 Basic Functions (Upper Section)

- **PWR (Power):** Turns the unit on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Shows on-screen display information.
- **VOL +/- (Volume):** Adjusts the volume level.
- **MUTE:** Silences the audio output.
- **CH +/- (Channel):** Changes channels up or down.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Switches to the previously viewed channel.
- **Numeric Keypad (0-9, 100):** Directly enters channel numbers.
- **ENT (Enter):** Confirms numeric input or selections.

3.2 Advanced Functions (Lower Section)

The lower half of the remote control is covered by a sliding panel. To access these buttons, gently slide the panel downwards as indicated by the 'SLIDE DOWN' marking.

- **INPUT:** Selects different input sources.
- **INFO:** Displays program information.
- **GUIDE:** Accesses the electronic program guide.
- **EXIT:** Exits menus or on-screen displays.
- **SAP:** Activates Secondary Audio Program (if available).
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **ZOOM:** Adjusts the screen zoom level.

- **CCD (Closed Caption Decoder):** Toggles closed captions.
- **FAV (Favorites):** Accesses favorite channels list.
- **AUDIO:** Adjusts audio settings or tracks.
- **LIST:** Displays a list of channels or recordings.
- **PICTURE:** Adjusts picture settings.
- **PIP (Picture-in-Picture):** Controls Picture-in-Picture function.
- **P-POS! (Picture Position):** Adjusts PIP window position.
- **SWAP:** Swaps main and PIP screens.
- **FREEZE:** Freezes the current image on screen.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

5. TROUBLESHOOTING

- **Remote not responding:** Ensure the remote is pointed directly at the Nexus NX2602 unit. Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- **Intermittent functionality:** This could indicate low battery power. Replace the batteries. Ensure there are no objects blocking the remote's infrared signal path to the unit.
- **Remote does not control auxiliary devices:** Redi-Remotes are designed to control only the specific unit they are intended for (Nexus NX2602 in this case) and cannot be programmed for auxiliary devices.

If issues persist after following these steps, please refer to the support information in Section 7.

6. SPECIFICATIONS

Model Number	RTNX2602
Brand	Redi-Remote
Compatible Devices	Nexus NX2602 (Television)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1
Product Dimensions	7 x 2.5 x 1 inches (approximately)

Item Weight	4.5 ounces
Batteries	4 AAA batteries (included)

7. WARRANTY AND SUPPORT

This Redi-Remote replacement control is designed for reliable operation. If you encounter any concerns or issues with the remote control after purchase, please contact the seller directly for assistance. Specific warranty details may vary and should be confirmed with the point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CYRXP4K>

More documents and user manuals: <https://manuals.plus/>