

Fagor C18T002A6

Fagor Oven Control Knob C18T002A6 Instruction Manual

Model: C18T002A6 (Compatible with Fagor HF-113B)

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Fagor Oven Control Knob, part number C18T002A6. This replacement part is designed for compatibility with Fagor oven model HF-113B and other equivalent models. Please read these instructions carefully before proceeding with installation or use to ensure proper function and safety.

SAFETY INFORMATION

WARNING: Always disconnect the appliance from the main power supply before attempting any installation, maintenance, or repair. Failure to do so can result in electric shock, injury, or death.

- Ensure the appliance is completely cool before handling any parts.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- If you are unsure about any step, consult a qualified technician.
- Keep small parts away from children.

PACKAGE CONTENTS

Verify that all items are present and undamaged upon opening the package.

- 1 x Fagor Oven Control Knob (Part No. C18T002A6)
- *(No other accessories are typically included with this replacement part.)*

INSTALLATION INSTRUCTIONS

Follow these steps to correctly install the replacement control knob:

1. **Disconnect Power:** Before beginning, ensure the oven or cooktop is completely disconnected from

the electrical power supply. This is a critical safety step.

2. **Remove Old Knob:** Gently pull the old control knob directly off its shaft. It should slide off with moderate force. Avoid twisting or prying excessively, as this could damage the shaft.
(Image: Old control knob being pulled off the oven shaft. Alt text: Removing the old oven control knob.)
3. **Inspect Shaft:** Examine the metal shaft on the oven's control panel. Ensure it is clean, free of debris, and undamaged. If there is any residue, clean it carefully.
(Image: Close-up of the oven control shaft. Alt text: Inspecting the oven control shaft.)
4. **Align New Knob:** Take the new Fagor control knob (C18T002A6). Observe the shape of the opening at the back of the knob and align it with the shape of the shaft on the oven. Most shafts have a flat side or a specific notch for correct orientation.
5. **Install New Knob:** Carefully push the new knob onto the shaft until it is firmly seated. Do not force it if it doesn't slide on easily; re-check the alignment. The knob should sit flush against the control panel without excessive play.
(Image: New control knob being pushed onto the oven shaft. Alt text: Installing the new Fagor oven control knob.)
6. **Test Functionality:** Once installed, reconnect the appliance to the power supply. Gently turn the knob to ensure it rotates smoothly and engages with the oven's control mechanism. Verify that the markings on the knob align correctly with the settings on the control panel.

Note: No product images or videos were provided in the source data for this manual. The descriptions above serve as visual guidance.

OPERATING INSTRUCTIONS

The Fagor Oven Control Knob C18T002A6 functions identically to the original knob it replaces. Refer to your oven's primary user manual for specific operating procedures, temperature settings, and cooking functions.

- **Turning On/Off:** Rotate the knob to the desired setting to activate or deactivate oven functions.
- **Temperature/Function Selection:** Align the indicator mark on the knob with the corresponding temperature or function symbol on your oven's control panel.
- **Gentle Operation:** Always turn the knob gently. Avoid excessive force, which can damage the internal mechanism or the knob itself.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your control knob.

- **Cleaning:** To clean the knob, first ensure the oven is off and cool. Gently pull the knob off its shaft. Wash it with warm, soapy water and a soft cloth. Rinse thoroughly and dry completely before reattaching. Do not use abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Reinstallation:** After cleaning, align the knob with the shaft and push it back into place firmly.
- **Avoid Damage:** Do not expose the knob to extreme heat or direct flame, as this can cause warping or discoloration.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Knob does not fit onto the shaft.	Incorrect alignment or incompatible part.	Ensure the knob's opening is correctly aligned with the shaft's shape. Verify that the part number C18T002A6 is correct for your oven model (e.g., HF-113B).
Knob is loose or wobbly.	Not fully seated or damaged shaft.	Push the knob firmly onto the shaft until it clicks or is fully seated. Inspect the oven's shaft for damage; if damaged, it may require professional repair.
Knob does not turn or engage oven functions.	Internal oven mechanism issue or incorrect installation.	Ensure the knob is fully pushed onto the shaft. If the problem persists, the issue may be with the oven's internal control mechanism, requiring professional service.

SPECIFICATIONS

Part Number: C18T002A6

Brand: Fagor

Compatible Models: Fagor HF-113B (901111425), and other equivalent models.

Equivalent References: 95 x 0627

Product Type: Oven Control Knob / Mando Horno

Color: White

Weight: Approximately 199.58 g

Material: (Not specified, typically plastic/metal composite)

WARRANTY AND SUPPORT

This Fagor replacement part is typically covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the specific warranty information provided by your retailer or Fagor's official documentation at the time of purchase.

For technical support, warranty claims, or further assistance, please contact your original point of purchase or visit the official Fagor website for customer service contact details.

Manufacturer: FAGOR

Manufacturer Reference: C18T002A6