

[Manuals.plus](#) /

› [GLOBO](#) /

› GLOBO 48092-3 X Ceiling Light Instruction Manual

GLOBO 48092-3

GLOBO 48092-3 X Ceiling Light Instruction Manual

MODEL: 48092-3

Brand: GLOBO

INTRODUCTION

Thank you for choosing the GLOBO 48092-3 X Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before beginning installation and retain them for future reference.



Image: The GLOBO 48092-3 X ceiling light elegantly installed in a modern living room setting, illuminating the space.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when installing or working with electrical products to reduce the risk of fire, electric shock, and personal injury.

- **Disconnect Power:** Always turn off the main power supply at the circuit breaker or fuse box before installation, maintenance, or bulb replacement.
- **Qualified Electrician:** If you are unsure about the installation process, consult a qualified electrician.
- **Proper Wiring:** Ensure all electrical connections are made according to local electrical codes and regulations.
- **Handle with Care:** The fixture contains glass components. Handle them carefully to prevent breakage and injury.
- **Correct Bulbs:** Use only bulbs of the specified type and wattage (E27, max 60W per bulb).
- **Indoor Use Only:** This fixture is designed for indoor use in dry locations.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact your retailer.

- 1 x GLOBO 48092-3 X Ceiling Light Fixture (Chrome and White Metal Frame with Glass Plates)
- Mounting Hardware (screws, wall anchors, etc.)
- Instruction Manual

Note: Light bulbs are not included. This fixture requires 3 x E27 bulbs, maximum 60W each, and is compatible with LED bulbs.

SETUP AND INSTALLATION

Installation of this ceiling light requires careful attention to detail. It is recommended that two people perform the installation due to the size and delicate nature of the glass components.

1. Prepare for Installation:

- Turn off the electrical power at the main circuit breaker or fuse box.
- Unpack all components and lay them out on a clean, soft surface to prevent scratches.

2. Mount the Mounting Bracket:

- Attach the mounting bracket to the ceiling junction box using the provided screws. Ensure it is securely fastened.

3. Wire the Fixture:

- Connect the fixture's wires to the corresponding household wires (live to live, neutral to neutral, ground to ground) using wire connectors.
- Carefully tuck all wires into the junction box.

4. Attach the Fixture Body:

- Carefully lift the main fixture body and align it with the mounting bracket. Secure it in place with the provided screws.

5. Install Glass Plates:

- This fixture includes multiple glass plates. Carefully position each glass plate onto the fixture.
- Secure the glass plates using the decorative screws or fasteners. Exercise caution to avoid overtightening, which can crack the glass.



Image: A detailed view of the GLOBO 48092-3 X ceiling light, highlighting the intricate glass design and bulb sockets.

6. Install Light Bulbs:

- Screw three E27 bulbs (not included, max 60W each) into the sockets. Do not exceed the maximum wattage.

7. Restore Power:

- Once installation is complete, restore power at the circuit breaker.
- Test the light fixture to ensure proper operation.

OPERATING INSTRUCTIONS

The GLOBO 48092-3 X Ceiling Light operates via a standard wall switch. Simply toggle the wall switch to turn the light fixture on or off.

- Ensure the wall switch connected to the fixture is in the 'ON' position for the light to function.
- This fixture is compatible with LED bulbs, offering energy efficiency and a longer lifespan.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your ceiling light.

- **Cleaning:** To clean the fixture, ensure the power is off. Wipe the metal and glass surfaces with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:**
 - Always turn off the power at the circuit breaker before replacing bulbs.
 - Allow bulbs to cool completely before touching them.
 - To access the bulbs, you will need to carefully remove the glass plates by unscrewing the four retaining screws.
 - Unscrew the old bulb and screw in a new E27 bulb (max 60W).
 - Carefully reattach the glass plates, ensuring they are secure but not overtightened.

TROUBLESHOOTING

If you encounter issues with your ceiling light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture Loose wiring connection Faulty bulb	Check circuit breaker/fuse. Ensure wall switch is ON. Verify wiring connections (with power off). Replace bulb.
Light flickers	Loose bulb Loose wiring connection Incompatible dimmer switch (if applicable)	Tighten bulb. Check wiring connections (with power off). Ensure dimmer is compatible with LED bulbs if using them.
Glass plate is loose or cracked	Improper installation Overtightened screws Impact	Ensure screws are tightened appropriately (not overtightened). Contact retailer for replacement parts if cracked.

If the problem persists after attempting these solutions, please contact customer support or a qualified electrician.

SPECIFICATIONS

- **Model Number:** 48092-3
- **Brand:** GLOBO
- **Dimensions (L x W x H):** 42.01 x 42.01 x 8.51 cm
- **Weight:** 2.88 kg
- **Material:** Metal (Chrome), Glass
- **Color:** Silver/Chrome
- **Style:** Modern
- **Power Source:** AC
- **Voltage:** 230 Volts
- **Number of Light Sources:** 3
- **Bulb Type:** E27 (Bulbs not included)
- **Max Wattage per Bulb:** 60 Watts
- **Light Source Compatibility:** LED compatible
- **Energy Efficiency Class:** A++

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or inquiries about replacement parts, please reach out to the GLOBO customer service department or your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question