

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Men's Digital Chronograph Watch User Manual

Armitron 40/8284RED

Armitron Sport Men's Digital Chronograph Watch

Model: 40/8284RED

INTRODUCTION

Thank you for choosing the Armitron Sport Men's Digital Chronograph Watch. This timepiece is designed for durability and functionality, featuring a robust resin strap and a clear digital display. It is equipped with various functions to support your active lifestyle, including a chronograph, alarm, dual time, and backlight.



Front view of the Armitron Sport Men's Digital Chronograph Watch in black and red.

KEY FEATURES

- Sport watch with textured band, multiple displays, and red contrasts.
- Quartz movement with digital display.
- Features chronograph with lap time, alarm time, dual time, military time, and back light functions.
- Two zone LCD display with sub-dials including day, date, time, and seconds.
- Durable buckle closure.
- Water resistant to 330 feet (100 meters): Suitable for snorkeling, as well as swimming, but not diving.



The Armitron Sport Watch worn on a wrist, showcasing its size and design.

SETUP GUIDE

Setting Time and Date

1. In normal time mode, press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET** or **ST/STP** button to adjust the flashing digit (hours, minutes, seconds).

3. Press the **MODE** button again to move to the next setting (e.g., date, month, day of week).
4. Repeat step 2 to adjust each setting.
5. Once all settings are correct, press the **MODE** button to return to normal time display.

Setting Alarm

1. From normal time mode, press the **MODE** button to cycle through modes until the alarm setting mode is displayed.
2. Use the **RESET** or **ST/STP** button to set the desired alarm time.
3. Press the **MODE** button to confirm the alarm time and exit the setting mode.
4. To activate/deactivate the alarm, typically press the **RESET** button while in alarm mode.



Side view of the watch on a wrist, highlighting the buttons used for settings.

OPERATING MODES

Chronograph (Stopwatch)

- Press the **MODE** button to enter Chronograph mode.
- Press **ST/STP** to start and stop the timer.
- Press **RESET** to reset the timer to zero.
- For lap time, press **RESET** while the timer is running to display the lap time. Press **ST/STP** to continue timing.

Dual Time

- This feature allows you to set and view a second time zone.
- Press the **MODE** button to navigate to the Dual Time mode.
- Follow similar steps as setting the main time to adjust the dual time.

Backlight Function

- Press the **EL** (Electro-Luminescent) button to illuminate the display for easy viewing in low-light conditions.

This video demonstrates the features and functions of the Armitron Sport Men's Digital Chronograph Watch, including its various modes and display options.

An informational video providing context about the Armitron brand and its legacy in watchmaking.

CARE AND MAINTENANCE

Water Resistance

This watch is water resistant to 330 feet (100 meters). This makes it suitable for snorkeling and swimming. However, it is not recommended for scuba diving. Avoid pressing buttons underwater to prevent water ingress.

WATER RESISTANT CHART	
 NOT WATER RESISTANT	NOT WATER RESISTANT
 ACCIDENTAL SPLASHES	WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
 SWIMMING	WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling
 SNORKELING	WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving

A chart illustrating different levels of water resistance for watches, indicating suitability for various water activities.

Battery Replacement

The watch uses 1 Lithium Metal battery (included). When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Blank Display:** Check if the battery needs replacement.
- **Incorrect Time/Date:** Refer to the 'Setting Time and Date' section to re-adjust.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable) or that no debris is obstructing the buttons. If issues persist, a professional inspection may be required.
- **Water Inside Display:** If condensation or water appears inside the watch, cease use immediately and seek professional service to prevent further damage.

PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	5 x 5 x 0.7 inches
Item Weight	0.88 ounces
Item Model Number	40/8284RED

Department	Mens
Batteries	1 Lithium Metal batteries required (included)
Date First Available	July 15, 2013
Manufacturer	Armitron Sport
Material	Resin case, two zone LCD display

WARRANTY AND SUPPORT

For warranty information and support, please refer to the documentation included with your purchase or visit the official Armitron website. Keep your proof of purchase for any warranty claims.

For further assistance or technical support, please contact Armitron customer service through their official channels.

You can visit the Armitron Store for more products and information:[Armitron Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question