

[manuals.plus](#) /› [Whirlpool](#) /› [Whirlpool Microwave Oven Lamp 25W 240V - Model 481913428051 Instruction Manual](#)

Whirlpool 481913428051

Whirlpool Microwave Oven Lamp 25W 240V - Model 481913428051 Instruction Manual

Model: 481913428051

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective installation, operation, and maintenance of your Whirlpool Microwave Oven Lamp, Model 481913428051. Please read this manual thoroughly before attempting any installation or maintenance procedures. Retain this manual for future reference.

2. SAFETY INFORMATION

WARNING: Electrical shock hazard. Always disconnect power to the microwave oven before attempting to replace the lamp. Failure to do so can result in serious injury or death.

- Ensure the microwave oven is unplugged from the power outlet before proceeding.
- Allow the lamp to cool completely before handling, as it can be very hot after use.
- Wear protective gloves if necessary to avoid contact with broken glass or sharp edges.
- If you are unsure about any step, consult a qualified technician.
- Do not use this lamp in applications other than specified microwave ovens.

3. PRODUCT OVERVIEW

The Whirlpool Microwave Oven Lamp (Model 481913428051) is a 25W, 240V halogen bulb designed to provide interior illumination for compatible Whirlpool microwave ovens. It features a clear glass bulb with a plastic base and two flat spade terminals for electrical connection.



Figure 1: Whirlpool Microwave Oven Lamp, Model 481913428051. This image shows the clear glass bulb attached to a black plastic base with two metal spade connectors extending from the base.

4. INSTALLATION

This section outlines the general procedure for replacing a microwave oven lamp. Specific steps may vary depending on your microwave oven model. Always refer to your microwave oven's service manual for precise instructions.

- 1. Disconnect Power:** Unplug the microwave oven from the electrical outlet.
- 2. Access Lamp Compartment:** Locate the lamp access panel, typically on the side, back, or bottom of the microwave oven. This may require removing screws or a cover.
- 3. Remove Old Lamp:** Carefully disconnect the electrical terminals from the old lamp. If the lamp is screwed in, unscrew it. If it's a push-in type, gently pull it out. Dispose of the old lamp responsibly.
- 4. Install New Lamp:** Connect the electrical terminals to the new lamp's spade connectors. Ensure a secure connection. Insert or screw in the new lamp into its socket.
- 5. Secure Access Panel:** Reattach the lamp access panel and secure it with any screws or clips removed earlier.
- 6. Restore Power:** Plug the microwave oven back into the electrical outlet.
- 7. Test:** Open the microwave door to verify the new lamp illuminates.

5. OPERATION

The microwave oven lamp operates automatically. It will illuminate when the microwave oven door is opened and typically during cooking cycles, depending on the specific microwave model's design. No

manual operation of the lamp is required.

6. MAINTENANCE

The lamp requires minimal maintenance. If the lamp becomes dirty, ensure the microwave oven is unplugged and the lamp is cool before gently wiping it with a dry, soft cloth. Do not use abrasive cleaners or liquids directly on the bulb.

The lifespan of the lamp can vary. If the lamp burns out, refer to the Installation section for replacement instructions.

7. TROUBLESHOOTING

- **Lamp Not Illuminating:**

- Check if the microwave oven is plugged in and receiving power.
- Verify the lamp is securely installed and the electrical connections are firm.
- The lamp may be burnt out and requires replacement.

- **Dim Illumination:**

- Ensure the lamp is clean and free from grease or debris.
- Confirm the lamp is the correct wattage and voltage for your microwave model.

If issues persist after troubleshooting, contact Whirlpool customer support or a qualified appliance technician.

8. SPECIFICATIONS

Feature	Specification
Brand	Whirlpool
Model Number	481913428051
Power	25 Watt
Voltage	240 Volt
Bulb Type	Halogen
Luminous Flux	350 Lumen
Material	Glass, Plastic (base)
Shape	Round
Item Weight	10 g
Country of Origin	Germany

9. COMPATIBILITY

This lamp is compatible with various Whirlpool microwave oven models. Please verify your specific model number against the list below or consult your microwave oven's documentation to ensure compatibility. If your model is not listed, please contact customer support.

Compatible Whirlpool Models include:

- MD365, AVM430, AVM230, MT244, MT275 - 853827029281, AVM230WPWH - 853823029291, 00156195 - F090913, 90153060 - F0 912, AM T 240 IX - F090951, AMW 405 IX - F090858, AMW 407 IX - F090859, AMW 410 BL - F090860, AMW 410 IX - F090861, AMW 415 IX - F090862, AMW 416 IX - F090864, AMW 416 NB - F090863, AMW 420 IX - F090865, AMW 440 IX - F090867, AMW 440/IX - F093019, AMW 441 IX - F090868, AMW 442 IX - F090869, AMW 460/1 IX - F090873, AMW 478 IX - F090875, AMW 480 IX - F090876, AMW 490 IX - F090879, AMW 493/1 IX - F090882, AMW 494 IX - F090886, AMW 494 NB - F090885, AMW 497 IX - F094707, AMW 498 IX - F090888, AMW 711 IX - F090908, AMW 735 IX - F090910, AMW 735/NB - 858773501920, AMW 735/WH - 858773501940, AMW 758 IX - F090911, AVM 955/IX - F092163, AVM 965 IX 90780 cm, AVM 966 IX - F090782, AVM684 WP BR - F092157, EMCP 9238 PT - F090932, EMWP 9238 PT - F090930, HJA 7030 - F090953, KMW - KMW - F090943, LPR471 - F090942, MAX 109 BRZ - F090803, MAX 109 CAF - F090802, MAX 109 MON - F090804, MAX 25 CHG - F090783, MAX 28/ALU - F0907855, MAX 35 BL - F090790, MAX 35 CRG - F090794, MAX 35 FW - 858703599260, MAX 35 GRN - F090792, MAX 35 ORG, MAX 35 PRL - F090786, MAX 35 RD - F095 RD, MAX 35 SL F090793, MAX 35 WH - F090788, MAX 38 BL - F090800, MAX 38 CPK - F090798, MAX 38 NBU - F090796, MAX 38 SL - 8587038990, MAX 38 SMG - F0090799, MAX ENGLAND - F090797, MAX25 RDG - F092592, MBI 510 S - F092598, MC50SS - F090941, MC60SS - F090940, MC61SS - F090946, MV44400944, MW A02 S - F090870, MW A11 S - F092597, MW A12 S - F090871, MW B10 S - F090877, MWF 210 B - F090914, MWF 210 S - F090915, MWH.


10. SUPPORT

For further assistance, technical support, or inquiries regarding product compatibility, please contact Whirlpool customer service or visit the official Whirlpool website. Always provide your product model number (481913428051) when seeking support.

Whirlpool Customer Service: Refer to your microwave oven's original manual or the Whirlpool website for contact information specific to your region.


© 2025 Whirlpool Corporation. All rights reserved.

Related Documents - 481913428051

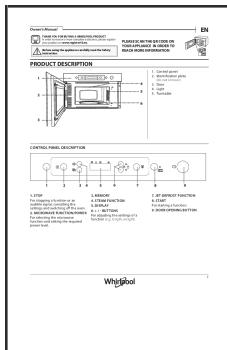

[Whirlpool MBNA910X Microwave Oven User Manual](#)

Official user manual for the Whirlpool MBNA910X Solo Microwave Oven. This guide details the appliance's features, including its 22L capacity, 750W power, and functions like microwave cooking, steam preparation, and Jet Defrost. It provides comprehensive instructions for operation, daily use, cleaning, maintenance, and troubleshooting. Model number: 859991659450.

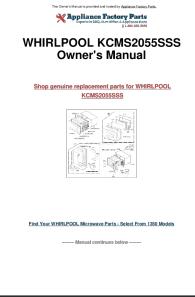	<p>Whirlpool YWMMS3130 Combination Microwave Oven Hood Quick Start Guide</p> <p>Quick start guide for the Whirlpool YWMMS3130 combination microwave oven hood, covering operating instructions, filter replacement, light replacement, and contact information.</p>
	<p>Whirlpool YWMMS3130 Combination Microwave Oven Hood Quick Start Guide</p> <p>Quick start guide for the Whirlpool YWMMS3130 combination microwave oven hood, providing operating instructions, maintenance steps for filters and lights, and contact information.</p>
	<p>Whirlpool KCMS2055SSS Owner's Manual and Parts</p> <p>Owner's manual and parts information for the Whirlpool KCMS2055SSS microwave oven, including dimensions and electrical requirements.</p>
	<p>Whirlpool WMH78519L Microwave Hood Combination Quick Reference Guide</p> <p>Quick reference guide for the Whirlpool WMH78519L Microwave Hood Combination, detailing functions like Convect Bake, Convect Roast, Air Fry, Grill, Steam/Simmer, Steam Clean, AccuPop, Defrost, Soften/Melt, and Auto Cook/Reheat.</p>
	<p>Whirlpool WMMS3330 Combination Microwave Hood Quick Start Guide</p> <p>This guide provides essential operating instructions, maintenance tips, and quick start information for the Whirlpool WMMS3330 combination microwave oven and hood, including filter replacement and light bulb changes.</p>