



Manuals.plus /

› BRANDT /

› BRANDT Refrigerator Drawer 48X8400 Instruction Manual

BRANDT 48X8400

BRANDT Refrigerator Drawer 48X8400 Instruction Manual

This instruction manual provides essential information for the safe and effective use of your BRANDT Refrigerator Drawer, model 48X8400. This genuine replacement part is designed to fit specific BRANDT and Thomson refrigerator models, ensuring proper storage and organization within your appliance. Please read this manual thoroughly before installation and use.

1. SAFETY INFORMATION

- Always disconnect power to the refrigerator before attempting any installation or maintenance.
- Handle the drawer with care to avoid damage or injury.
- Ensure the drawer is correctly seated to prevent it from falling out.
- Keep small children away from the refrigerator during installation.

2. PRODUCT OVERVIEW AND PARTS

The BRANDT Refrigerator Drawer 48X8400 is a replacement storage component for compatible refrigerators. It is designed to provide organized storage for various food items.



An image showing the BRANDT Refrigerator Drawer, model 48X8400. The drawer is transparent, allowing visibility of its contents, and features a sturdy design for refrigerator storage. Note: Product appearance may vary slightly from the original manufacturer's design due to potential updates.

Included Parts

- 1 x BRANDT Refrigerator Drawer (Model 48X8400)

3. INSTALLATION

1. **Prepare the Refrigerator:** Open the refrigerator door. If replacing an old drawer, remove it by pulling it out until it stops, then lifting slightly and pulling it free from the runners.
2. **Inspect the Area:** Clean the area where the new drawer will be installed, ensuring no debris obstructs the runners.
3. **Insert the New Drawer:** Align the new BRANDT 48X8400 drawer with the designated runners inside the refrigerator compartment. Gently push the drawer in until it slides smoothly into place. Ensure it is level and fully seated.
4. **Test Functionality:** Open and close the drawer a few times to confirm it slides freely and securely.

4. OPERATION

The refrigerator drawer is designed for storing fruits, vegetables, or other food items. Place items inside the drawer, ensuring not to overfill it, which could impede smooth operation or airflow within the refrigerator. Close the drawer completely after use to maintain optimal temperature and humidity.

5. MAINTENANCE AND CARE

- **Cleaning:** To clean the drawer, remove it from the refrigerator. Wash with mild soap and warm water. Rinse thoroughly and dry completely before returning it to the refrigerator. Avoid abrasive cleaners or harsh chemicals, as these can damage the plastic.
- **Inspection:** Periodically inspect the drawer for any cracks or damage. Replace if necessary to ensure proper function and hygiene.

6. TROUBLESHOOTING

- **Drawer does not slide smoothly:**
 - Check for obstructions on the runners or under the drawer. Remove any food particles or debris.
 - Ensure the drawer is correctly aligned with the runners.
- **Drawer does not fit:**
 - Verify that your refrigerator model is listed in the compatibility section of this manual. This drawer is a specific replacement part.
 - Ensure the drawer is oriented correctly.
- **Drawer is cracked or broken:**
 - The drawer may need to be replaced. Contact your supplier for a genuine replacement part.

7. SPECIFICATIONS

Model Number	48X8400
Brand	BRANDT
Item Weight	Approximately 2 kg
Application	Refrigerator
Part Type	Drawer
ASIN	B00D2DBC8
First Available Date	August 29, 2016

8. COMPATIBILITY

This BRANDT Refrigerator Drawer 48X8400 (Part Number: BF48X8400 9777956) is compatible with a range of BRANDT and Thomson refrigerator models. Please verify your appliance's model number against the list below to ensure compatibility.

Compatible models include, but are not limited to:

- **BRANDT:** C2710, C2820, C3010, C3020X, C3022, C3022X, C3023, C3220X, C3220Z/1, C3227X/1, C3320, C3520/1, CE3220/1, CE3220X/1, CE3221X/1, CE3230/1, CE3521X/1, CE3523X/1, CEN3010, CEN3010X, CEN3020, CEN3120X/1, CEN3121X/1, CEN3122/1, CEN3122X/1, CEN3123X/1, CEN3321, CN2910, CN2910X, CN2920/1, CN2920X/1, CN2920Z/1, CO26B.
- **THOMSON:** C3220, CE3320.
- **OLYMPUS:** C3020.

Note: This list is not exhaustive. Always cross-reference with your appliance's specific model number.

9. SUPPORT INFORMATION

For further assistance, technical advice, or to inquire about replacement parts, please contact your supplier. SemBoutique.com specializes in spare parts for household appliances and can provide support for troubleshooting and part identification.

