



Manuals.plus /

- › Bosch /
- › Bosch Home and Garden Replacement Blade Instruction Manual

Bosch F016800332

Bosch Home and Garden Replacement Blade Instruction Manual

Model: F016800332

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Bosch Home and Garden Replacement Blade, model F016800332. This sharpened metal blade is designed specifically for Bosch Rotak 32 LI and Ergoflex lawnmowers, ensuring optimal cutting performance and a clean finish for your lawn.

2. SAFETY INFORMATION

Always prioritize safety when handling and installing the lawnmower blade. Failure to follow these instructions may result in serious injury.

- **Disconnect Power:** Before any installation, maintenance, or cleaning, always ensure the lawnmower is unplugged from the power source or the battery is removed.
- **Wear Protective Gear:** Always wear heavy-duty gloves and eye protection when handling the blade. The blade edges are extremely sharp.
- **Stable Surface:** Perform all work on a flat, stable surface to prevent the lawnmower from tipping.
- **Blade Orientation:** Ensure the blade is installed with the correct cutting edge facing downwards. Refer to your lawnmower's specific manual for detailed diagrams.
- **Secure Fastening:** Ensure all bolts and nuts are tightened securely to the manufacturer's specifications after installation.
- **Inspect Before Use:** Before each use, inspect the blade for any signs of damage, cracks, or excessive wear. Replace immediately if damaged.

3. SETUP AND INSTALLATION

Follow these steps to safely replace the blade on your Bosch Rotak 32 LI or Ergoflex lawnmower.

1. **Prepare the Lawnmower:** Disconnect the power supply (unplug or remove battery). Tilt the lawnmower onto its

side, ensuring the carburetor (if applicable) is facing upwards to prevent fuel leakage.

2. **Secure the Blade:** To prevent the blade from turning while loosening the bolt, insert a block of wood between the blade and the mower deck.
3. **Remove Old Blade:** Using an appropriate wrench, loosen and remove the central bolt holding the blade in place. Carefully remove the old blade, noting any washers or spacers and their order.
4. **Clean the Area:** Clean any grass clippings or debris from the blade mounting area on the mower deck.
5. **Install New Blade:** Position the new Bosch replacement blade (Model F016800332) onto the shaft, ensuring the cutting edges are facing the correct direction (downwards towards the ground). Reinstall any washers or spacers in their original order.
6. **Tighten the Bolt:** Reinsert the central bolt and tighten it securely with the wrench. Ensure the blade is firmly seated and does not wobble. Refer to your lawnmower's manual for specific torque settings if available.
7. **Final Check:** Remove the wood block. Rotate the blade by hand to ensure it spins freely and is properly balanced.



Figure 3.1: The Bosch Rotak 32 LI Ergoflex Replacement Blade (Model F016800332). This image shows the full length of the metal blade with its central mounting holes and sharpened ends, designed for efficient grass cutting.



Figure 3.2: A close-up view of the Bosch Replacement Blade, highlighting the sharpened cutting edge and the "32 LI" marking, indicating its compatibility with specific Rotak lawnmower models. The image emphasizes the precision and quality of the blade's design.

4. OPERATING (BLADE PERFORMANCE)

A properly installed and sharp blade is crucial for optimal lawnmower performance and a healthy lawn.

- **Clean Cut:** A sharp blade provides a clean cut, which is essential for grass health. Dull blades tear the grass, leading to brown tips and increased susceptibility to disease.
- **Efficient Mowing:** A sharp blade cuts more efficiently, reducing the strain on your lawnmower's motor and potentially extending its lifespan.
- **Even Finish:** Expect a uniform and aesthetically pleasing lawn finish with a new, sharp blade.



Figure 4.1: A woman operating a Bosch lawnmower, demonstrating typical use. A sharp blade, like the F016800332, ensures efficient and clean cutting during lawn maintenance.

5. MAINTENANCE

Regular maintenance of your blade ensures longevity and consistent cutting quality.

- **Clean After Each Use:** After each mowing session, disconnect power and carefully clean grass clippings and debris from the blade and underside of the mower deck. This prevents buildup that can affect balance and cutting performance.
- **Inspect for Damage:** Regularly check the blade for nicks, bends, cracks, or excessive wear. Even small imperfections can lead to an unbalanced blade, causing vibration and potential damage to the lawnmower.
- **Sharpening:** While this is a replacement blade, blades can be sharpened. If you choose to sharpen the blade, ensure it is balanced afterwards. An unbalanced blade can cause excessive vibration and damage to the mower. It is often recommended to have blades professionally sharpened or replaced when dull.
- **Storage:** Store the blade (if removed) in a dry place to prevent rust.

6. TROUBLESHOOTING

If you experience issues with your lawnmower's cutting performance, consider the following:

Problem	Possible Cause	Solution
Uneven cut or ragged grass tips	Dull blade, bent blade, or incorrect blade installation.	Inspect blade sharpness and condition. Replace if dull or bent. Re-install blade ensuring correct orientation and tightness.
Excessive vibration during operation	Unbalanced blade (due to damage or improper sharpening), loose blade bolt.	Check blade for damage or debris buildup. Ensure blade bolt is securely tightened. If blade is damaged or severely unbalanced, replace it.
Lawnmower struggling to cut	Dull blade, cutting grass that is too long or wet.	Replace or sharpen blade. Avoid mowing excessively long or wet grass. Adjust cutting height if necessary.

7. SPECIFICATIONS

Key technical specifications for the Bosch Replacement Blade F016800332.

Manufacturer: Bosch

Product Dimensions (L x W x H): 9 x 4 x 36.5 cm

Model Number: F016800332

Color: Metal

Item Quantity: 1

Number of Pieces: 1

Measurement System: Metric

Usage: Wood cutting (*Note: This is likely a general category from the source data; the primary use is for grass cutting with compatible lawnmowers.*)

Included Components: 1 Blade

Batteries Included/Required: No

Weight: 325 Grams

ASIN: B00D2S66O6

8. WARRANTY AND SUPPORT

Bosch products are manufactured to high quality standards. For information regarding warranty coverage, technical support, or spare parts availability, please refer to the documentation provided with your Bosch lawnmower or visit the official Bosch Home and Garden website. Always use genuine Bosch replacement parts to ensure compatibility and maintain product warranty.

For further assistance, you may contact Bosch customer service through their official channels.

