

[Manuals.plus](#) /

› [Prestige](#) /

› Prestige Pressure Regulator Weight Whistle (Model Whistle 2) Instruction Manual

## Prestige Whistle 2

# Prestige Pressure Regulator Weight Whistle (Model Whistle 2) Instruction Manual

For Prestige Brand Pressure Cookers - Old Models

## INTRODUCTION

---

This manual provides instructions for the proper use and maintenance of your Prestige Pressure Regulator Weight Whistle, Model Whistle 2. This component is designed to fit various Prestige brand pressure cookers, ensuring safe and efficient pressure release during cooking. It is a crucial safety device that regulates the internal pressure of the cooker by releasing excess steam.



*Image of the Prestige Pressure Regulator Weight Whistle, featuring its silver base and black top, designed for pressure release.*

## SETUP

---

Proper installation of the pressure regulator weight whistle is essential for safe operation.

1. Ensure the pressure cooker vent tube on the lid is clean and free from any obstructions. Use a thin brush or pin if necessary to clear any blockages.
2. Carefully place the Prestige Pressure Regulator Weight Whistle onto the vent tube of your Prestige pressure cooker lid.
3. Verify that the whistle sits firmly and securely on the vent tube. It should not wobble excessively or feel loose. A proper fit ensures correct pressure regulation.

## OPERATING INSTRUCTIONS

---

Follow these steps for safe operation of your pressure cooker with the Prestige Pressure Regulator Weight Whistle:

1. After filling your pressure cooker with food and water, securely place the lid and lock it according to

your pressure cooker's specific instructions.

2. Ensure the Prestige Pressure Regulator Weight Whistle is correctly seated on the vent tube.
3. Place the pressure cooker on a heat source and begin heating.
4. As pressure builds inside the cooker, steam will start to escape through the vent tube. The weight whistle will then rise and emit a distinct 'whistle' sound, indicating that the desired cooking pressure has been reached.
5. The whistle will continue to emit steam intermittently, regulating the internal pressure throughout the cooking process. This is normal operation.
6. Always ensure the whistle is functioning correctly during cooking. If no steam is released or the whistle does not rise after a reasonable heating period, turn off the heat immediately and allow the cooker to cool completely before inspecting the vent tube and whistle for blockages.

## MAINTENANCE

---

Regular cleaning and inspection will prolong the life of your pressure regulator weight whistle and ensure safe operation.

- **Cleaning After Each Use:** Regularly clean the Prestige Pressure Regulator Weight Whistle after every use.
- **Washing:** Wash the whistle with warm, soapy water. Use a soft brush or sponge to clean all surfaces.
- **Rinsing:** Rinse thoroughly under running water to remove all soap residue.
- **Internal Passage:** Ensure the internal passage of the whistle is clear of any food particles, grease, or debris. A small, non-abrasive tool can be used carefully if blockages are present.
- **Inspection:** Periodically inspect the whistle for any signs of wear, damage, or deformation. If a rubber gasket is present, check it for cracks or hardening and replace if necessary.
- **Dishwasher Safe:** This item is dishwasher safe for convenient cleaning.

## TROUBLESHOOTING

---

If you encounter issues with your Prestige Pressure Regulator Weight Whistle, refer to the following common problems and solutions:

- **Whistle does not rise or emit steam:**  
*Possible Cause:* The vent tube on the cooker lid might be blocked, or the whistle itself is obstructed.  
*Solution:* Turn off the heat and allow the cooker to cool. Clean the vent tube and the whistle thoroughly. Ensure the lid is properly sealed on the cooker.
- **Excessive steam leakage from whistle base (not whistling):**  
*Possible Cause:* The whistle might not be seated correctly on the vent tube, or the vent tube itself is damaged or worn.  
*Solution:* Turn off the heat and allow the cooker to cool. Re-seat the whistle firmly. Inspect the vent tube for any damage or deformation that prevents a tight seal.
- **Whistle falls off during cooking:**  
*Possible Cause:* The whistle was not securely placed, or the vent tube/whistle connection is worn.  
*Solution:* Always ensure the whistle is securely placed on the vent tube before heating. If it continues to fall, the vent tube or the whistle may be worn and require replacement.

## SPECIFICATIONS

---

Key technical details for the Prestige Pressure Regulator Weight Whistle (Model Whistle 2):

- **Brand:** Prestige
- **Model Number:** Whistle 2
- **Material:** Stainless steel
- **Color:** Silver
- **Product Dimensions:** 1"D x 1"W x 2"H
- **Item Weight:** 0.3 Pounds
- **Dishwasher Safe:** Yes
- **Included Components:** Pressure Regulator



*The Prestige Pressure Regulator Weight Whistle shown alongside its product packaging, which states 'COMMON WEIGHT ONLY (NEW)' and 'Suitable for all Prestige Range Pressure Cookers'.*

## WARRANTY INFORMATION

---

No specific warranty information is provided with this individual replacement part. Please refer to your original Prestige pressure cooker's warranty documentation or contact Prestige customer support for details regarding replacement parts and their coverage.

## SUPPORT INFORMATION

---

For further assistance, inquiries, or to purchase additional replacement parts for your Prestige Pressure Regulator Weight Whistle, please contact Prestige customer service or visit the official Prestige website.

When contacting support, please be prepared to provide the model number 'Whistle 2' and your specific pressure cooker model for accurate and efficient assistance.