

Bose 359037-1300

Bose SoundLink Mini Bluetooth Speaker

INSTRUCTION MANUAL - MODEL: 359037-1300

INTRODUCTION

The Bose SoundLink Mini Bluetooth Speaker delivers full, natural sound from an ultra-compact design that fits in the palm of your hand. Engineered with a solid aluminum housing and a skid-proof rubber bottom, this speaker is built for durability and portability. It connects wirelessly to your smartphone, tablet, or other Bluetooth-enabled devices, allowing you to enjoy your music, videos, or games anywhere.



Figure 1: Bose SoundLink Mini Bluetooth Speaker

WHAT'S IN THE BOX

- Bose SoundLink Mini Bluetooth Speaker
- Charging Cradle
- Wall Charger/Power Supply

SETUP

Charging the Speaker

Before initial use, fully charge your SoundLink Mini speaker. The speaker can be charged using the included charging cradle or by plugging the wall charger directly into the speaker.



Figure 2: Charging via Cradle

Place the speaker onto the charging cradle to begin charging. The battery indicator light will show charging status.



Figure 3: Direct Charging

Alternatively, plug the wall charger directly into the auxiliary port on the speaker for charging.

A full charge typically takes about 3 hours and provides up to 7 hours of playtime.

Initial Bluetooth Pairing

The SoundLink Mini speaker connects wirelessly to your Bluetooth device. To pair:

1. Turn on the speaker by pressing the Power button (○).
2. Press and hold the Bluetooth button () until the Bluetooth indicator light blinks blue.

3. On your device (smartphone, tablet, etc.), enable Bluetooth and select "Bose Mini SoundLink" from the list of available devices.
4. Once connected, the Bluetooth indicator light will glow solid white. The speaker remembers the last six devices it was paired with for easier reconnection.

OPERATING THE SPEAKER

Controls

The top panel of the SoundLink Mini speaker features intuitive controls:



Figure 4: Speaker Controls

- **Power Button** (): Turns the speaker on or off.
- **Mute Button** (): Mutes or unmutes the audio.
- **Volume Down** (-): Decreases the volume.

- **Volume Up (+):** Increases the volume.
- **Bluetooth Button ():** Initiates Bluetooth pairing mode.
- **AUX Button (AUX):** Switches to auxiliary input mode for wired connections.

Audio Playback

Once connected via Bluetooth or auxiliary cable, audio from your device will play through the SoundLink Mini speaker. Control playback (play/pause, skip tracks) directly from your connected device.

Battery Life

The speaker's lithium-ion battery provides up to 7 hours of continuous playtime. The battery indicator light on the top panel provides a visual indication of the remaining charge.

MAINTENANCE

To ensure the longevity and optimal performance of your Bose SoundLink Mini speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use any solvents, chemicals, or abrasive cleaning agents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place.
- **Battery Care:** For best battery life, avoid fully discharging the battery frequently. Recharge it regularly.
- **Software Updates:** The USB port allows for software updates to ensure ongoing Bluetooth device compatibility. Check the Bose support website for available updates.

TROUBLESHOOTING

If you encounter issues with your SoundLink Mini speaker, try the following solutions:

- **No Power:** Ensure the speaker is charged. Connect it to the wall charger or charging cradle.
- **No Sound:** Check the volume level on both the speaker and your connected device. Ensure the correct input source (Bluetooth or AUX) is selected.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode (blinking blue light). Turn off and on Bluetooth on your device, then try pairing again. Clear the paired device list on your device and re-attempt pairing.
- **Distorted Sound:** Reduce the volume on both the speaker and your device. Ensure there are no obstructions between the speaker and the connected device, and that they are within the 30-foot range.
- **Speaker Not Responding:** Try resetting the speaker by pressing and holding the Power button for 10 seconds.

SPECIFICATIONS



Figure 5: Speaker Dimensions

Feature	Detail
Model Name	SoundLink Mini
Product Dimensions	2.3"D x 7.1"W x 2"H
Item Weight	1.47 Pounds
Connectivity Technology	Bluetooth
Wireless Range	Up to 30 feet
Battery Life	Up to 7 Hours
Charging Time	Approx. 3 Hours
Power Source	Battery Powered
Speaker Maximum Output Power	5 Watts

OFFICIAL PRODUCT VIDEOS

SoundLink Mini Technology Overview

Video Description: This video provides an overview of the SoundLink Mini's design and features, highlighting its compact size, wireless connectivity, and charging options.

SoundLink Mini Product Overview

Video Description: Learn about the advanced audio performance and proprietary technologies that deliver full-range sound, including deep lows, from this ultra-compact speaker.

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase accessories, please visit the official Bose website or contact Bose customer service. Keep your proof of purchase for warranty claims.

Bose Official Website: [Visit the Bose Store on Amazon](#)

© 2024 Bose Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why is my Bose SoundLink Mini Bluetooth Speaker not charging and showing a blinking red light?

A blinking red light on the Bose SoundLink Mini Bluetooth Speaker indicates that the battery is very low and requires immediate charging. If the speaker is not charging despite being connected to power, please...
[Read full answer](#)

How can I adjust the sound quality or EQ settings on the Bose SoundLink Mini Bluetooth Speaker?

The Bose SoundLink Mini Bluetooth Speaker does not have built-in equalizer (EQ) or sound quality adjustment controls on the device itself. The physical buttons on the speaker are limited to Power, Mute, Volume Up/Down,...
[Read full answer](#)

What does a flashing red or orange light on top of the Bose SoundLink Mini speaker mean?

On the Bose SoundLink Mini Bluetooth Speaker, the light on the top panel is the battery indicator. Its behavior indicates the following:
Blinking Red: This indicates that the battery is very low and needs to...
[Read full answer](#)

