

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Samsung](#) /

› [Samsung AA59-00772A Remote Control User Manual](#)

Samsung AA59-00772A

Samsung AA59-00772A Remote Control User Manual

Model: AA59-00772A

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Samsung AA59-00772A Remote Control. This remote is an authorized OEM part designed to work seamlessly with various Samsung brand models, ensuring reliable control over your television and connected devices.

PRODUCT OVERVIEW





Front view of the Samsung AA59-00772A Remote Control, showing the touchpad and various control buttons.



Angled view of the Samsung AA59-00772A Remote Control, highlighting its ergonomic design.

The Samsung AA59-00772A remote control features a sleek, ergonomic design with a central touchpad for intuitive navigation. It includes dedicated buttons for TV power, set-top box power, volume, channel, source selection, voice commands, and quick access to Smart Hub, Menu, and Guide functions.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Rear view of the remote control, showing the open battery compartment ready for two AA batteries.

2. Initial Pairing (if required)

Most Samsung Smart Remotes automatically pair with your Samsung TV when first used. If your remote does not respond, follow these steps:

1. Point the remote control at the TV's remote control sensor.
2. Press and hold the **RETURN/EXIT** button and the **GUIDE** button simultaneously for at least 3 seconds.
3. The TV screen will display a pairing message once the remote is successfully connected.

OPERATING INSTRUCTIONS

Basic Functions

- **Power (TV/STB):** Press the **TV Power** button to turn the TV on or off. Use the **STB Power** button for your set-top box.
- **Volume (VOL +/-):** Press the **VOL +** button to increase volume, and **VOL -** to decrease volume.
- **Channel (CH +/-):** Press the **CH +** button to go to the next channel, and **CH -** to go to the previous channel.
- **Source:** Press the **SOURCE** button to change the input source (e.g., HDMI, AV).
- **Return/Exit:** Press the **RETURN/EXIT** button to go back to the previous screen or exit a menu.

Advanced Functions

- **Touchpad Navigation:** Use the central touchpad to navigate menus and select items. Swipe your finger across the

pad to move the cursor, and press the center of the pad to confirm a selection.

- **Voice Command:** Press the **VOICE** button and speak clearly into the microphone located at the top of the remote to issue commands or search for content.
- **Smart Hub:** Press the **SMART HUB** button to access your TV's Smart Hub, where you can find apps, streaming services, and other smart features.
- **More:** Press the **MORE** button to display additional on-screen remote control buttons for functions not physically present on the remote.
- **Guide:** Press the **GUIDE** button to open the electronic program guide.
- **Menu:** Press the **MENU** button to access the TV's main settings menu.



A hand demonstrating the comfortable grip of the Samsung AA59-00772A Remote Control.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AA batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Remote is not responding or TV does not react.	<ul style="list-style-type: none">• Ensure there are no obstructions between the remote and the TV's sensor.• Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary.• Re-pair the remote with the TV by holding the RETURN/EXIT and GUIDE buttons for 3 seconds.
Touchpad is not precise or erratic.	<ul style="list-style-type: none">• Clean the touchpad surface with a soft, dry cloth.• Try resetting the remote: Hold down the GUIDE button and the RETURN/EXIT button together for 6 seconds. This can reset the original programming.• Ensure your TV's software is up to date.
Voice command is not working.	<ul style="list-style-type: none">• Ensure the remote is properly paired with the TV.• Speak clearly and directly into the microphone.• Check TV settings to ensure voice recognition is enabled.

SPECIFICATIONS

- **Model Number:** AA59-00772A
- **Dimensions:** 7 x 4 x 3 inches
- **Weight:** 4.8 ounces
- **Power Source:** 2 AA Batteries (required)
- **Connectivity:** Infrared (IR)
- **Controller Type:** Button Control with Touchpad
- **Special Feature:** Ergonomic Design
- **Max Supported Devices:** 1 (TV/STB)

WARRANTY AND SUPPORT

This Samsung AA59-00772A Remote Control is an authorized OEM part. For specific warranty information, please refer to the documentation provided with your Samsung television or contact Samsung customer support directly. Keep your purchase receipt as proof of purchase.

For further assistance or technical support, please visit the official Samsung support website or contact their customer service hotline. You may also find helpful resources and FAQs on the [Samsung Store on Amazon](#).