

GLOBO 10173

GLOBO 10173 Ceiling Fan Instruction Manual

Model: 10173

INTRODUCTION

Thank you for purchasing the GLOBO 10173 Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions carefully before assembly and use, and retain them for future reference.

The GLOBO 10173 is designed to provide efficient air circulation and illumination, featuring a durable metal construction, three speed settings, and an integrated light kit.

SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Ensure the power is disconnected at the main circuit breaker before installation, maintenance, or cleaning.
- The mounting structure must be capable of supporting the weight of the fan (approximately 7.14 kg).
- Do not operate the fan with damaged blades or housing.
- Avoid placing objects in the path of the fan blades.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Ceiling Fan Motor Housing (Nickel/Chrome)
- Fan Blades (MDF Beech, 5 blades)
- Opal Glass Light Shade
- Pull Chain Switch Assembly
- Mounting Bracket and Hardware

- Downrod (if applicable, not explicitly stated but common)
- Instruction Manual

SETUP AND INSTALLATION

Important: Electrical connections should only be made by a qualified electrician. Ensure power is OFF at the circuit breaker before starting.



Figure 1: GLOBO 10173 Ceiling Fan. This image shows the GLOBO 10173 ceiling fan, featuring a brushed nickel finish, opal glass light shade, and reversible MDF beech blades.

1. **Prepare the Mounting Location:** Ensure the ceiling joist or outlet box is securely fastened and can support the fan's weight.
2. **Install the Mounting Bracket:** Attach the mounting bracket to the ceiling outlet box using the provided screws and washers.
3. **Assemble the Downrod (if applicable):** Insert the downrod through the canopy and connect it to the motor housing. Secure with pins and screws.
4. **Hang the Fan:** Carefully lift the fan assembly and hang it on the mounting bracket hook.
5. **Make Electrical Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram (refer to the separate wiring diagram provided with the product). Ensure all connections are secure and insulated.
6. **Attach Fan Blades:** Securely attach each fan blade to the motor housing using the provided screws. Ensure all blades are balanced.
7. **Install Light Kit:** Connect the light kit wiring to the fan motor wiring. Attach the light kit assembly to the fan motor housing.
8. **Install Light Shade:** Secure the opal glass light shade to the light kit.
9. **Restore Power:** Once all connections are secure and components are assembled, restore power at the circuit breaker.

OPERATING INSTRUCTIONS

The GLOBO 10173 ceiling fan is operated using two pull chain switches.

- **Fan Speed Control:** One pull chain controls the fan speed. Pull the chain repeatedly to cycle through the three speed settings (High, Medium, Low) and Off.
- **Light Control:** The second pull chain controls the integrated light. Pull the chain to turn the light On or Off.

- **Directional Switch:** A slide switch on the motor housing allows you to change the direction of the fan blades (seasonal operation).
 - **Summer Mode (Counter-clockwise):** Pushes air down, creating a cooling breeze.
 - **Winter Mode (Clockwise):** Draws air up, circulating warm air trapped near the ceiling.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:**
 - Always disconnect power before cleaning.
 - Wipe the fan housing and blades with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - Clean the glass light shade with a mild glass cleaner.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tight and that the blades are not warped. Balancing kits are available if needed.
- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners on the fan and mounting bracket.
- **Light Bulb Replacement:** Ensure power is off. Allow bulbs to cool before replacing. Use bulbs of the correct type and wattage as specified for the light kit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power; Loose wiring; Faulty switch.	Check circuit breaker; Verify all electrical connections are secure; Test the pull chain switch.
Fan wobbles excessively	Loose blades or mounting; Unbalanced blades.	Ensure all blade screws and mounting screws are tight; Use a blade balancing kit.
Fan is noisy (humming/buzzing)	Loose screws; Resonating components (e.g., light kit); Incorrect installation.	Tighten all screws; Check for loose glass shades or other components; Ensure proper installation as per instructions.
Light does not work	Burnt-out bulb; Loose wiring; Faulty light switch.	Replace bulb; Check light kit wiring connections; Test the light pull chain switch.

SPECIFICATIONS

Feature	Detail
Brand	GLOBO
Model Number	10173
ASIN	B00D7FOWZO
Color	Silver
Dimensions (L x W x H)	130 x 130 x 49.5 cm
Weight	7.14 Kilograms

Feature	Detail
Power	1 Watt (Note: This value may refer to standby power or be a partial specification. Actual operational power for fan and light combined is typically higher.)
Voltage	230 Volts
Material	Metal (housing), MDF Beech (blades), Opal Glass (shade)
Number of Speeds	3
Noise Level	48.9 Decibels
Control Type	Pull Chain Switch
Mounting Type	Ceiling Mount

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details for the GLOBO 10173 Ceiling Fan is not provided in the available product data. Please refer to your purchase documentation or contact your retailer for warranty information and support services.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question