

Moulinex MK111E

Moulinex MK111E 10-Cup Rice Cooker Instruction Manual

Model: MK111E | Capacity: 1.8 Liters (10 Cups)

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW AND COMPONENTS

The Moulinex MK111E Rice Cooker is designed for convenient and efficient rice cooking. It features a durable aluminum body, a non-stick removable bowl, a transparent glass lid, and a simple mechanical switch for operation.



Figure 1: Moulinex MK111E Rice Cooker showing the main unit, removable non-stick inner pot, glass lid, measuring cup, and rice spatula.

1. **Main Unit:** Houses the heating element and control panel.
2. **Removable Non-Stick Inner Pot:** For cooking rice. Features measurement markings.
3. **Transparent Glass Lid:** Allows monitoring of the cooking process.
4. **Measuring Cup:** For accurate rice and water measurements.
5. **Rice Spatula:** For serving cooked rice without damaging the non-stick coating.
6. **Control Panel:** Includes a mechanical switch for cooking and indicators for "Cook" and "Keep Warm" modes.



Figure 2: Rear view of the Moulinex MK111E Rice Cooker, displaying the product label with model number and electrical specifications, and the power cord connection.

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and accessories.
2. **Cleaning:** Before first use, wash the inner pot, glass lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from water and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Ensure the voltage of your power outlet matches the specifications of the rice cooker (230V). Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice typically yields about 2-3 cups of cooked rice.
2. **Rinse Rice:** Rinse the rice thoroughly under cold water until the water runs clear. This helps remove excess starch.
3. **Add Rice and Water:** Place the rinsed rice into the non-stick inner pot. Add the appropriate amount of water. A common ratio is 1 cup of rice to 1.5-2 cups of water, but this may vary depending on the type of rice. Refer to the water level markings inside the inner pot for guidance.
4. **Place Inner Pot:** Ensure the exterior of the inner pot is dry, then place it into the main unit. Rotate it slightly to ensure good contact with the heating element.
5. **Close Lid:** Place the glass lid securely on the rice cooker.
6. **Start Cooking:** Plug in the rice cooker. Press the mechanical switch down to the "Cook" position. The "Cook" indicator light will illuminate.
7. **Automatic Keep Warm:** Once the rice is cooked, the cooker will automatically switch to the "Keep Warm" mode, and the "Keep Warm" indicator light will illuminate. This function keeps the rice warm until serving.
8. **Serve:** After the rice has rested in "Keep Warm" mode for 10-15 minutes (for best results), open the lid carefully to avoid steam burns. Use the provided rice spatula to fluff and serve the rice.

4.2 Keep Warm Function

The rice cooker automatically switches to the "Keep Warm" mode after cooking is complete. This feature maintains the rice at an optimal serving temperature without overcooking. You can manually switch to "Keep Warm" by ensuring the mechanical switch is in the up position (if it was previously in "Cook" mode and you want to stop cooking prematurely, then switch it up).

Note: Do not keep rice in "Keep Warm" mode for extended periods (e.g., more than 12 hours) as it may affect the texture and quality of the rice.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your rice cooker.

1. **Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Accessories:** Remove the inner pot, glass lid, measuring cup, and rice spatula. Wash these parts with warm water and mild dish soap. Rinse thoroughly and dry completely. The non-stick inner pot can also be cleaned in a dishwasher.
3. **Exterior of Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
4. **Avoid Damage:** To prevent damage to the non-stick coating of the inner pot, do not use metal utensils or sharp objects for cleaning or serving.
5. **Storage:** Ensure all parts are completely dry before reassembling and storing the rice cooker. Store in a cool, dry place.

6. TROUBLESHOOTING

If you encounter any issues with your rice cooker, please refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Rice not cooking / Cooker not turning on.	<ul style="list-style-type: none">◦ Not plugged in.◦ Power outlet malfunction.◦ Cook switch not pressed down.	<ul style="list-style-type: none">◦ Ensure the power cord is securely plugged into a working outlet.◦ Test the outlet with another appliance.◦ Press the mechanical switch down to the "Cook" position.
Rice is too dry or undercooked.	<ul style="list-style-type: none">◦ Insufficient water.◦ Lid not properly sealed.	<ul style="list-style-type: none">◦ Add more water next time (e.g., 1.75-2 cups water per 1 cup rice).◦ Ensure the lid is securely placed during cooking.
Rice is too mushy or overcooked.	<ul style="list-style-type: none">◦ Too much water.	<ul style="list-style-type: none">◦ Reduce water amount next time (e.g., 1.5 cups water per 1 cup rice).
Rice sticks to the bottom of the pot.	<ul style="list-style-type: none">◦ Not enough water.◦ Inner pot coating damaged.	<ul style="list-style-type: none">◦ Ensure correct water-to-rice ratio.◦ Avoid using metal utensils that can scratch the non-stick surface.

7. SPECIFICATIONS

Brand	Moulinex
Model Number	MK111E
Color	Grey
Capacity	1.8 Liters (equivalent to 10 cups of uncooked rice)
Power / Wattage	600 Watts
Voltage	230 Volts
Material	Aluminum (body), Non-stick (inner pot), Glass (lid)
Special Features	Automatic Keep Warm Function
Product Dimensions (L x W x H)	22.8 x 30 x 29.6 cm
Item Weight	10.8 Kilograms
Power Source	Corded Electric

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your

product or visit the official Moulinex website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance or inquiries, please contact Moulinex customer service.

You can visit the Moulinex store on Amazon: [Moulinex Store](#)