

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ProBasics](#) /

› [ProBasics Economy Rollator with Loop Brakes and Pouch User Manual](#)

ProBasics PB1024BL

ProBasics Economy Rollator with Loop Brakes and Pouch User Manual

MODEL: PB1024BL

INTRODUCTION

This manual provides essential instructions for the safe and effective use, setup, operation, and maintenance of your ProBasics Economy Rollator. Please read this manual thoroughly before using the device and retain it for future reference. Proper use ensures your safety and extends the life of your rollator.



Image: The ProBasics Economy Rollator, featuring a blue aluminum frame, black padded seat, and a black storage pouch beneath the seat. The rollator has four wheels and ergonomic loop brakes on the handles.

SAFETY INFORMATION

- Always ensure all locking mechanisms are engaged before use.
- Do not exceed the maximum weight capacity of 300 lbs.
- Use the rollator on flat, stable surfaces. Avoid uneven terrain, loose gravel, or slippery floors.
- Engage the parking brakes before sitting on the seat.

- Do not use the rollator to transport individuals or heavy objects.
- Regularly inspect the brakes, wheels, and frame for wear or damage. Do not use if damaged.
- Consult a healthcare professional to ensure this device is appropriate for your mobility needs.

SETUP

1. Unfolding the Rollator

Carefully remove the rollator from its packaging. Stand the rollator upright. Push the side frames outwards until they lock into place. Ensure the cross brace is fully extended and secured.

2. Adjusting Handle Height

Press the push-pins located on the side of each handle tube. Slide the handles up or down to the desired height. Release the push-pins and ensure they securely engage in the adjustment holes. The handles should be at a height that allows your elbows to be slightly bent when standing upright with your hands on the grips.

3. Attaching the Storage Pouch and Backrest

The rollator comes with a removable storage pouch and a padded backrest. Attach the storage pouch to the frame beneath the seat using its fasteners. Secure the padded backrest to the handle tubes as designed, ensuring it is stable for sitting.

OPERATING INSTRUCTIONS

1. Using the Brakes

- **To Slow Down or Stop:** Squeeze the loop brake handles upwards towards the handgrips. This applies pressure to the wheels, slowing or stopping the rollator.
- **To Engage Parking Brakes:** Push the loop brake handles downwards until they lock into place. This prevents the rollator from moving. Always engage parking brakes before sitting.
- **To Release Parking Brakes:** Pull the loop brake handles upwards until they disengage from the locked position.

2. Using the Seat

Ensure the rollator is on a level surface and the parking brakes are fully engaged. Turn around and slowly lower yourself onto the padded seat. Use the backrest for support. To stand up, lean forward, push off the seat, and release the parking brakes before moving.

3. Folding for Transport and Storage

To fold the rollator, first remove any items from the storage pouch. Pull the strap located on the seat upwards. The rollator will begin to fold inwards. Continue to push the sides together until it is fully collapsed. This compact design allows for easy storage and transportation.

MAINTENANCE

- **Cleaning:** Wipe the frame, seat, and handles with a damp cloth and mild soap. Do not use abrasive cleaners. Dry thoroughly.

- **Brakes:** Periodically check the brake cables and mechanisms for proper function and wear. Ensure the brakes engage and disengage smoothly. If adjustment is needed, consult a qualified technician.
- **Wheels:** Inspect wheels for wear and tear. Ensure they rotate freely and are free of debris.
- **Fasteners:** Regularly check all screws, bolts, and fasteners to ensure they are tight. Do not overtighten.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Brakes not engaging properly.	Loose brake cable or worn brake pads.	Check cable tension. If worn, contact support for replacement parts or professional adjustment.
Wheels not rolling smoothly.	Debris in wheel mechanism or worn bearings.	Clean wheels and axles. If problem persists, contact support.
Rollator feels unstable.	Frame not fully locked or loose fasteners.	Ensure frame is fully unfolded and locked. Tighten all visible fasteners.

SPECIFICATIONS

Feature	Detail
Model Number	PB1024BL
Color	Blue
Material	Aluminum
Seat Dimensions	14" W x 12" D
Handle Height Adjustment	31" - 37"
Width Between Handles	18"
Seat to Floor Height	21"
Product Weight	14 lb
Weight Capacity	300 lbs

WARRANTY INFORMATION

The ProBasics Economy Rollator comes with the following warranty:

- **Frame:** 3-year limited warranty.
- **Seat and Back:** 1-year limited warranty.

This warranty covers manufacturing defects under normal use. For warranty claims or detailed terms and conditions, please refer to the official ProBasics warranty documentation or contact customer support.

SUPPORT

For further assistance, questions, or to report issues with your ProBasics Economy Rollator, please contact ProBasics customer support. Keep your model number (PB1024BL) and purchase information readily available when contacting support.

Note: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a mobility aid.