

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Sonata](#) /

> [Sonata Quartz Analog Silver Dial Stainless Steel Strap Watch for Women-NS8080BM01 User Manual](#)

Sonata NR8080BM01

Sonata Quartz Analog Silver Dial Stainless Steel Strap Watch User Manual

Model: NR8080BM01

Brand: Sonata

1. INTRODUCTION

Thank you for choosing the Sonata Quartz Analog Watch. This manual provides essential information for the proper setup, operation, and maintenance of your new timepiece. Please read it thoroughly to ensure optimal performance and longevity of your watch.





Image 1.1: Front view of the Sonata Quartz Analog Watch (Model: NR8080BM01).

2. PRODUCT COMPONENTS

Your Sonata watch consists of several key components:

- **Dial:** The face of the watch, featuring a silver rectangular design with floral patterns and stone-studded hour markers.
- **Hands:** Hour, minute, and second hands for time indication.
- **Crown:** A small knob located on the side of the watch case, used for setting the time.
- **Case:** The protective housing for the watch movement, made of stainless steel.
- **Strap:** The band that secures the watch to your wrist, made of dual-tone stainless steel with interlocking chain links.
- **Clasp:** A deployment clasp-type buckle for secure fastening and easy removal of the watch.





Image 2.1: Angled view showing the watch dial, crown, and strap details.

3. SETUP

3.1 Initial Setup

Your watch is designed for immediate use. Before wearing, ensure the time is correctly set.

3.2 Adjusting the Strap

The stainless steel bracelet strap is designed with interlocking chain links. For optimal comfort and fit, the strap may need to be adjusted by adding or removing links. It is recommended to have this adjustment performed by a professional watchmaker or jeweler to prevent damage to the strap or clasp mechanism.



Image 3.1: Watch on wrist, illustrating typical wear.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

To set the time on your Sonata Quartz Analog Watch:

1. **Pull out the Crown:** Gently pull the crown (the small knob on the side of the watch case) outwards until you feel a click. This will stop the second hand.
2. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
3. **Push in the Crown:** Once the correct time is set, push the crown back into its original position. The second hand will resume movement.



Image 4.1: Side view of the watch, indicating the crown's position.

5. CARE AND MAINTENANCE

5.1 Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and strap regularly with a soft, dry cloth to remove dust and dirt.
- For stubborn grime, a slightly damp cloth can be used, followed immediately by a dry cloth.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

5.2 Water Resistance

Your Sonata watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for daily use and can withstand splashes, rain, or brief immersion in water, such as washing dishes. It is *not* suitable for swimming, diving, or showering, as prolonged exposure to water pressure or steam can compromise the seals.

5.3 Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure the water resistance is maintained and to prevent damage to the internal components.

6. TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

- **Watch Not Running:**
 - Possible Cause:* Battery depleted.
Solution: Replace the battery (recommended by a professional).
 - Possible Cause:* Crown is pulled out.
Solution: Push the crown back into its normal operating position.

- **Time is Inaccurate:**

Possible Cause: Time not set correctly.

Solution: Refer to Section 4.1 "Setting the Time" to reset.

Possible Cause: Battery low.

Solution: Replace the battery.

- **Condensation Under Dial:**

Possible Cause: Exposure to extreme temperature changes or water ingress.

Solution: Immediately take the watch to a professional watch service center. Do not attempt to dry it yourself.

For issues not listed here, please contact Sonata customer support or an authorized service center.

7. SPECIFICATIONS

Detailed technical specifications for your Sonata Quartz Analog Watch (Model: NR8080BM01):

Feature	Detail
Model Number	NR8080BM01
Display Type	Analog
Movement	Quartz
Case Material	Stainless Steel
Case Shape	Rectangular
Case Thickness	7.10 mm
Case Diameter	22 Millimetres
Dial Color	Silver
Dial Glass Material	Mineral
Strap Material	Stainless Steel
Strap Color	Silver, Gold (Dual-tone)
Water Resistance Depth	30 meters (3 ATM)
Item Weight	60 g
Product Dimensions	11.4 x 7.59 x 7.29 cm



Image 7.1: Watch dimensions and size comparison.

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

Your Sonata Quartz Analog Watch comes with a **24 Months Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from accidents, improper use, unauthorized repairs, or normal wear and tear.

Please retain your purchase receipt as proof of purchase for warranty claims.

8.2 Customer Support

For any inquiries, service requests, or warranty claims, please contact Sonata customer support through their official channels. Refer to the packaging or Sonata's official website for the most current contact information.