

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Esperanza](#) /

› [Esperanza EA129 USB 2.0 All-in-One Card Reader User Manual](#)

Esperanza EA129

Esperanza EA129 USB 2.0 All-in-One Card Reader User Manual

Model: EA129

INTRODUCTION

This manual provides instructions for the Esperanza EA129 USB 2.0 All-in-One Card Reader. This device allows you to read and write data to various types of memory cards, including SD, microSD, MS, and xD cards, using a standard USB 2.0 connection to your computer.



Image: Esperanza EA129 USB 2.0 All-in-One Card Reader. This image displays the compact, black card reader with a silver accent, highlighting the various memory card slots (microSD, SD/MMC, MS, xD) and the 'ALL IN 1' branding.

SETUP

1. Connect to Computer:

Locate an available USB port on your personal computer. Insert the USB connector of the Esperanza EA129 card reader firmly into the USB port. The device is plug-and-play, meaning no additional drivers are typically required for most operating systems (Windows, macOS, Linux).

2. Driver Installation (Automatic):

Upon initial connection, your operating system should automatically detect the device and install any necessary generic drivers. A notification may appear indicating that the device is ready for use.

OPERATING INSTRUCTIONS

1. Inserting a Memory Card:

Identify the correct slot for your memory card type (SD, microSD, MS, or xD). Gently insert the memory card into its corresponding slot until it clicks into place or is fully seated. Ensure the card is inserted in the correct orientation to avoid damage.

- For microSD cards, these often fit into a dedicated smaller slot. The EA129 typically has a dedicated microSD slot.
- The device supports various card types as indicated by the labels on the reader itself.

2. Accessing Data:

Once the memory card is inserted and recognized, it will appear as a removable drive in your computer's file explorer (e.g., "This PC" on Windows, "Finder" on macOS). Double-click the drive icon to browse the contents of the memory card. You can then copy, move, or delete files as needed.

3. Safely Removing the Device:

Before disconnecting the card reader or removing a memory card, it is crucial to safely eject the device from your operating system. This prevents data corruption. On Windows, use the "Safely Remove Hardware and Eject Media" icon in the system tray. On macOS, drag the drive icon to the Trash or use the Eject option in Finder.

MAINTENANCE

• Cleaning:

To clean the exterior of the card reader, use a soft, dry, lint-free cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the device. Ensure no dust or debris accumulates in the card slots or USB connector.

• Storage:

When not in use, store the card reader in a clean, dry environment, away from extreme temperatures, direct sunlight, and excessive humidity. Protect the USB connector and card slots from dust and physical damage.

TROUBLESHOOTING

• Device Not Recognized:

- Try connecting the card reader to a different USB port on your computer.
- Ensure the USB connection is secure.
- Restart your computer and try again.
- Check your computer's Device Manager (Windows) or System Information (macOS) to see if the device is listed, even with an error.

• Memory Card Not Reading:

- Ensure the memory card is fully and correctly inserted into the appropriate slot.
- Check if the memory card is damaged or dirty. Try cleaning the card's contacts with a soft cloth.
- Test the memory card in another device, if possible, to determine if the card itself is faulty.
- Ensure the memory card is not write-protected (some SD cards have a small lock switch).

• Slow Transfer Speeds:

- Verify that you are connected to a USB 2.0 port. While the device is USB 2.0, older USB 1.1 ports will result in significantly slower speeds.
- The actual transfer speed depends on the speed class of your memory card. Higher class cards (e.g., Class 10, UHS-I) will offer better performance.
- Ensure your computer's USB drivers are up to date.

SPECIFICATIONS

Model Name:	Esperanza EA129 USB 2.0 All-in-One Card Reader
Brand:	Esperanza
Connectivity Technology:	USB 2.0
Compatible Devices:	Personal Computer
Supported Media Types:	SD, microSD, MS (Memory Stick), xD Picture Card
Data Transfer Rate:	Up to 480 Mbps (USB 2.0 standard speeds)
Color:	Black (with silver accent)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. Esperanza typically provides warranty details with the product packaging or on their official website.