

[manuals.plus](#) /

› [Cuisinart](#) /

› [Cuisinart CHM-BTR Replacement Beaters Instruction Manual](#)

## Cuisinart CHM-BTR

# Cuisinart CHM-BTR Replacement Beaters Instruction Manual

Model: CHM-BTR

## 1. INTRODUCTION

Thank you for choosing Cuisinart CHM-BTR Replacement Beaters. These genuine OEM parts are engineered to provide a precise fit and optimal performance for your compatible Cuisinart hand mixer. This manual provides detailed instructions for proper installation, use, and care to ensure consistent and efficient mixing results.



Image: A pair of Cuisinart CHM-BTR replacement beaters, made of stainless steel, designed for hand mixers.

## 2. COMPATIBILITY

These replacement beaters are designed specifically for the following Cuisinart hand mixer models:

- CHM-3, CHM-3R
- CHM-5, CHM-5SS
- CHM-7, CHM-7PK
- HM-50, HM-50BK, HM-50BM, HM-50CH, HM-50CY, HM-50KL, HM-50PAP, HM-50PCH, HM-50PF, HM-50SP, HM-50WM
- HM-70, HM-70MR, HM-70R
- HM-90BCS, HM-90S

**Important: These beaters will not fit other hand mixer models, even if they appear similar. Please verify your hand mixer model number before use to avoid compatibility issues.**

## 3. SETUP AND INSTALLATION

Before installing the beaters, ensure your hand mixer is unplugged from the power outlet. The CHM-BTR

beaters feature two different bayonet designs to ensure correct insertion into the mixer slots. One beater has a small ring or collar on its shaft, while the other does not. Match the beater with the ring to the larger opening on the mixer, and the plain beater to the smaller opening.

1. Ensure the hand mixer is turned off and unplugged.
2. Identify the two beaters: one with a ring/collar on the shaft, and one without.
3. Locate the corresponding slots on the underside of your Cuisinart hand mixer. The slot for the beater with the ring is typically larger.
4. Insert each beater firmly into its correct slot until it clicks into place. Gently tug on the beaters to ensure they are securely locked.

Video: A demonstration of installing and using Cuisinart CHM Series Hand Mixer Beaters, highlighting the different bayonet designs for correct placement.

Video: A visual guide to the ANTOBLE Beater Replacements for Cuisinart Hand Mixer HM, showing the two different bayonets for proper fit.

## 4. OPERATING INSTRUCTIONS

Once the beaters are securely installed, plug your hand mixer into a power outlet. Refer to your specific Cuisinart hand mixer's instruction manual for detailed operating procedures, including speed settings and recommended mixing times for various ingredients. These beaters are designed for general mixing tasks such as:

- Mixing batters for cakes, cookies, and brownies.
- Whipping cream or egg whites.
- Blending ingredients for sauces and dressings.

Always start mixing on the lowest speed to prevent splattering and gradually increase the speed as needed.

## 5. MAINTENANCE AND CARE

Proper cleaning and maintenance will extend the life of your replacement beaters.

1. Always unplug the hand mixer before removing the beaters.
2. To remove beaters, press the eject button (refer to your hand mixer manual for its location).
3. The Cuisinart CHM-BTR Replacement Beaters are **Dishwasher Safe**. For best results, place them in the utensil basket of your dishwasher.
4. Alternatively, wash them by hand with warm, soapy water and a soft cloth or sponge. Rinse thoroughly and dry immediately to prevent water spots.
5. Store the clean, dry beaters in a safe place to prevent bending or damage.

## 6. TROUBLESHOOTING

If you encounter issues with your replacement beaters, consider the following:

- **Beaters do not fit:** Double-check the compatibility list in Section 2. Ensure you are inserting the correct beater into the corresponding slot (one with a ring, one without). Do not force beaters into the wrong slots.

- **Beaters are loose or fall out:** Ensure they are fully inserted and clicked into place. If they continue to be loose, inspect the mixer's beater slots for any damage or wear.
- **Unusual noise or vibration:** Ensure both beaters are correctly installed and not bent. If the issue persists, discontinue use and consult your hand mixer's troubleshooting guide or Cuisinart customer support.

## 7. SPECIFICATIONS

---

- **Model Number:** CHM-BTR
- **Brand:** Cuisinart
- **Material:** Durable High Quality Stainless Steel
- **Product Dimensions:** Approximately 7"L x 9"W (overall, when installed)
- **Item Weight:** 1.6 ounces (per pair)
- **Dishwasher Safe:** Yes

## 8. WARRANTY AND SUPPORT

---

For warranty information regarding your Cuisinart hand mixer and its accessories, please refer to the original product manual that came with your hand mixer. For further assistance or to inquire about replacement parts, please contact Cuisinart customer support directly.

Thank you for choosing Cuisinart.