

EXTEL 060720

Extel Loomax Wireless MP3 Chime User Manual

MODEL: 060720

1. INTRODUCTION AND OVERVIEW

The Extel Loomax Wireless MP3 Chime is a versatile and mobile doorbell system designed for convenience and personalization. This device features a long wireless range of up to 200 meters in open field conditions, operating on a 433.92 MHz frequency. It offers 6 selectable melodies and the unique ability to play personal MP3 music, allowing you to customize your doorbell sound. The chime unit is designed for flexible placement, capable of being used as a desk unit or mounted on a wall. It includes a visual flash indicator for additional alerts and comes with a USB cable for power and MP3 transfer.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Extel Loomax Wireless MP3 Chime Unit
- Wireless Doorbell Push Button (Transmitter)
- USB Cable
- USB Power Adapter
- CR 2032 Lithium Manganese Dioxide Battery (pre-installed in transmitter or separate)
- Mounting Hardware (screws, wall plugs)



This image displays the complete Extel Loomax Wireless MP3 Chime kit. On the right is the sleek black chime unit with a speaker grille and three blue indicator lights. To its left, a white wireless doorbell push button is shown. Below these main components are the black USB power adapter and the USB cable, essential for powering and customizing the chime unit.

3. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in injury or damage to the device.

- Do not expose the device to water, moisture, or extreme temperatures.
- Do not attempt to disassemble, repair, or modify the device. This will void the warranty.
- Use only the provided USB cable and power adapter, or a compatible certified power source.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of batteries according to local regulations. Do not incinerate.
- Ensure proper ventilation around the chime unit during operation.

4. SETUP

4.1. Unpacking

Carefully remove all components from the packaging and inspect them for any signs of damage. Retain the packaging for future storage or transport.

4.2. Transmitter Battery Installation

The doorbell push button (transmitter) requires one CR 2032 Lithium Manganese Dioxide battery. This battery is typically included. To install or replace the battery:

1. Locate the battery compartment on the back or side of the transmitter.
2. Open the compartment cover (you may need a small screwdriver or coin).
3. Insert the CR 2032 battery with the positive (+) side facing up, observing the polarity markings.
4. Close the battery compartment cover securely.

4.3. Chime Unit Power Connection

To power the chime unit:

1. Connect the small end of the provided USB cable to the USB port on the chime unit.
2. Connect the larger end of the USB cable to the USB power adapter.
3. Plug the USB power adapter into a standard electrical outlet.
4. Alternatively, the chime unit can be powered by connecting the USB cable to a compatible USB port on a computer or other power source.

4.4. Placement and Mounting

The chime unit offers flexible placement options:

- **Desk Placement:** Simply place the chime unit on any flat, stable surface.
- **Wall Mounting:** For wall mounting, use the provided screws and wall plugs. Choose a location that is within the optimal wireless range of the transmitter and away from major obstructions. Mark the desired drilling points, drill holes, insert wall plugs, and secure the chime unit using the screws.

For the doorbell push button (transmitter), choose a suitable location near your door. Ensure it is protected from direct heavy rain if placed outdoors. Use the provided adhesive or screws for mounting.

5. OPERATING INSTRUCTIONS

5.1. Pairing (If Necessary)

The chime unit and transmitter are typically pre-paired from the factory. If they do not connect automatically, or if you are adding an additional transmitter, follow these steps:

1. Ensure the chime unit is powered on.
2. Locate the pairing button on the chime unit (refer to the device diagram if available).
3. Press and hold the pairing button for a few seconds until an indicator light flashes or a specific sound is heard, indicating it's in pairing mode.
4. Within a few seconds, press the doorbell push button (transmitter).
5. The chime unit should ring or indicate successful pairing. If not, repeat the process.

5.2. Melody Selection

The chime unit comes with 6 pre-installed melodies. To cycle through and select a melody:

- Locate the melody selection button on the chime unit.
- Press the button repeatedly to hear the available melodies.
- Stop pressing when you hear your desired melody. The chime unit will save this selection.

5.3. Personal MP3 Music Playback

One of the key features of the Extel Loomax is the ability to use your own MP3 files as doorbell chimes:

1. Connect the chime unit to your computer using the provided USB cable.
2. The chime unit will be recognized as a removable storage device (e.g., a USB drive).
3. Open the drive and locate the designated folder for MP3 files (e.g., 'MP3' or 'Ringtones').
4. Copy your desired MP3 audio files into this folder. Ensure the files are standard MP3 format.
5. Safely eject the chime unit from your computer.
6. The chime unit will now play your custom MP3s when the doorbell is pressed. You may need to cycle through melodies to find your custom MP3s.

5.4. Volume Adjustment

While specific volume controls are not detailed, the chime unit typically has a fixed volume or a button to cycle through volume levels. Refer to the device for any marked volume buttons.

5.5. Flash Function

In addition to the audible chime, the unit features a visual flash indicator. This light will illuminate when the doorbell is pressed, providing an extra alert, which is particularly useful in noisy environments or for individuals with hearing impairments.

6. MAINTENANCE

6.1. Cleaning

To maintain the appearance and functionality of your chime:

- Wipe the chime unit and transmitter with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals, as these can damage the surface.
- Avoid spraying liquids directly onto the device.

6.2. Transmitter Battery Replacement

If the doorbell push button's range decreases significantly or it stops functioning, the CR 2032 battery may need replacement. Follow the steps outlined in Section 4.2 for battery installation.

6.3. Storage

If you plan to store the device for an extended period, disconnect the chime unit from power and remove the battery from the transmitter. Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Extel Loomax Wireless MP3 Chime, please refer to the following common problems and solutions:

- **No Sound/Chime:**

- Ensure the chime unit is properly connected to a power source and turned on.
 - Check if the transmitter battery is correctly installed and not depleted. Replace if necessary.
 - Verify that the chime unit and transmitter are within the effective wireless range.
 - If the units are new or have been reset, try re-pairing them as described in Section 5.1.
- **Poor Wireless Range:**
 - Ensure there are no significant obstacles (e.g., thick walls, metal structures, large appliances) between the transmitter and the chime unit that could interfere with the signal.
 - Replace the transmitter battery, as a low battery can reduce range.
 - Relocate the chime unit to a more central position or closer to the transmitter.
- **Personal MP3s Not Playing:**
 - Ensure your MP3 files are correctly transferred to the designated folder on the chime unit's storage.
 - Verify that the audio files are in a standard MP3 format. Other formats may not be supported.
 - Check if the chime unit is in the correct mode to play custom MP3s (you may need to cycle through melodies).

8. SPECIFICATIONS

Feature	Specification
Model Number	060720
Brand	EXTEL
Manufacturer	CFIEX
Wireless Frequency	433.92 MHz
Wireless Range	Up to 200m (open field)
Chime Unit Power Supply	USB Powered
Transmitter Battery	1 x CR 2032 Lithium Manganese Dioxide (included)
Melodies	6 selectable + personal MP3 support
Color	Black
Item Weight	349 g
ASIN	B00DCPBIN8
Date First Available	28 Oct. 2013

9. WARRANTY AND SUPPORT






For specific warranty terms and conditions, please refer to the warranty card or documentation included with your purchase. If you require technical assistance, troubleshooting beyond this manual, or have questions



regarding your product, please contact Extel customer service through their official website or the contact information provided in your product packaging.

Please retain your proof of purchase for any warranty claims.

© 2023 EXTEL. All rights reserved.

Related Documents - 060720

	<p>Extel Mood 083701 Smart Access: Installation Guide & User Manual</p> <p>Comprehensive installation and user guide for the Extel Mood 083701 Smart Access wireless doorbell and smart home device. Learn about setup, features, maintenance, and specifications.</p>
	<p>EXTEL WAVE Connected Videophone and Intercom Panel Installation and User Manual</p> <p>Comprehensive guide for installing and using the EXTEL WAVE connected videophone and intercom panel, including setup, features, technical specifications, and safety instructions.</p>
	<p>Extel Wave 3 : Guide d'installation et d'utilisation du visiophone connecté avec lecteur d'empreintes digitales</p> <p>Découvrez le guide complet d'installation et d'utilisation du visiophone connecté sans fil Extel Wave 3 avec lecteur d'empreintes digitales (Réf. 720337). Apprenez à installer, configurer et utiliser toutes les fonctionnalités de votre interphone vidéo.</p>
	<p>EXTEL AUDIOGLASS 651 & 652 Wireless Door Phone: Installation and User's Guide</p> <p>Comprehensive installation and user guide for the EXTEL AUDIOGLASS 651 and 652 wireless door phone systems. Covers component descriptions, installation steps, specifications, troubleshooting, and programming.</p>
	<p>Extel Wave 720313 Video Intercom System: Installation and User Manual</p> <p>This comprehensive guide details the installation, operation, and technical specifications of the Extel Wave 720313 video intercom system. It covers kit contents, component descriptions, wiring, mounting, smartphone app integration, advanced settings, warranty, and safety precautions.</p>

<div data-bbox="119 89 311 134"><div>EXTEL</div><div></div></div> <div data-bbox="119 152 236 208"><p>Klavy 3 Clavier de codage Code keypad</p></div> <div data-bbox="119 219 300 336"></div> <div data-bbox="119 347 215 414"><p>Guide d'installation et d'utilisation Installationsanleitung Handbook en getuigdenghe Handboken om de gebruiksaanwijzing Käyttö- ja asennusohje Manual de instalare și utilizare Manual de instalação e utilização Manual de uso e instalação Область применения и инструкция</p></div> <div data-bbox="295 398 300 414"><p>12</p></div>	<div data-bbox="335 179 1018 212"><p>EXTEL Klavy 3 Code Keypad: Installation and User Manual</p></div> <div data-bbox="335 219 1449 331"><p>Comprehensive guide for the EXTEL Klavy 3 code keypad, covering installation, programming, safety guidelines, and usage. Learn how to connect, configure, and operate the device for secure access control.</p></div>
---	---