

Zenith DVP615

Zenith DVP615 Portable 7-inch LCD DVD Player User Manual

Model: DVP615

1. INTRODUCTION

Thank you for purchasing the Zenith DVP615 Portable 7-inch LCD DVD Player. This device is designed for convenient entertainment on the go, offering multi-format disc playback and a vibrant widescreen display. This manual provides essential information for the safe and efficient operation of your new portable DVD player.

2. SAFETY INFORMATION

- **Power Source:** Use only the supplied AC adapter (Model DPAC1) or the specified rechargeable battery pack (Model SPB125). Using unauthorized power sources may damage the unit and void the warranty.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or immerse it in water. If liquid enters the unit, disconnect power immediately and contact customer support.
- **Ventilation:** Ensure proper ventilation. Do not block ventilation openings. Avoid placing the unit on soft surfaces that may obstruct airflow.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Disc Handling:** Handle discs by their edges. Do not touch the playback surface. Keep discs clean and free from scratches.
- **Laser Safety:** This product utilizes a Class 1 laser. Do not open the player's disc compartment while a disc is spinning. Avoid direct exposure to the laser beam.
- **Battery Safety:** Do not disassemble, crush, or puncture the battery pack. Do not expose to high temperatures or fire. Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Zenith DVP615 Portable 7-inch LCD DVD Player
- AC Power Adapter (Model DPAC1)

- Rechargeable Battery Pack (Model SPB125)
- Remote Control
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your portable DVD player.



Figure 4.1: Zenith DVP615 Portable DVD Player with disc tray open, showing the disc spindle and laser lens. Control buttons for playback and display settings are visible on the right side of the player's base.



Figure 4.2: Top view of the Zenith DVP615 Portable DVD Player when closed, displaying the Zenith logo and "PORTABLE DVD/CD PLAYER" text.



Figure 4.3: Side view of the Zenith DVP615 Portable DVD Player, showing the power switch, power indicator, and playback control buttons (Play/Pause, Stop, Skip Forward, Skip Backward).

4.1. Main Unit Features

- **7-inch Widescreen LCD:** Provides a clear and vibrant display for your media.
- **180° Swivel and Flip Display:** Allows for flexible viewing angles.
- **Disc Compartment:** For inserting DVDs and CDs.
- **Control Buttons:** Power, Play/Pause, Stop, Skip, Menu, Title, Angle, LCD Mode, Setup, Color/Bright.
- **Ports:** DC In, AV Out, Headphone Jack.

4.2. AC Power Adapter (DPAC1)



Figure 4.4: Close-up of the Zenith AC adapter (Model DPAC1), showing input (100-120V~27W 50/60Hz) and output (9.5V \approx 2.5A) specifications.

The AC adapter is used to power the DVD player from a wall outlet and to charge the rechargeable battery pack.

4.3. Rechargeable Battery Pack (SPB125)



Figure 4.5: Top view of the Zenith rechargeable battery pack (Model SPB125), showing its specifications (DC 7.4V 2000mAh) and caution labels regarding proper use and disposal.



Figure 4.6: Bottom view of the Zenith rechargeable battery pack, illustrating the "PUSH" button for release and attachment mechanism.

The battery pack provides portable power for up to 3 hours of continuous playback.

5. SETUP

5.1. Attaching the Battery Pack

1. Align the battery pack with the battery compartment on the underside of the DVD player.
2. Slide the battery pack into place until it clicks securely. Ensure the release latches are engaged.

5.2. Charging the Battery / Connecting to AC Power

1. Connect the small plug of the AC adapter to the DC IN jack on the side of the DVD player.

2. Plug the AC adapter into a standard wall outlet.
3. The power indicator light will illuminate, indicating that the unit is receiving power and the battery is charging (if attached). Allow sufficient time for a full charge before initial portable use.

6. OPERATING INSTRUCTIONS

6.1. Powering On/Off

- To power on, slide the POWER switch to the 'ON' position. The LCD screen will light up.
- To power off, slide the POWER switch to the 'OFF' position.

6.2. Inserting and Removing Discs

1. Gently press the OPEN button to open the disc compartment lid.
2. Place the disc (DVD, CD, etc.) onto the spindle with the label side facing up. Press down gently on the center of the disc until it clicks into place.
3. Close the disc compartment lid firmly until it latches.
4. To remove a disc, open the lid, gently press the spindle to release the disc, and lift it out by the edges.

6.3. Basic Playback

- **Play/Pause** (▶ / ||): Press to start playback or pause a playing disc. Press again to resume.
- **Stop** (■): Press to stop playback. Pressing once will stop at the current position. Pressing twice will return to the beginning of the disc.
- **Skip** (◀◀ / ▶▶): Press to skip to the previous or next chapter/track. Hold to fast reverse or fast forward.
- **Menu**: Access the disc's main menu during DVD playback.
- **Title**: Access the disc's title menu during DVD playback.
- **Angle**: If available on the DVD, press to change the viewing angle.

6.4. Display Adjustments

- **LCD Mode**: Press to cycle through different display modes (e.g., Standard, Bright, Soft).
- **Color/Bright**: Press to adjust the color saturation or brightness of the LCD screen.

6.5. Multi-Format Playback

The DVP615 supports various disc formats:

- **DVD-Video**: Standard movie DVDs.
- **DVD±R/DVD±RW/DVD±R Double Layer**: Recordable DVD formats.
- **Audio CD/CD-R/CD-RW**: Standard audio CDs and recordable CD formats.
- **WMA/JPEG/MP3**: Digital audio (WMA, MP3) and image (JPEG) files burned onto compatible discs.

6.6. Using the Remote Control

The included card-type remote control provides convenient access to all functions from a distance. Point the remote control directly at the infrared sensor on the DVD player.

7. MAINTENANCE

7.1. Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- For the LCD screen, use a soft, lint-free cloth specifically designed for electronics screens.
- Never use liquid cleaners directly on the screen.

7.2. Cleaning Discs

- Wipe discs gently from the center outwards with a soft, lint-free cloth.
- Do not use harsh chemicals or abrasive materials.

7.3. Storage

- When not in use for extended periods, store the DVD player in a cool, dry place.
- Remove the battery pack if storing for a very long time to prevent potential leakage.

8. TROUBLESHOOTING

If you encounter problems with your DVD player, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
No power	AC adapter not connected; Battery discharged; Power switch off.	Ensure AC adapter is securely connected and plugged in; Charge battery; Slide power switch to 'ON'.
No disc detected	Disc inserted incorrectly; Disc is dirty or scratched; Incompatible disc format.	Reinsert disc correctly; Clean or replace disc; Ensure disc format is supported (DVD-Video, CD, MP3, JPEG, WMA).
No picture on screen	Screen swivel position; LCD Mode setting.	Adjust the screen's swivel position; Press 'LCD Mode' button to cycle through display options.
No sound	Volume too low; Headphones not connected properly.	Increase volume; Ensure headphones are fully plugged into the headphone jack.
Remote control not working	Batteries dead; Obstruction between remote and player; Remote not pointed at sensor.	Replace remote batteries; Remove obstructions; Point remote directly at the player's IR sensor.

9. SPECIFICATIONS

Technical specifications for the Zenith DVP615 Portable DVD Player:

- **Model Number:** DVP615
- **Display:** 7-inch Widescreen LCD, 180° Swivel and Flip
- **Supported Disc Formats:** DVD-Video, DVD±R, DVD±RW, DVD±R Double Layer, Audio CD, CD-R, CD-RW
- **Supported File Formats:** WMA, JPEG, MP3
- **Power Input:** DC 9.5V (via AC Adapter DPAC1)
- **AC Adapter Input:** 100-120V~27W 50/60Hz
- **AC Adapter Output:** 9.5V === 2.5A
- **Battery Type:** Rechargeable Lithium-ion (Model SPB125)

- **Battery Capacity:** DC 7.4V 2000mAh
- **Battery Life:** Up to 3 hours (approximate, varies with usage)
- **Item Weight:** Approximately 2 pounds
- **Dimensions (Closed):** Approximately 8.58 x 8.46 x 2.76 inches
- **Special Features:** Portable, Multi-Format Playback



Figure 9.1: Bottom view of the Zenith DVP615 Portable DVD Player, showing the product label with model number DVP615, serial number, power requirements (DC 9.5V AC Adaptor), and manufacturing details.

10. WARRANTY AND SUPPORT

Zenith products are manufactured and distributed by LG Electronics U.S.A., Inc. For technical assistance or warranty inquiries, please refer to the contact information provided below or on the product's packaging and labels.

Toll-Free Number: 1-800-243-0000

Please retain your proof of purchase for warranty service.