

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool Built-in Electric Oven AKP 560 IX User Manual](#)

Whirlpool AKP 560 IX

Whirlpool Built-in Electric Oven AKP 560 IX User Manual

Model: AKP 560 IX

INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Whirlpool Built-in Electric Oven, model AKP 560 IX. Please read these instructions carefully before installation and use, and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This appliance is intended for household use only.

- Ensure the oven is properly installed by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Never use water on grease fires. Smother fire or flame or use a dry chemical or foam-type extinguisher.
- Do not store items of interest to children above an oven.
- Always supervise children when they are near the appliance.
- Disconnect the power supply before cleaning or performing maintenance.

SETUP

Unpacking

Carefully remove all packaging materials from the oven and its accessories. Inspect the oven for any damage during transit. Keep packaging materials away from children.

Installation

The Whirlpool AKP 560 IX is a built-in electric oven. Installation must be carried out by a qualified electrician or authorized service technician in accordance with local safety regulations. Ensure adequate ventilation around the appliance.



Image: Front view of the Whirlpool AKP 560 IX Built-in Electric Oven, silver finish.

Initial Cleaning

Before first use, clean the oven interior and accessories with a damp cloth and mild detergent. Dry thoroughly. It is normal for the oven to emit a slight odor during its first few uses; this will dissipate.

Electrical Connection

Ensure the voltage and frequency ratings on the oven's rating plate match your household's electrical supply. The oven must be properly earthed. Do not use extension cords or multiple adapters.

OPERATING INSTRUCTIONS

Control Panel Overview

The oven features electric controls. Familiarize yourself with the function selector knob, temperature control knob, and timer settings.

Setting the Clock

Upon initial power-up or after a power outage, the clock display will flash. Refer to the specific instructions in your full manual for setting the precise time using the control knobs.

Cooking Functions

- **Grill:** Ideal for browning, toasting, or cooking thin cuts of meat.
- **Turbo Fan (Convection):** Circulates hot air for even cooking and faster results, suitable for baking and roasting multiple dishes simultaneously.
- Other functions may include conventional heating, bottom heating, etc. Consult the full manual for a complete list.

Setting Temperature and Time

1. Turn the function selector knob to the desired cooking mode (e.g., Grill, Turbo Fan).

2. Turn the temperature control knob to select the desired temperature.
3. If available, use the timer controls to set the cooking duration or a delayed start.
4. The oven will begin heating. The indicator light will turn off when the set temperature is reached.

Using the Timer

The oven features a timer function. This can be used as a minute minder or to program the cooking duration. Refer to the detailed instructions in the complete user manual for specific timer programming steps.

MAINTENANCE

Cleaning the Oven Interior

Allow the oven to cool completely before cleaning. Use a damp cloth and a non-abrasive oven cleaner. For stubborn stains, a specialized oven cleaner can be used, following the product's instructions. Avoid using abrasive pads or sharp objects.

Cleaning the Exterior

Clean the exterior surfaces with a soft cloth and warm soapy water. For stainless steel finishes, use a dedicated stainless steel cleaner. Do not use abrasive cleaners or solvents.

Replacing the Oven Light

Ensure the oven is disconnected from the power supply. Unscrew the protective glass cover, remove the old bulb, and replace it with a new oven-specific bulb (check specifications for type and wattage). Reattach the cover securely.

General Care

Regularly check the door seal for damage. A damaged seal can affect oven performance. Do not line the oven bottom with aluminum foil as this can trap heat and damage the oven.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not heat	No power supply; incorrect settings.	Check circuit breaker/fuse; ensure oven is plugged in; verify function and temperature settings.
Food not cooking evenly	Incorrect rack position; overloaded oven; door seal damaged.	Use recommended rack positions; avoid overcrowding; check door seal for damage.
Oven light not working	Bulb is faulty or loose.	Replace the oven light bulb (see Maintenance section).
Excessive smoke during cooking	Food spills; excessive fat.	Clean oven interior thoroughly; trim excess fat from food.

If the problem persists after attempting these solutions, please contact customer service.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand Name	Whirlpool
Model Information	AKP 560 IX
Installation Type	Built-in
Capacity	60 Liters
Fuel Type	Electric
Color	Silver
Finish Type	Brushed
Timer Function	Available
Item Weight	15 Kilograms
Package Dimensions	60 x 60 x 25 cm
Part Number	AKP 560 IX
First Available Date	February 11, 2021

WARRANTY AND SUPPORT

Your Whirlpool Built-in Electric Oven AKP 560 IX comes with a manufacturer's warranty. Please refer to the separate warranty card included with your purchase for details on coverage and duration. For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool customer support or visit the official Whirlpool website.

For more information, visit: www.whirlpool.com