

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MINKA-AIRE](#) /
- › [Minka-Aire RC500 Hand-Held Remote Control Instruction Manual](#)

MINKA-AIRE RC500

Minka-Aire RC500 Hand-Held Remote Control Instruction Manual

Model: RC500

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Minka-Aire RC500 Hand-Held Remote Control. The RC500 is designed to enhance the functionality of compatible Minka-Aire ceiling fans, offering convenient control over fan speed, light dimming, and fan direction.

The RC500 remote control features a reversible 6-speed fan control and a full-range light dimmer. It operates within a range of 20-40 feet, depending on environmental factors and construction materials. This device can also be integrated with Smart by Bond technology for Wi-Fi connectivity and smart home system compatibility, allowing for voice control via Amazon Alexa and Google Home Assistant.

PRODUCT OVERVIEW

The Minka-Aire RC500 remote control provides intuitive control over your ceiling fan's functions. Familiarize yourself with the buttons and their corresponding actions.



Image: Minka-Aire RC500 Remote Control with labeled buttons for LED light, 6-speed control, power, and reverse functions.

- **LED Light ON/OFF Full Range Dimmer:** Controls the fan's light kit, allowing for on/off functionality and dimming.
- **6 Speed Control:** Adjusts the fan speed from 1 (lowest) to 6 (highest).
- **Power ON/OFF:** Turns the fan and light power on or off.
- **Reverse:** Changes the direction of the fan blades, useful for seasonal air circulation.

SETUP

1. Battery Installation

The RC500 remote control requires batteries for operation. Ensure you use alkaline batteries for optimal performance.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off.
3. Insert the required batteries, observing the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover.

2. Pairing with Ceiling Fan

The RC500 remote control must be paired with your Minka-Aire ceiling fan to function correctly. The specific pairing procedure may vary slightly depending on your fan model. Generally, this involves a sequence of turning the fan's power off and on, followed by pressing a button on the remote within a short timeframe.

Refer to your specific Minka-Aire ceiling fan's instruction manual for detailed pairing instructions. If no specific instructions are available, a common pairing method is:

1. Ensure the fan's power is OFF at the circuit breaker or wall switch for at least 30 seconds.
2. Turn the fan's power ON.
3. Within 30 seconds of turning the power ON, press and hold the "Power ON/OFF" button on the RC500 remote control for approximately 5 seconds.

4. The fan light (if applicable) should blink or the fan should briefly turn on to indicate successful pairing.

If pairing is unsuccessful, repeat the steps. Ensure the remote is within range of the fan during the pairing process.

OPERATING INSTRUCTIONS

Once paired, the RC500 remote control allows for full functionality of your compatible Minka-Aire ceiling fan.



Image: A hand holding the Minka-Aire RC500 remote control, demonstrating its ergonomic design for easy use.

- **Fan ON/OFF:** Press the central square button to turn the fan on or off.
- **Adjusting Fan Speed:** Use the numbered buttons (1-6) to select the desired fan speed. '1' is the lowest speed, and '6' is the highest.
- **Light Control:** The two oval buttons at the top control the light. Press the top oval button to turn the light on or off. Hold the top oval button to dim or brighten the light.
- **Reverse Function:** Press the circular arrow button (labeled 'Reverse') to change the direction of the fan blades. This function is typically used to create a downdraft in summer for cooling or an updraft in winter to circulate warm air.

Smart Home Integration (Bond Compatible)

The RC500 can be used in conjunction with a Wi-Fi enabled ceiling fan powered by Smart by Bond technology. This allows for integration with smart home systems like Amazon Alexa and Google Home Assistant.



Image: A blue icon with a circle and three arcs, indicating "Bond Compatible" for smart home integration.

To enable smart home control:

1. Download the Bond Home App to your smartphone (available for iOS and Android).
2. Follow the in-app instructions to connect your Smart by Bond enabled ceiling fan to your home Wi-Fi network.
3. Once connected, you can enable the Bond Home skill for Alexa or the Bond Home Action for Google Home to use voice commands.

COMPATIBILITY

The Minka-Aire RC500 remote control is designed for use with specific Minka-Aire ceiling fan models. Ensure your fan model is listed below for proper functionality.



Image: A chart detailing Minka-Aire RC500 remote control compatibility with various fan models and their names.

RC500 Remote Control Compatibility

Model	Fan Name	Model	Fan Name
F715DL	Napoli II	F852L	Alva
F738D	Pancake	F853	Aviation
F831L	Tear	F853L	Aviation LED

The RC500 may also be used in conjunction with the Minka-Aire WC500 Wall Control, which is sold separately.

MAINTENANCE

To ensure the longevity and proper functioning of your Minka-Aire RC500 remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or it stops responding. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote control in a dry place, away from extreme temperatures and direct sunlight.
- **Avoid Moisture:** Do not expose the remote control to water or high humidity, as this can cause internal damage.

TROUBLESHOOTING

If you experience issues with your Minka-Aire RC500 remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding to fan.	<ul style="list-style-type: none"> • Dead or low batteries. • Remote not paired with the fan. • Obstruction between remote and fan receiver. • Incorrect fan model compatibility. 	<ul style="list-style-type: none"> • Replace batteries with new ones. • Re-attempt the pairing procedure (refer to "Setup" section). • Ensure a clear line of sight or reduce distance to the fan. • Verify fan model compatibility with the RC500 (refer to "Compatibility" section).
Fan light not dimming or turning on/off.	<ul style="list-style-type: none"> • Light function not enabled on fan. • Bulb issues. 	<ul style="list-style-type: none"> • Ensure the fan's light kit is properly installed and functional. • Check if bulbs are correctly installed and not burnt out.
Fan speed not changing.	<ul style="list-style-type: none"> • Remote not sending signal. • Fan receiver issue. 	<ul style="list-style-type: none"> • Check batteries and re-pair remote. • Consult your fan's manual or Minka-Aire support for fan receiver troubleshooting.

If problems persist after attempting these solutions, contact Minka-Aire customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	RC500
Brand	Minka-Aire
Item Weight	3.52 ounces
Product Dimensions	0.03 x 10 x 10 inches
Voltage	120 Volts
Item Package Quantity	1
Mounting Type	Wall/remote (for holder)
Certification	UL
Special Features	Remote Control, 6-speed, Full-range light dimmer, Reversible function, Bond Compatible
Batteries Included	Yes
Battery Cell Type	Alkaline

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Minka-Aire RC500 remote control, please refer to the documentation included with your Minka-Aire ceiling fan or visit the official Minka-Aire website. You may also contact Minka-Aire customer service directly for assistance.

[Visit the Minka-Aire Store on Amazon](#)

