

[Manuals.plus](#) /

› [SHARPER IMAGE](#) /

› SHARPER IMAGE SBT556BK Premium HD Bluetooth Headphones User Manual

SHARPER IMAGE SBT556BK

SHARPER IMAGE SBT556BK Premium HD Bluetooth Headphones User Manual

Model: SBT556BK

INTRODUCTION

Thank you for choosing the SHARPER IMAGE SBT556BK Premium HD Bluetooth Headphones. These headphones are designed to provide high-definition audio with the convenience of wireless Bluetooth technology. Enjoy your favorite music and manage calls hands-free with the built-in microphone. This manual provides essential information for setting up, operating, and maintaining your headphones.

PACKAGE CONTENTS

- SHARPER IMAGE SBT556BK Bluetooth Headphones
- USB Charging Cable
- Hard Case
- 3.5mm Audio Cable (for wired connection)
- AC Charger
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your SHARPER IMAGE SBT556BK headphones.



Figure 1: Front view of the SHARPER IMAGE SBT556BK Bluetooth Headphones, showcasing the earcups and headband.



Figure 2: Angled view of the SHARPER IMAGE SBT556BK Bluetooth Headphones, highlighting the adjustable headband and earcups.





Figure 3: Top view of the SHARPER IMAGE SBT556BK Bluetooth Headphones, showing the "airphones" branding on the headband.



Figure 4: The included hard case for the SHARPER IMAGE SBT556BK Bluetooth Headphones, providing protection and portability.

Controls and Ports:

- **Power Button:** Used to turn the headphones on/off and initiate Bluetooth pairing.
- **Volume Controls:** Buttons for adjusting audio volume up and down.
- **Multi-function Button:** For play/pause, track skipping, and call management.
- **Microphone:** Built-in for hands-free calling.
- **3.5mm Audio Jack:** For wired connection using the included audio cable.
- **Micro USB Charging Port:** For charging the internal battery.
- **LED Indicator:** Displays power, charging, and Bluetooth status.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. The rechargeable Lithium-Ion battery provides up to 20 hours of talk time or 18 hours of music playback.

1. Connect the small end of the USB charging cable to the Micro USB charging port on the headphones.
2. Connect the large end of the USB charging cable to the included AC charger or a powered USB port (e.g., computer, wall adapter).
3. The LED indicator will illuminate during charging and change color or turn off when charging is complete.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off.

3. Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device (smartphone, tablet, laptop, etc.) to enjoy wireless audio.

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes rapidly, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "SBT556BK" (or similar name) from the list of found devices.
5. Once paired, the LED indicator on the headphones will flash slowly or remain solid, depending on the model.
6. If prompted for a passcode, enter "0000".

Note: The headphones will automatically attempt to reconnect to the last paired device when powered on, if it is within range.

4. Wired Connection (Optional)

You can use the included 3.5mm audio cable for a wired connection to devices without Bluetooth or when the battery is depleted.

- Plug one end of the 3.5mm audio cable into the headphone's 3.5mm audio jack.
- Plug the other end into the audio output jack of your device.
- The Bluetooth function will be disabled when the audio cable is connected.

OPERATING INSTRUCTIONS

Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the Volume Up button (or specific track forward button, if available).
- **Previous Track:** Press and hold the Volume Down button (or specific track backward button, if available).
- **Volume Up:** Press the Volume Up button.
- **Volume Down:** Press the Volume Down button.

Call Management

- **Answer/End Call:** Press the Multi-function button once during an incoming call or active call.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds during an incoming call.
- **Redial Last Number:** Double-press the Multi-function button when not on a call.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in the included hard case to protect them from dust and damage. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not used for extended periods.
- **Water Exposure:** These headphones are not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the battery is charged. Connect the headphones to the charger and try again.
Cannot pair with Bluetooth device.	Ensure headphones are in pairing mode (rapidly flashing LED). Make sure Bluetooth is enabled on your device. Move headphones closer to the device (within 30 feet/10 meters). Turn off and on both the headphones and the Bluetooth device. Clear previous Bluetooth connections on your device if necessary.
No sound or low volume.	Increase volume on both the headphones and the connected device. Ensure headphones are properly paired and connected. If using wired connection, ensure the 3.5mm cable is fully inserted.
Sound is distorted or cuts out.	Move closer to the Bluetooth device to avoid interference. Avoid obstacles between the headphones and the device. Ensure no other strong wireless signals are interfering.

SPECIFICATIONS

Feature	Detail
Model Name	SBT556BK
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Control Type	Volume Control, Remote, Touch
Headphones Jack	3.5 mm Jack
Form Factor	Closed-back, On-Ear
Battery Type	Lithium Ion (included)
Battery Life (Approx.)	Up to 20 hours talk time / 18 hours music playback
Color	Black
Product Dimensions	6 x 4 x 9 inches
Item Weight	1.75 pounds
Manufacturer	Southern Telecom

WARRANTY AND SUPPORT

SHARPER IMAGE products are manufactured with high-quality materials and craftsmanship. For specific warranty information, please refer to the warranty card included with your purchase or visit the official SHARPER IMAGE website. If you encounter any issues or require technical assistance, please contact SHARPER IMAGE customer support. *Please retain your proof of purchase for warranty claims.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00DFBD634>

More documents and user manuals: <https://manuals.plus/>