

Candy AQUA1042D1

Candy Aqua 1042D1-S Freestanding Washing Machine User Manual

Model: AQUA1042D1

1. INTRODUCTION

Welcome to the user manual for your new Candy Aqua 1042D1-S freestanding washing machine. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before installation and first use, and keep it for future reference.

Your Candy Aqua 1042D1-S is a compact, front-loading washing machine designed for efficiency and convenience, featuring a 4 kg capacity and a maximum spin speed of 1000 rpm.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not touch the appliance with wet hands.
- Always unplug the appliance before cleaning or performing maintenance.
- Do not wash items that have been soiled with flammable substances.
- Ensure all transit bolts are removed before first use to prevent damage and excessive vibration.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. It is crucial to remove all transit bolts from the rear of the machine before operation. These bolts secure the drum during transport and must be removed to prevent severe damage to the appliance.

3.2 Positioning

Place the washing machine on a firm, level surface. Adjust the feet to ensure the appliance is perfectly stable and level. This will minimize vibration and noise during operation.



This image demonstrates the compact dimensions of the Candy Aqua 1042D1-S washing machine, making it suitable for smaller spaces. Its dimensions are approximately 46.3 x 51 x 70 cm.



The Candy Aqua 1042D1-S washing machine is designed to fit conveniently in various settings, including under counters, as shown in this bathroom installation example.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks. Position the drain hose into a suitable standpipe or sink, ensuring it is securely fixed and not kinked.

3.4 Electrical Connection

Plug the appliance into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate of the washing machine (2.2E+2 Volts AC).

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



The control panel features a program selection dial, function buttons, and a digital display for cycle information. The input device is described as 'Buttons, Mouse' in specifications, referring to the physical controls.

The control panel consists of a central program selector dial, various function buttons (e.g., Start/Pause, temperature, spin speed), and a digital display that shows remaining time and selected options.

4.2 Loading Laundry

Open the door and load your laundry into the drum. Do not exceed the maximum capacity of 4 kg. For best results, avoid overloading the machine, as this can affect washing performance and cause excessive wear.

4.3 Detergent Dispenser

Pull out the detergent drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for recommended dosages.

4.4 Program Selection

Turn the program selector dial to choose the desired wash program. Available cycles include a specific program for 'Wool'. Select the program that best suits the type and soil level of your laundry.

4.5 Starting a Wash Cycle

After selecting the program and any desired options, press the Start/Pause button to begin the wash cycle. The machine will automatically proceed through the selected program.

5. MAINTENANCE AND CARE

5.1 Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

5.3 Cleaning the Filter

Periodically check and clean the drain pump filter, usually located at the bottom front of the machine. This helps prevent blockages and ensures proper drainage.

5.4 Drum Cleaning

Run a maintenance wash (e.g., a hot wash with no laundry and a descaling agent) occasionally to clean the drum and remove any detergent or limescale buildup.

6. TROUBLESHOOTING

If you encounter problems with your washing machine, consult the following common issues and solutions before contacting service.

- **Machine does not start:** Check if the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed.
- **Excessive vibration/noise:** Ensure all transit bolts have been removed. Check if the machine is level and the feet are properly adjusted. Ensure laundry is evenly distributed in the drum.
- **Water leakage:** Check the connections of the inlet and drain hoses for tightness. Ensure the drain hose is not kinked or blocked.
- **Poor washing results:** Check if the correct amount of detergent was used and if the appropriate wash program was selected for the load. Avoid overloading the machine.
- **Water not draining:** Check if the drain hose is kinked or blocked. Clean the drain pump filter.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Candy
Model	AQUA1042D1
Type	Freestanding Front-loader
Capacity	4 kg
Maximum Spin Speed	1000 rpm
Energy Efficiency Class	A+
Washing Efficiency Class	A
Annual Energy Consumption	141 kWh
Energy Consumption per Wash	0.85 kWh
Noise Level (Wash)	56 dB
Dimensions (H x W x D)	70 cm x 51 cm x 46.3 cm
Weight	47 kg
Voltage	2.2E+2 Volts AC
Material	Stainless Steel (Drum)
Special Features	High efficiency
Color	White



Lavatrici a carica frontale

AQUA 1042D1S-S

CARATTERISTICHE PRINCIPALI

Nome prodotto / Codice commerciale	AQUA 1042D1S-S
Codice prodotto	31005429
Codice EAN	8016361860346
Tipo di installazione	Libera installazione
Tipo di caricamento	Frontale
Capacità di carico (kg)	4
velocità di rotazione massima (rpm)	

CARATTERISTICHE TECNICHE

Connettività	Nessuna
IoT App	
Motore	Digitally Controlled
Volume cesto	27
Materiale cesto	Acciaio inossidabile
Tipo di spina	Schuko
Tensione (V)	220-240

PROGRAMMI E FUNZIONI

Numero programmi	16
Partenza ritardata	Sì (fino a 24 ore)

This image displays a technical data sheet for the Candy Aqua 1042D1-S, detailing various product characteristics and technical specifications, including product code, EAN, installation type, load capacity, and maximum spin speed.

8. WARRANTY AND SUPPORT

Your Candy Aqua 1042D1-S washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Candy customer support or your authorized retailer. Have your model number (AQUA1042D1) and serial number ready when contacting support.

© 2023 Candy. All rights reserved. Information in this manual is subject to change without notice.

Product fiche pursuant to Delegated Regulation (EU) no. 1061/2010	
Brand	CANDY
Model description	AQUA 1042D1/2-80
Capacity cotton (kg)	4
Energy efficiency class (2010/30/EC)	A+
Energy consumption annual (kWh/annum) (1)	141
ENERGY CONSUMPTION 60° FULL LOAD (kW) (2)	0,77
ENERGY CONSUMPTION 60° PARTIAL LOAD (kW) (2)	0,55
ENERGY CONSUMPTION 40° PARTIAL LOAD (kW) (2)	0,42
Power consumption off mode and left on mode (W)	0,2
Water consumption annual (litres/annum) (3)	6400
Spin drying performance class from G (min) to A (max)	C
Maximum spin speed (rpm) (4)	1000
Moisture content % on dry load after max. spin (5)	62
Average washing time cotton 60C (full load) (min)	180
Average washing time cotton 60C (partial load) (min)	110
Average washing time cotton 40C (partial load) (min)	120
Duration of the left on mode - New (2010/30/EC)	-
Noise level washing Energy label classification EN 60704-4	56
Noise level spinning Energy label classification EN 60704-2	78

[pdf] Datasheet Label

aqua1042d1 wh media ao com s3 amazonaws en GB energyrating productdatasheet |||

Product fiche pursuant to Delegated Regulation EU no. 1061/2010 Brand CANDY
Model description AQUA 1042D1/2-80 Capacity cotton kg 4 Energy efficiency class
2010/30/EC A Energy consumption annual kWh/annum 1 141 ENERGY
CONSUMPTION 60 FULL LOAD kW 2 0,77 ENERGY CONSUMPTION ...
lang:en score:14 filesize: 42.89 K page_count: 2 document date: 0000-00-00