

[manuals.plus](#) /

› [Universal](#) /

› [Universal Station de charge A pour Gigaset A2, A200, A250, A38H, A380, A385, A58H, A580, A585, A580IP, A585IP, AL17H, AL170, AL175, AL27H, AL270, AL275, AL18H AL185. , AL28H, AL280, AL285, AS18H, AS180, AS185, AS28H, AS280, AS285, Gigaset C1, C100, C150, CX100, CX150, C2, C200, C250 C450, C45, C45, C45, C45, C45, C45, C45, C45, C45, C45. 450IP. C455IP, CX450, CX455, Gigaset S1 Professional, S1, S100, S150, SX100, SX150, S79H, S790, S795, SX790, SX795, Swisscom CL308 CLT307, CLT307](#)

Universal Universal Charging Station A

Universal Charging Station A User Manual

Model: Universal Charging Station A

Brand: Universal

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Universal Charging Station A. This charging station is designed to provide efficient and reliable power to a wide range of compatible Gigaset and Swisscom cordless phones. Please read this manual carefully before using the device to ensure proper operation and to maximize its lifespan. This manual provides important information on setup, operation, maintenance, and troubleshooting.

2. SAFETY INFORMATION

To prevent damage, electric shock, or injury, please observe the following safety precautions:

- Do not expose the charging station to water or excessive moisture.
- Do not disassemble or attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Use only the power adapter supplied with the charging station. Using an incompatible adapter may cause damage or fire.
- Ensure the charging station is placed on a stable, flat surface away from direct sunlight and heat sources.
- Keep out of reach of children.
- Unplug the power adapter from the wall outlet during lightning storms or when unused for long periods.
- Do not block any ventilation openings.

3. PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, contact your retailer.

- 1 x Universal Charging Station A
- 1 x Power Adapter

4. SETUP GUIDE

Follow these steps to set up your Universal Charging Station A:

1. **Unpack the Charging Station:** Carefully remove the charging station and its power adapter from the packaging.



Image: The Universal Charging Station A, a compact black charging dock with a cradle for a cordless phone handset.

2. **Connect the Power Adapter:** Insert the small plug of the power adapter into the DC input port located at the back or side of the charging station.
3. **Plug into Power Outlet:** Plug the other end of the power adapter into a standard electrical wall outlet. Ensure the outlet is easily accessible.
4. **Placement:** Place the charging station on a stable, flat surface, such as a desk or nightstand, where it will not be easily knocked over.
5. **Ready for Use:** The charging station is now ready to charge your compatible cordless phone handset.

5. OPERATING INSTRUCTIONS

This charging station is designed for simple and efficient charging of compatible cordless phone handsets.

- **Charging a Handset:** Gently place your compatible cordless phone handset into the cradle of the charging station. Ensure the charging contacts on the handset align with the pins on the charging station.
- **Charging Indicator:** Most handsets will display a charging indicator (e.g., a battery icon or LED light) when properly seated and charging. Refer to your phone's specific user manual for details on its charging indicators.
- **Fast Charging:** This charging station supports fast charging for compatible devices, allowing your handset to recharge quickly.
- **Removing Handset:** To remove the handset, simply lift it from the cradle.

Compatible Models:

This charging station is compatible with a wide range of Gigaset and Swisscom cordless phone models, including but not limited to:

- **Gigaset:** A2, A200, A250, A38H, A380, A385, A58H, A580, A585, A580IP, A585IP, AL17H, AL170, AL175, AL27H, AL270, AL275, AL18H, AL180, AL185, AL28H, AL280, AL285, AS18H, AS180, AS185, AS28H, AS280, AS285, C1, C100, C150, CX100, CX150, C2, C200, C250, C450, C455, C450IP, C455IP, CX450, CX455, S1 Professional, S1, S100, S150, SX100, SX150, S79H, S790, S795, SX790, SX795.
- **Swisscom:** Aton CL308, CLT308, CL307, CLT307.

6. MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your charging station.

- **Cleaning:** Disconnect the power adapter before cleaning. Use a soft, dry, lint-free cloth to wipe the surface of the charging station. Do not use abrasive cleaners, waxes, or solvents.
- **Contacts:** Periodically inspect the charging contacts on the station and your handset for dust or debris. Clean them gently with a dry cotton swab if necessary.
- **Storage:** If storing the charging station for an extended period, unplug it from the power outlet and store it in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your charging station, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Handset not charging.	Power adapter not connected. Power outlet is not active. Handset not properly seated. Dirty charging contacts. Incompatible handset.	Ensure power adapter is securely plugged into the station and wall outlet. Test the outlet with another device. Reseat the handset, ensuring contacts align. Clean charging contacts on both station and handset. Verify your handset model is listed as compatible.
Charging is slow.	Using a non-original power adapter. Handset battery degradation.	Ensure you are using the original power adapter. Consider replacing the handset battery if it's old.
Station feels warm.	Normal operation during charging. Poor ventilation.	Slight warmth is normal. Ensure the station is in a well-ventilated area. If it becomes excessively hot, unplug it immediately and contact support.

8. SPECIFICATIONS

Feature	Detail
Brand	Universal
Model	Universal Charging Station A
Color	Black
Connectivity Technology	Cable
Connector Type	2-pin

Feature	Detail
Special Features	Fast Charging
Compatible Devices	Gigaset and Swisscom cordless phone handsets (see compatible models list)
Included Components	Charging Station, Power Adapter
Mounting Type	Desktop Mount

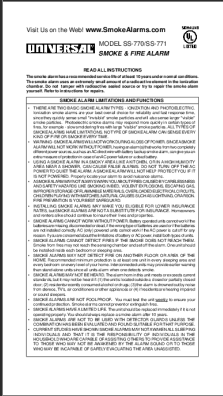 
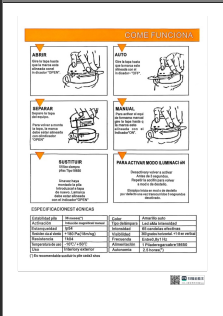 

9. WARRANTY AND SUPPORT

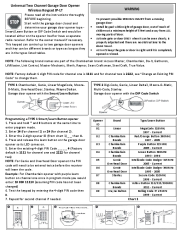 


For information regarding warranty coverage and technical support, please refer to the documentation provided by your retailer or contact the manufacturer directly. Keep your proof of purchase for warranty claims.
Manufacturer: Universal



© 2024 Universal. All rights reserved.

Related Documents - Universal Charging Station A

	<p>Universal SS-770/SS-771 Smoke & Fire Alarm: Installation, Operation, and Safety Guide</p> <p>Comprehensive guide for the Universal SS-770/SS-771 Smoke & Fire Alarm, covering installation, recommended placement, operation, testing, maintenance, false alarms, escape planning, and warranty information.</p>
	<p>LED Car Emergency Light V16 Flashlight - User Manual and Safety Guide</p> <p>Comprehensive user manual for the Universal LED Car Emergency Light V16 Flashlight, detailing its features, operation, and safety guidelines for road use. Learn about its magnetic induction strobe, road safety features, and rechargeable operation.</p>
	<p>Universal L27130 10L LPC CI Pressure Cooker - Technical Specifications and Manual</p> <p>Detailed technical specifications, usage instructions, and warranty information for the Universal L27130 10L LPC CI pressure cooker. Includes dimensions, weight, EAN codes, and safety guidelines.</p>

	<p>Universal Two Channel Garage Door Opener Wireless Keypad JP-LT Instructions</p> <p>This document provides instructions for programming and installing the Universal Two Channel Garage Door Opener Wireless Keypad JP-LT. It covers setup for different opener types, PIN code management, and battery replacement.</p>
	<p>3.5 FT Animated LED Scarred Chucky Use and Care Guide Universal Halloween Decoration</p> <p>Official use and care guide for the 3.5 FT Animated LED Scarred Chucky decoration by Universal. Includes assembly instructions, operation settings, warnings, and care tips.</p>
	<p>Universal Horizon 9-13 Automatic Welding Helmet User Manual</p> <p>Comprehensive user manual for the Universal Horizon 9-13 Automatic Welding Helmet, detailing safety warnings, instructions for use, preparation, maintenance, technical specifications, and troubleshooting for optimal welding protection.</p>