

[Manuals.plus](#) /

› [Toysmith](#) /

› Toysmith Magnetic Dart Board Instruction Manual

Toysmith 3121

Toysmith Magnetic Dart Board Instruction Manual

Model: 3121

PRODUCT OVERVIEW

The Toysmith Magnetic Dart Board offers a safe and engaging dart-playing experience for children aged 6 and up. This set includes an 11.5-inch dartboard and six lightweight magnetic darts, designed to prevent damage to walls and floors. Its design mimics a traditional dartboard, providing a realistic feel without the hazards of sharp points. The dartboard features a keyhole slot for easy hanging, making it suitable for both indoor and outdoor use.



Image 1: The Toysmith Magnetic Dart Board and darts in its retail packaging.

PACKAGE CONTENTS

- 1 x 11.5-inch Magnetic Dart Board
- 6 x Lightweight Magnetic Darts (3 red, 3 yellow)



Image 2: A close-up view of a red magnetic dart, showing the magnetic tip.



Image 3: A close-up view of a yellow magnetic dart, showing the magnetic tip.

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a suitable indoor or outdoor location with enough clear space for safe dart throwing. Ensure there are no fragile items or people in the throwing area.
2. **Mount the Dart Board:** The dartboard features a keyhole slot on the back for easy hanging. Use a sturdy nail or screw (not included) securely fastened into a wall or vertical surface. Ensure the dartboard is hung at an appropriate height for the players.
3. **Verify Stability:** After hanging, gently tug on the dartboard to ensure it is securely mounted and will not fall during play.



Image 4: The back of the dartboard, highlighting the keyhole slot for mounting.

OPERATING INSTRUCTIONS

1. **Hold the Dart:** Grip the magnetic dart comfortably, typically near the shaft, ensuring the magnetic tip points towards the dartboard.
2. **Aim and Throw:** Stand at a comfortable distance from the dartboard. Aim for your desired target area and throw the dart with a smooth, controlled motion. The magnetic tip will adhere to the dartboard upon impact.
3. **Retrieve Darts:** Carefully remove the darts from the board after each turn.
4. **Scoring:** Follow standard dart game rules for scoring, or create your own fun scoring system.

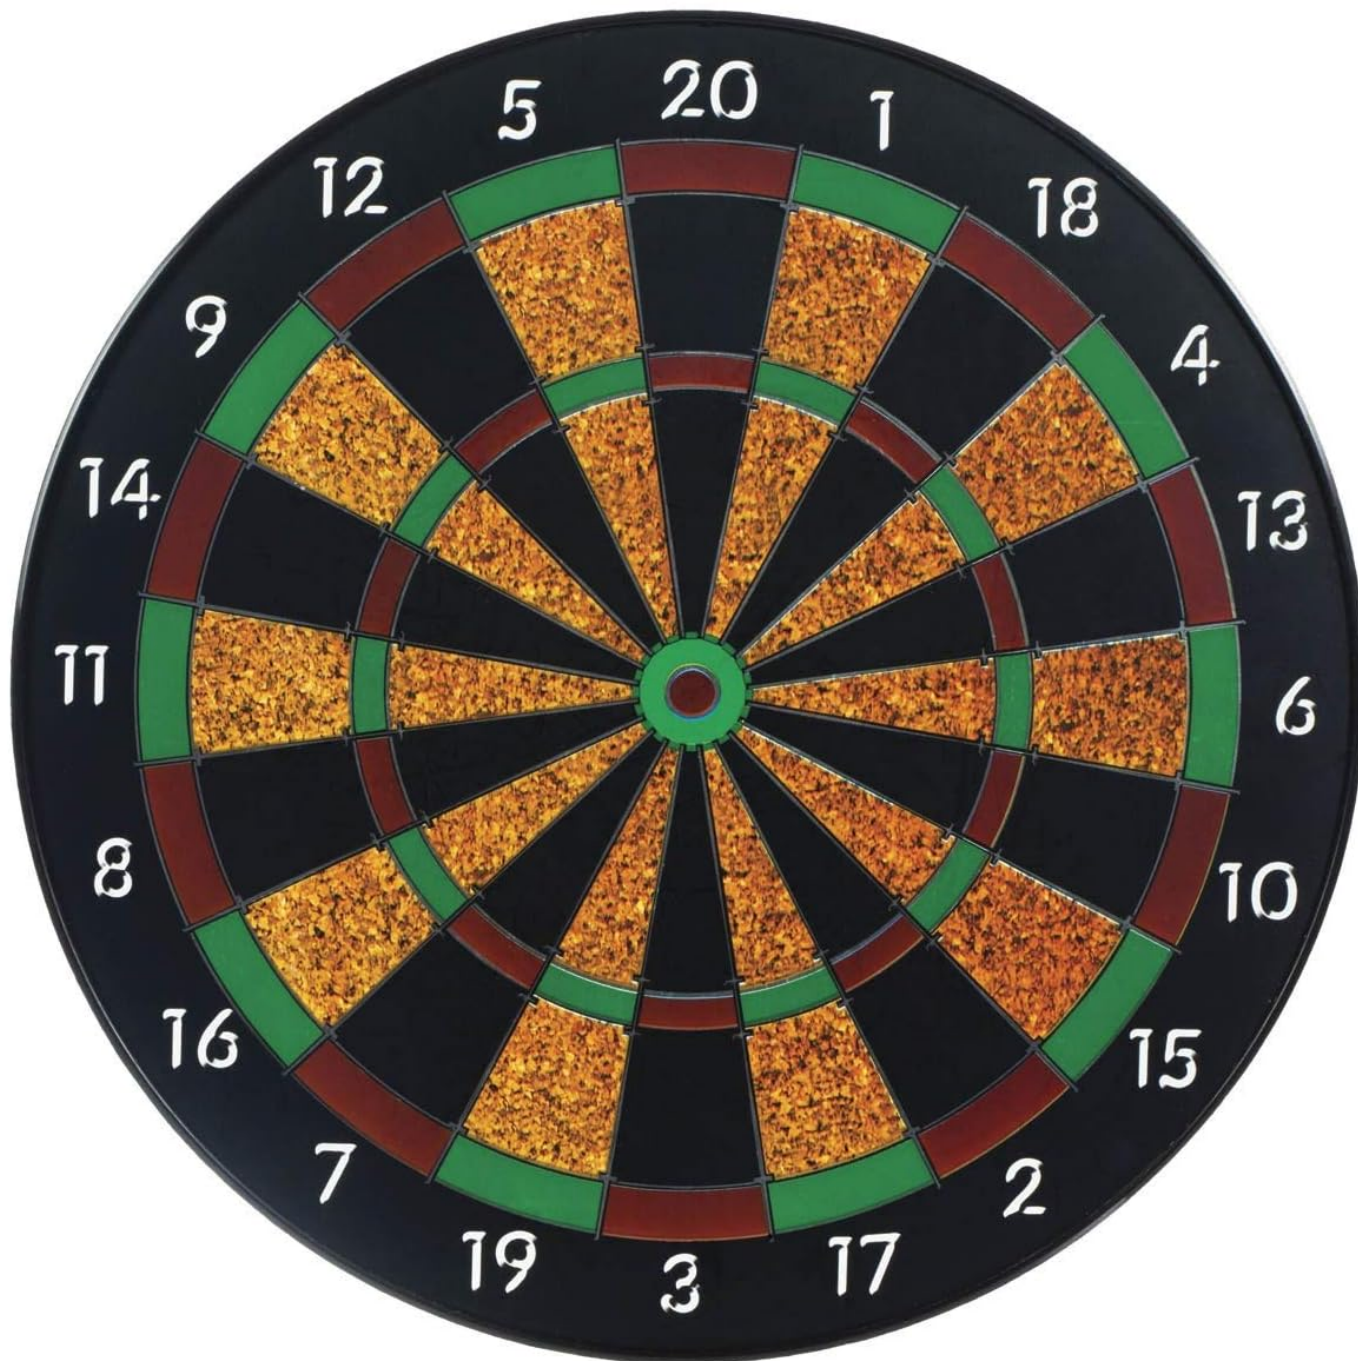


Image 5: The front of the magnetic dartboard, displaying the numbered scoring sections.

MAINTENANCE

- **Cleaning the Dartboard:** Wipe the dartboard surface with a soft, damp cloth to remove dust or smudges. Avoid abrasive cleaners.
- **Cleaning the Darts:** The magnetic darts can also be wiped clean with a soft, damp cloth. Ensure the magnetic tips are free of debris for optimal performance.
- **Storage:** Store the dartboard and darts in a dry place away from direct sunlight when not in use to prolong their lifespan.

TROUBLESHOOTING

Problem: Darts are not sticking to the board.

Solution: Ensure the magnetic tips of the darts are clean and free from any obstructions. Verify that the dartboard surface is also clean. If the issue persists, check if the darts or board have sustained any damage that might affect magnetic adhesion.

Problem: Dartboard is unstable after hanging.

Solution: Re-check the mounting point. Ensure the nail or screw is firmly secured in the wall and fully engaged with the keyhole slot on the dartboard. Consider using a more robust mounting solution if necessary.

SPECIFICATIONS

Brand	Toysmith
Model Number	3121
Material	Metal (for magnets), Plastic (for board and darts)
Color	Multicolor
Product Dimensions	12.5 x 12 x 1.5 inches
Item Weight	0.96 ounces
Recommended Age	6 - 15 years
Included Components	1 Dartboard, 6 Darts

WARRANTY AND SUPPORT

Specific warranty information for the Toysmith Magnetic Dart Board is not provided in the product details. For any product-related inquiries, support, or warranty claims, please contact Toysmith customer service directly through their official website or the retailer where the product was purchased.

© 2023 Toysmith. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question