

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Nillkin](#) /
- > [Nillkin Traveler W2 Wireless Speaker User Manual](#)

## Nillkin NK-W2

# Nillkin Traveler W2 Wireless Speaker User Manual

Model: NK-W2

## INTRODUCTION

---

Thank you for choosing the Nillkin Traveler W2 Wireless Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before operation and retain it for future reference.

## PRODUCT OVERVIEW

---

The Nillkin Traveler W2 is a portable wireless speaker designed for high-quality audio playback and hands-free calling. It features a robust design suitable for various environments.

### Key Features:

- Water-resistance for outdoor use.
- Deep bass and 3D surround sound for an immersive audio experience.
- HD call functionality for clear communication.
- Long playtime on a single charge.
- TWS (True Wireless Stereo) interconnection for pairing two speakers.
- Easy operation with intuitive controls.
- Wireless V5.0 chip for stable transmission.



Front view of the Nillkin Traveler W2 wireless speaker, showcasing its minimalist design.

## Conquer world, conquer music

Traveler W2 wireless Speaker



The Nillkin Traveler W2 speaker placed on a rock near flowing water, illustrating its suitability for outdoor environments.



Water-resistance



Deep bass



3D surround sound



HD call



Long playtime



TWS interconnection




Easy operation


A graphic illustrating the key features of the Nillkin Traveler W2: water-resistance, deep bass, 3D surround sound, HD call, long playtime, TWS interconnection, and easy operation.

## Maxxaudio equipped with DSP, take 3D surround sound on the go

The Nuvoton NPCP215 DSP chip is equipped with the waves Maxxaudio algorithm produced by Israel Waves, which enhances sound effects. Loud sound field, immerse yourself into 3D surround sound on the go!

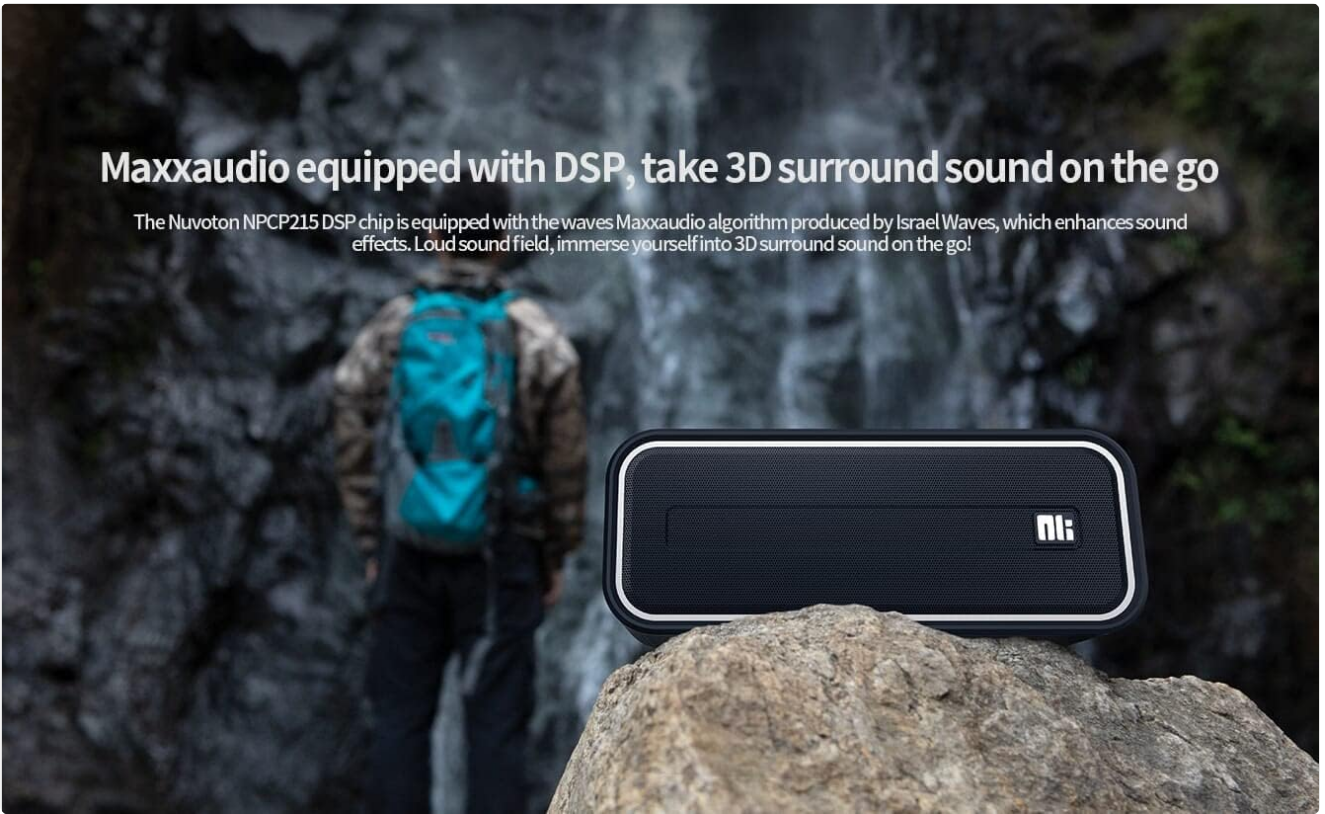

The Nillkin Traveler W2 speaker on a rock with a person hiking in the background, highlighting its portability and Maxxaudio DSP technology for 3D surround sound.

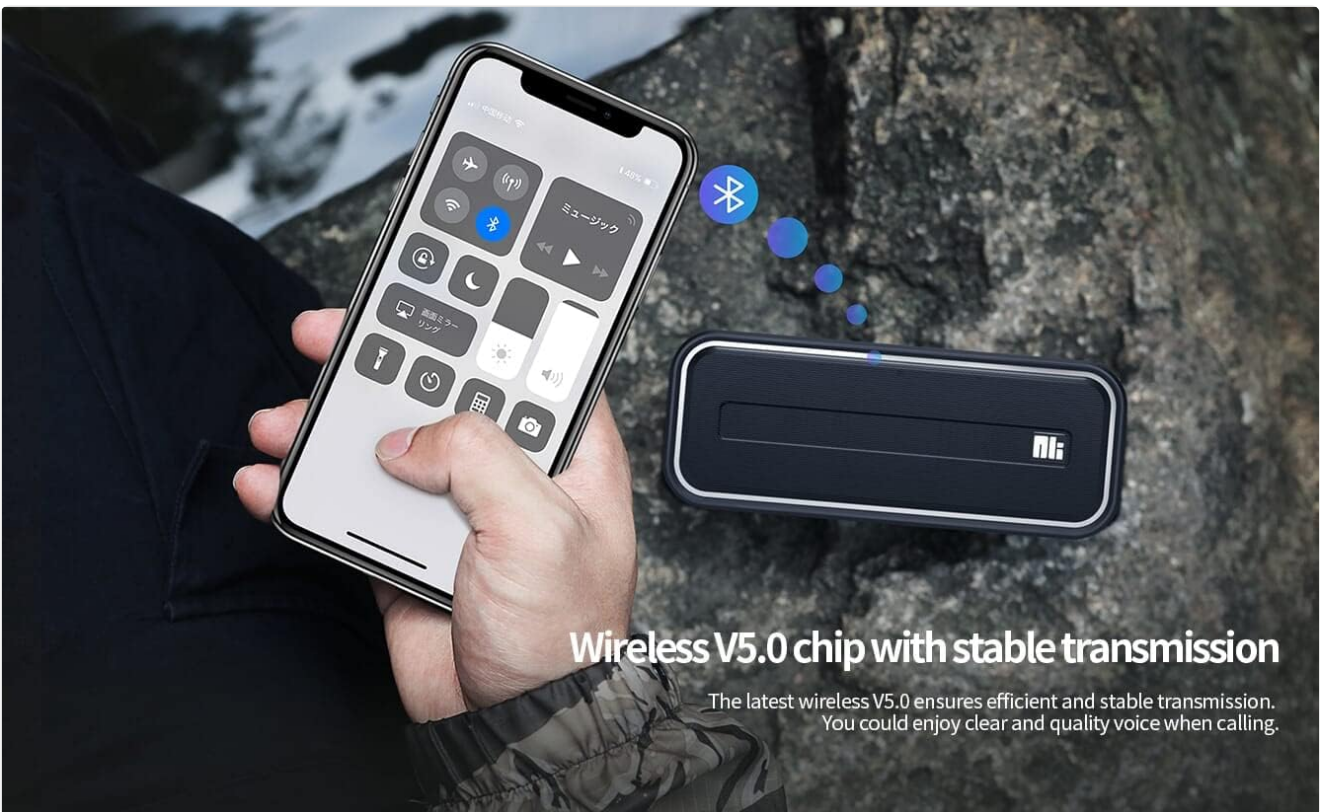

## Wireless V5.0 chip with stable transmission

The latest wireless V5.0 ensures efficient and stable transmission. You could enjoy clear and quality voice when calling.

A hand holding a smartphone displaying Bluetooth settings, with the Nillkin Traveler W2 speaker nearby, indicating stable wireless V5.0 transmission.



A hand holding the Nillkin Traveler W2 speaker, showcasing its compact design and side controls/ports.

### **Package Contents:**

## Package and accessory list



The Nillkin Traveler W2 speaker packaging box alongside the speaker itself, with a list of included accessories.

- Nillkin Traveler W2 Wireless Speaker x 1
- User Manual x 1
- Audio Cable x 1
- Charging Cable x 1

## SETUP

---

### 1. Charging the Speaker:

1. Connect the provided charging cable to the speaker's charging port.
2. Connect the other end of the charging cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status. Once fully charged, the light will change or turn off.

### 2. Powering On/Off:

- To power on, press and hold the power button for a few seconds until you hear an audible prompt and the indicator light illuminates.
- To power off, press and hold the power button again until you hear an audible prompt and the indicator light turns off.

### 3. Bluetooth Pairing:

1. Ensure the speaker is powered on and in pairing mode (indicator light will typically flash).
2. On your smartphone or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Search for available devices and select "Nillkin Traveler W2" from the list.
4. Once connected, the speaker will provide an audible confirmation, and the indicator light will stop flashing.

## OPERATING INSTRUCTIONS

---

## 1. Music Playback:

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up/Down:** Press the Volume + or Volume - buttons.
- **Next Track:** Press and hold the Volume + button.
- **Previous Track:** Press and hold the Volume - button.

## 2. Call Handling:

- **Answer/End Call:** Press the Play/Pause button once during an incoming call or an active call.
- **Reject Call:** Press and hold the Play/Pause button during an incoming call.

## 3. TWS (True Wireless Stereo) Interconnection:

To pair two Nillkin Traveler W2 speakers for stereo sound:

1. Ensure both speakers are powered off and not connected to any device.
2. Power on both speakers.
3. On one speaker (this will be the primary speaker), double-press the TWS button (refer to your speaker's physical buttons for exact location). The speaker will enter TWS pairing mode.
4. The two speakers will automatically search and connect to each other. Once connected, you will hear an audible confirmation.
5. Connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and at least once every three months if not used regularly. Avoid fully discharging the battery frequently.
- **Water Resistance:** While water-resistant, avoid submerging the speaker in water or exposing it to heavy rain for extended periods. Ensure all port covers are securely closed.

## TROUBLESHOOTING

---

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the charging cable.
Cannot pair with Bluetooth device.	Make sure the speaker is in pairing mode. Disable and re-enable Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device.
No sound or low volume.	Check the volume levels on both the speaker and your connected device. Ensure the speaker is properly connected via Bluetooth or audio cable.
Sound distortion.	Reduce the volume on your device or the speaker. Ensure there are no obstructions between the speaker and your device.
TWS pairing fails.	Ensure both speakers are the same model and fully charged. Power off both speakers, then try TWS pairing again.

## SPECIFICATIONS

Feature	Detail
Brand Name	Nillkin
Model Number	NK-W2
Product Dimensions	20 x 7.8 x 6.2 cm
Product Weight	750 g
Connectivity Technology	Wired/Wireless (Bluetooth)
Speaker Type	Bluetooth Speakers
Speaker Maximum Output Power	40 Watts
Audio Output Mode	Surround
Mounting Type	Tabletop
Material	Mixed Materials
Special Features	Wireless, Water-resistant, 3D Surround Sound, HD Call, TWS Interconnection
Recommended Uses	For Smartphones or Tablets
Batteries	1 Lithium Ion battery required

## WARRANTY AND SUPPORT

Nillkin products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included in your product packaging or visit the official Nillkin website. For technical support or service inquiries, please contact Nillkin customer service through their official channels.