

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic KX-TSC60SXB Corded Landline Phone User Manual](#)

## Panasonic KX-TSC60SXB

# Panasonic KX-TSC60SXB Corded Landline Phone User Manual

Model: KX-TSC60SXB | Brand: Panasonic

## INTRODUCTION

---

This manual provides essential instructions for the proper setup, operation, and maintenance of your Panasonic KX-TSC60SXB Corded Landline Phone. Please read this manual thoroughly before using the phone to ensure optimal performance and longevity.

## PACKAGE CONTENTS

---

Verify that all the following items are included in your product package:

- Handset
- Base Unit
- Handset Cord
- Telephone Line Cord
- Battery (for display)
- Charger (for battery)
- User Guide (this document)



Image: The Panasonic KX-TSC60SXB corded landline phone, showing the handset, base unit, and coiled cord.

## SETUP

### 1. Connecting the Phone

1. Connect one end of the telephone line cord to the LINE jack on the back of the base unit.
2. Connect the other end of the telephone line cord to your wall telephone jack.
3. Connect the coiled handset cord to the HANDSET jack on the side of the base unit and to the handset.

### 2. Battery Installation (for LCD Display)

The phone requires a battery to power the LCD display and retain caller ID memory. Locate the battery compartment, typically on the underside of the base unit. Insert the provided battery, observing the correct polarity (+/-). Connect the charger to the base unit and a power outlet to charge the battery.



Image: A top-down view of the Panasonic KX-TSC60SXB phone, illustrating the connection points for the line cord and handset cord.

## OPERATING INSTRUCTIONS

---

### Making a Call

1. Lift the handset.
2. Listen for a dial tone.
3. Dial the desired phone number using the keypad.

### Receiving a Call

When the phone rings, simply lift the handset to answer the call.

### Using Caller ID

The phone's 7-segment 2-line LCD display shows incoming caller information (if subscribed to Caller ID service). The phone stores up to 30 call logs.

- **To view call log:** Press the **CALLER ID** button. Use the up/down arrow keys to scroll through the stored calls.
- **To dial from call log:** Select the desired number from the call log and lift the handset.

### Redial Function

To redial the last number called, lift the handset and press the **REDIAL** button.

### Mute Function

During a call, press the **MUTE** button to temporarily silence your microphone. The other party will not hear you. Press **MUTE** again to resume speaking.

### Flash Function

The **FLASH** button is used for certain telephone company services, such as call waiting or transferring calls. Consult your telephone service provider for details on its use.



Image: A close-up front view of the Panasonic KX-TSC60SXB phone, highlighting the keypad, LCD display, and function buttons.

## MAINTENANCE

---

### Cleaning

Wipe the phone's exterior with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Do not use abrasive cleaners, waxes, or solvents.

### Storage

Store the phone in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

## TROUBLESHOOTING

---

- **No Dial Tone:**
  - Ensure the telephone line cord is securely connected to both the phone and the wall jack.
  - Test with another phone or line if available to determine if the issue is with the phone or the telephone line.
- **LCD Display Not Working:**
  - Check if the battery is correctly installed and charged.
  - Ensure the charger is connected to a power source.
- **Cannot Make/Receive Calls:**
  - Verify all connections are secure.
  - Confirm your telephone service is active.
- **Buzzing Noise on Parallel Connection:**
  - This model may experience a buzzing noise if connected in an environment with parallel phone

connections (two or more phones on the same line). This is a characteristic of the device and not a defect.

## SPECIFICATIONS

<b>Model Number</b>	KX-TSC60SXB
<b>Product Dimensions (LxWxH)</b>	18.6 x 5.5 x 22 cm
<b>Item Weight</b>	340 g
<b>Color</b>	Black
<b>Telephone Type</b>	Corded
<b>Display</b>	7 segment 2 line LCD display
<b>Caller ID</b>	Yes, with 30 call log
<b>Hands-free Speaker</b>	No
<b>Material</b>	Plastic
<b>Manufacturer</b>	PANASONIC SYSTEM NETWORKS MALAYSIA SDN. BHD.

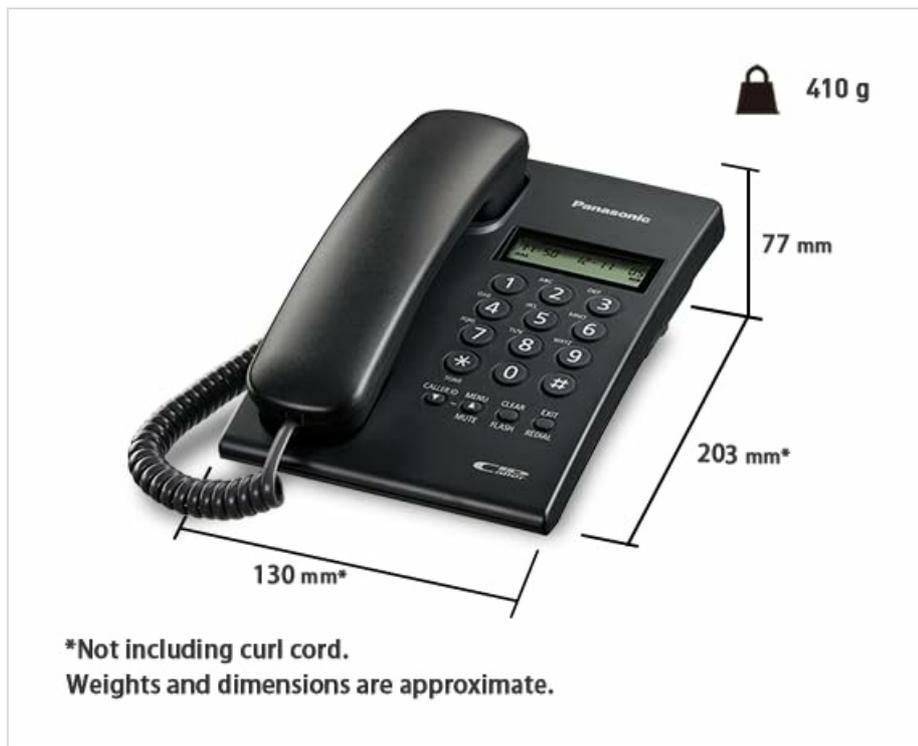


Image: Diagram showing the approximate dimensions of the Panasonic KX-TSC60SXB phone: 203 mm length, 130 mm width, and 77 mm height (excluding curl cord).

## WARRANTY INFORMATION

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration of the warranty. Retain your purchase receipt as proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Panasonic customer support. Contact details can typically be found on the Panasonic official website or on the product packaging.