



Manuals.plus /

- › Sony /
- › Sony CMTSBT100 Micro Music System User Manual

Sony CMTSBT100

Sony CMTSBT100 Micro Music System User Manual

Model: CMTSBT100

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Sony CMTSBT100 Micro Music System. This compact audio system features Bluetooth and NFC connectivity for wireless audio streaming, a CD player, AM/FM radio, and a USB port for digital media playback. Please read this manual thoroughly to ensure proper use and to maximize your listening experience.

SETUP

1. Unpacking and Component Check

Carefully remove all components from the packaging. Ensure the following items are present:

- Main Unit (CMTSBT100)
- Two Speaker Units
- Remote Control
- Power Cord
- AM Loop Antenna
- FM Wire Antenna
- AA Batteries for Remote Control (x2)

2. Speaker Connection

Connect the speaker wires from each speaker unit to the corresponding speaker terminals on the rear of the main unit. Ensure correct polarity (positive to positive, negative to negative) for optimal sound quality. The CMTSBT100 uses proprietary 4.2mm connectors for speaker wires.



Image: The Sony CMTSBT100 Micro Music System, showing the central unit flanked by two speaker units. The main unit features a display, control buttons, and a volume knob.

3. Antenna Connection

Connect the supplied AM loop antenna and FM wire antenna to their respective jacks on the rear of the main unit. Position the antennas for best reception.

4. Power Connection

Plug the power cord into the AC inlet on the main unit, then into a wall outlet. The system will enter standby mode.

5. Initial Setup

Upon first power-on, you may be prompted to set the clock. Follow the on-screen instructions or refer to the full user manual for detailed clock setting procedures.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button on the main unit or remote control to turn the system on or off (standby mode).

2. Bluetooth and NFC Connectivity

The system supports wireless audio streaming via Bluetooth and one-touch pairing with NFC-compatible devices.

- **NFC Pairing:** Touch your NFC-compatible smartphone or tablet to the N-Mark on the main unit. Follow the prompts on your device to establish a Bluetooth connection.
- **Manual Bluetooth Pairing:** Press the **FUNCTION** button repeatedly until "BLUETOOTH" appears on the display. On your audio device, enable Bluetooth and search for "CMTSBT100". Select it to pair.
- **Streaming:** Once paired, audio from your device will play through the system. Adjust volume on both the system and your device.

3. CD Playback

The system can play audio CDs and data CDs containing MP3 files.

1. Press the **FUNCTION** button to select "CD".

2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD with the label side up in the tray and press **OPEN/CLOSE** again to close it.
4. Playback will start automatically. Use the **PLAY/PAUSE**, **STOP**, **SKIP**, and **SEARCH** buttons for control.

4. USB Playback

Connect a USB storage device containing MP3 files to the USB port on the front of the main unit.

1. Press the **FUNCTION** button to select "USB".
2. The system will read the files on the USB device.
3. Use the navigation buttons to select folders and tracks. Press **PLAY/PAUSE** to start playback.

5. AM/FM Radio

Listen to your favorite radio stations.

- **Select Band:** Press the **FUNCTION** button to select "TUNER FM" or "TUNER AM".
- **Manual Tuning:** Use the **TUNING +/-** buttons to manually tune to a station.
- **Automatic Tuning:** Press and hold the **TUNING +/-** buttons to automatically scan for the next available station.
- **Preset Stations:** Save your favorite stations using the **PRESET** buttons. Refer to the full manual for detailed instructions on setting and recalling presets.

6. Audio In

Connect external audio devices (e.g., an MP3 player, turntable with pre-amp) using a 3.5mm stereo mini-plug cable to the AUDIO IN jack on the front of the main unit.

1. Connect your external device to the AUDIO IN jack.
2. Press the **FUNCTION** button to select "AUDIO IN".
3. Start playback on your external device. Adjust volume on both the system and your device.



Image: The Sony CMTSBT100 Micro Music System integrated into a home environment, positioned on a white cabinet with its two speakers. A smartphone is visible on a nearby wooden table, suggesting wireless connectivity.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior surfaces of the main unit and speakers with a soft, dry cloth. For stubborn stains, use a cloth lightly dampened with a mild detergent solution, then wipe dry. Avoid using abrasive cleaners, alcohol, benzene, or thinners.
- **CD Tray:** Keep the CD tray free of dust and debris. Do not force the tray open or closed.
- **Speaker Grilles:** Gently dust the speaker grilles with a soft brush or cloth.
- **Ventilation:** Ensure adequate ventilation around the unit to prevent overheating. Do not block ventilation openings.

TROUBLESHOOTING

If you encounter issues with your system, refer to the following common solutions. For more detailed troubleshooting, consult the comprehensive user manual.

- **No Power:** Ensure the power cord is securely connected to both the unit and the wall outlet. Try a different outlet.
- **No Sound:** Check speaker connections for correct polarity. Verify the volume level on both the system and the connected audio source (e.g., Bluetooth device, external player). Ensure the correct function (CD, USB, Bluetooth, TUNER, AUDIO IN) is selected.
- **Bluetooth Pairing Issues:** Ensure the system is in Bluetooth pairing mode. Delete "CMTSBT100" from your device's Bluetooth list and attempt to pair again. Move your device closer to the system.
- **CD Not Playing/Reading:** Ensure the CD is clean and free of scratches. Insert the CD correctly with the label side up.
- **USB Device Not Recognized:** Ensure the USB device is formatted correctly (FAT16/FAT32). Check that the files are supported (MP3). Try a different USB device.
- **Poor Radio Reception:** Adjust the position of the AM loop and FM wire antennas. Move the system away from other electronic devices that may cause interference.

SPECIFICATIONS

Model Number	CMTSBT100
Brand	Sony
Product Dimensions (W x H x D)	14.5 x 13.19 x 18.5 inches (Main Unit + Speakers)
Item Weight	5.73 pounds
Connectivity Technology	Bluetooth, NFC
Speaker Type	Home audio system, 2-way bass reflex
Power Output	50 watts RMS
Power Consumption (Standby)	0.5 W
Batteries (Remote)	2 AA batteries
Date First Available	June 17, 2013

WARRANTY AND SUPPORT

Your Sony CMTSBT100 Micro Music System is covered by a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service, or additional information, please visit the official Sony support website or contact Sony customer service.

A comprehensive User Guide (PDF) and User Manual (PDF) are available for download, providing more detailed information on all features and advanced troubleshooting. You can typically find these documents on the Sony support website for your model.