

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool 3362952 Bleach Dispenser Cup User Manual](#)

Whirlpool 3362952

Whirlpool 3362952 Bleach Dispenser Cup User Manual

Model: 3362952


INTRODUCTION

This manual provides instructions for the installation, use, and maintenance of your Whirlpool 3362952 Bleach Dispenser Cup. This is a genuine replacement part designed for compatible Whirlpool washing machines, ensuring proper bleach dispensing during the wash cycle.

IMPORTANT SAFETY INFORMATION

- **Disconnect Power:** Always unplug the washing machine from the electrical outlet or turn off the circuit breaker before attempting any installation, removal, or maintenance.
- **Personal Protective Equipment:** Wear appropriate personal protective equipment, such as gloves, if necessary, to protect your hands from cleaning agents or sharp edges.
- **Refer to Washer Manual:** Always refer to your washing machine's main user manual for specific safety guidelines and instructions related to your appliance model.
- **Chemical Handling:** Handle bleach and other cleaning chemicals according to their manufacturer's instructions and safety warnings.

PRODUCT OVERVIEW

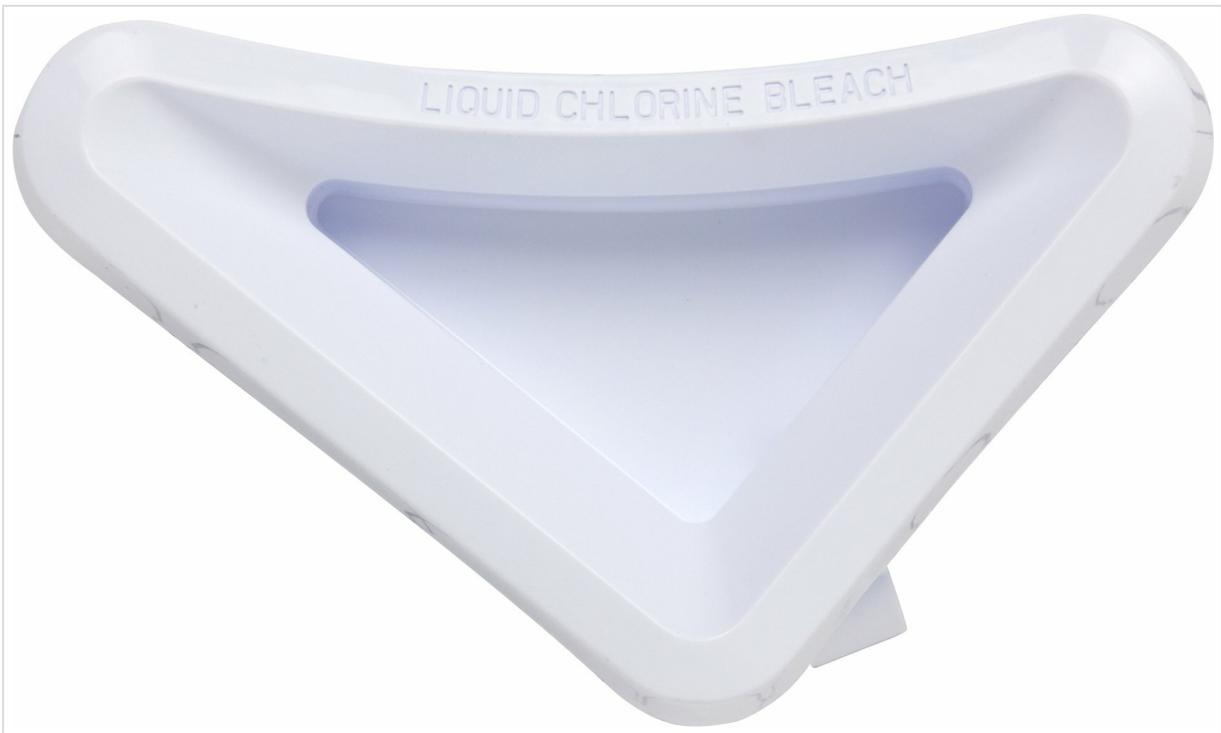

The image above displays the Whirlpool 3362952 Bleach Dispenser Cup. This component is specifically designed to hold and dispense liquid chlorine bleach into your washing machine at the correct time during the wash cycle, ensuring effective cleaning and stain removal.

INSTALLATION INSTRUCTIONS

Follow these steps to properly install the Whirlpool 3362952 Bleach Dispenser Cup:

1. **Step 1: Disconnect Power.** Ensure your washing machine is completely disconnected from its power source before proceeding.
2. **Step 2: Locate Dispenser Area.** Open the washing machine lid and identify the designated slot or area where the bleach dispenser cup is installed. This is typically located near the top rim of the wash tub.
3. **Step 3: Remove Old Dispenser (if applicable).** If replacing an existing dispenser, carefully lift or gently twist the old cup to disengage it from its mounting tabs. Dispose of the old part responsibly.
4. **Step 4: Install New Dispenser.** Align the new Whirlpool 3362952 Bleach Dispenser Cup with the slot. Gently press down or twist until it securely snaps into place. Ensure all mounting tabs are engaged and the cup is seated firmly without wobbling.
5. **Step 5: Restore Power.** Once the new dispenser is securely installed, restore power to the washing machine.

OPERATING INSTRUCTIONS

To use the bleach dispenser cup effectively:

1. **Step 1: Add Bleach.** Pour the recommended amount of liquid chlorine bleach into the dispenser cup. Refer to your bleach product's instructions for proper dosage. **Do not overfill** the dispenser; avoid exceeding any 'MAX FILL' line indicated on the dispenser or in your washing machine's manual.
2. **Step 2: Close Lid.** Close the washing machine lid securely.
3. **Step 3: Start Cycle.** Select your desired wash cycle and start the washing machine. The dispenser is designed to automatically release the bleach at the appropriate time during the wash cycle for optimal results.

CARE AND MAINTENANCE

Regular maintenance helps ensure the longevity and proper function of your bleach dispenser cup:

- **Cleaning:** Periodically remove the bleach dispenser cup from the washing machine. Rinse it thoroughly with warm water to remove any bleach residue, detergent buildup, or lint. A soft brush can be used for stubborn deposits.
- **Inspection:** Regularly inspect the dispenser cup for any signs of damage, such as cracks, chips, or wear on the mounting tabs. A damaged dispenser may not function correctly or could fall out during operation.
- **Replacement:** If the dispenser cup shows significant damage or no longer seats securely, it should be replaced to ensure proper and safe operation.

TROUBLESHOOTING

If you encounter issues with your bleach dispenser cup, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Bleach not dispensing	Dispenser clogged with residue; Dispenser not seated correctly	Remove and thoroughly clean the dispenser cup; Reinstall the dispenser, ensuring it snaps securely into place
Bleach overflowing from dispenser	Dispenser overfilled; Incorrect bleach type (e.g., powdered bleach)	Do not overfill the dispenser; Use only liquid chlorine bleach as intended
Dispenser cup falls out during cycle	Not installed correctly; Mounting tabs damaged or worn	Ensure the dispenser is pressed firmly and securely into its slot; Replace the dispenser cup if mounting tabs are visibly damaged

PRODUCT SPECIFICATIONS

Model Number: 3362952

Part Type: Bleach Dispenser Cup

Manufacturer: Whirlpool

Item Weight: Approximately 1.6 ounces (45 grams)

Product Dimensions: Approximately 1.5 x 2.5 x 3.5 inches (3.8 x 6.4 x 8.9 cm)

Compatibility: Genuine replacement part for compatible Whirlpool washing machines. Always verify compatibility with your specific appliance model.

WARRANTY AND SUPPORT

This Whirlpool genuine replacement part is typically covered by a limited manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official [Whirlpool website](#). For technical support, parts inquiries, or further assistance, please contact Whirlpool customer service through their official channels.

