

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [LiftMaster](#) /

> [LiftMaster CPTK1 390 MHz Security+ Mini Key Chain Remote Control User Manual](#)

LiftMaster CPTK1

LiftMaster CPTK1 390 MHz Security+ Mini Key Chain Remote Control User Manual

[Introduction](#) [Product](#)

[Overview](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your LiftMaster CPTK1 390 MHz Security+ Mini Key Chain Remote Control. Please read these instructions carefully before use to ensure proper functionality and safety.

2. PRODUCT OVERVIEW

The LiftMaster CPTK1 is a compact, single-button remote control designed for convenient access to your garage door opener or gate operator. It operates on a 390 MHz frequency and utilizes LiftMaster's Security+ rolling code technology for enhanced security. This remote is compatible with LiftMaster, Chamberlain, and Sears Craftsman garage door openers and gate operators manufactured between 1993 and 1997 that feature a red or orange 'Learn' button.



Figure 1: LiftMaster CPTK1 Mini Key Chain Remote Control. This image shows the compact, single-button design of the remote, suitable for attachment to a key chain.

3. SETUP (PROGRAMMING)

Follow these steps to program your LiftMaster CPTK1 remote control to your garage door opener or gate operator:

1. **Locate the Learn Button:** Find the 'Learn' button on your garage door opener. This button is typically located on the back or side panel of the motor unit, often under the light cover. For 390 MHz Security+ systems, the 'Learn' button is usually red or orange.
2. **Activate Learn Mode:** Press and immediately release the 'Learn' button. The LED indicator next to the 'Learn' button will illuminate steadily for 30 seconds, indicating the opener is in programming mode.
3. **Program the Remote:** Within 30 seconds of pressing the 'Learn' button, press and hold the button on your CPTK1 remote control that you wish to program.
4. **Confirm Programming:** The garage door opener lights will flash once (or you will hear two clicks) when the code has been successfully learned.
5. **Release Button and Test:** Release the remote control button. The programming is complete. Test the remote by pressing the programmed button to ensure it activates the garage door or gate.

4. OPERATING INSTRUCTIONS

Once your LiftMaster CPTK1 remote control is programmed, operating your garage door opener or gate operator is simple:

- Ensure you are within range of the receiver.
- Press the programmed button on your CPTK1 remote control to activate the garage door opener or gate operator.
- Press the button again to stop or reverse the operation, depending on your opener's settings.

5. MAINTENANCE

Battery Replacement

The CPTK1 remote uses a 3V coin cell battery (e.g., CR2032). When the remote's range decreases, the LED indicator on the remote does not light up, or it stops functioning, the battery may need replacement.

1. **Open the Casing:** Carefully open the remote casing. This can typically be done by prying it apart at the seam using a small flat-head screwdriver or a coin.
2. **Remove Old Battery:** Remove the old 3V coin cell battery from its compartment.
3. **Insert New Battery:** Insert a new 3V coin cell battery (CR2032 recommended) with the positive (+) side facing up, ensuring it is securely seated.
4. **Close Casing:** Snap the remote casing back together, ensuring all tabs are aligned and secured.
5. **Test Remote:** Test the remote control to confirm proper operation.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working after programming.	Incorrect programming steps, dead battery, incompatible opener.	Repeat the programming steps carefully. Check the battery and replace if necessary. Verify your opener has a red or orange 'Learn' button and operates on 390 MHz.
Reduced operating range.	Weak battery, radio interference.	Replace the remote's battery. Check for sources of radio interference near the garage door opener or remote control (e.g., LED lights, electronic devices).
Remote LED does not light up.	Dead battery.	Replace the remote's battery.

7. SPECIFICATIONS

- **Brand:** LiftMaster
- **Model:** CPTK1
- **Frequency:** 390 MHz
- **Buttons:** 1
- **Technology:** Security+ Rolling Code
- **UPC:** 012381991013
- **Manufacturer:** LiftMasterChamberlain
- **Compatibility:** LiftMaster, Chamberlain, Sears Craftsman openers with a red or orange 'Learn' button (manufactured 1993-1997).
- **Other Display Features:** Wireless

8. WARRANTY AND SUPPORT

Specific warranty information for the LiftMaster CPTK1 is not provided in the product data. For warranty inquiries, technical support, or to purchase replacement parts, please contact LiftMaster customer service directly or visit their official website. Always refer to your garage door opener's manual for specific compatibility and programming details.



© 2023 LiftMaster. All rights reserved.