



Manuals.plus /

› Biddeford Blankets /

› Biddeford Blankets Micro Plush Electric Heated Blanket User Manual, Twin, Taupe, Model 2030-905191-700

## Biddeford Blankets 2030-905191-700

# Biddeford Blankets Micro Plush Electric Heated Blanket User Manual

Model: 2030-905191-700 (Twin, Taupe)

## INTRODUCTION

---

This manual provides instructions for the safe and efficient use of your Biddeford Blankets Micro Plush Electric Heated Blanket. Please read all instructions carefully before use and retain this manual for future reference.

The Biddeford Micro Plush Electric Heated Blanket is designed to provide warmth and comfort. It features a digital controller with multiple heat settings and an automatic shut-off function for safety.

## IMPORTANT SAFETY INFORMATION

---

**WARNING: To reduce the risk of burns, electric shock, fire, or injury, this product must be used in accordance with the following instructions.**

- Do not use with an extension cord or power strip. Plug directly into a wall outlet.
- Do not use with infants, children, incapacitated individuals, or persons insensitive to heat.
- Do not use if the blanket is wet.
- Do not use if the power cord or controller is damaged.
- Do not use with pets.
- Do not use for medical purposes in hospitals.
- Do not tuck in the controller or power cord.
- Do not use pointed objects to secure the blanket.
- Always disconnect the power cord from the outlet when not in use.
- Ensure the blanket is spread flat and not bunched or folded when in use to prevent overheating.

## INCLUDED COMPONENTS

---

Your package should contain the following items:

- 1 x Biddeford Blankets Micro Plush Electric Heated Blanket (Twin, Taupe)
- 1 x Digital Controller
- 1 x User Guide Manual (this document)

## SETUP INSTRUCTIONS

---

1. **Unpack the Blanket:** Carefully remove the electric blanket and controller from its packaging. Inspect for any damage.
2. **Position the Blanket:** Place the heated blanket on your bed, ensuring it is spread out smoothly and evenly. The connector for the controller should be positioned at the foot of the bed for easy access.



Image: The Biddeford Micro Plush Electric Heated Blanket in Taupe, shown folded with its digital controller. This illustrates the blanket's appearance and the controller's design.

3. **Connect the Controller:** Locate the connector on the blanket. Firmly plug the digital controller's cord into this connector. Ensure it clicks securely into place.
4. **Plug into Power:** Plug the controller's power cord directly into a 120V AC wall outlet. Do not use extension cords or power strips.
5. **Initial Check:** Before first use, ensure the blanket is not folded, bunched, or tucked under the mattress. It should lie flat.

## OPERATING INSTRUCTIONS

---

### Digital Controller Overview



Image: A close-up view of the Biddeford digital controller. It features a digital display showing the heat setting, a power button, up/down arrows for temperature adjustment, and a "PRE-HEAT" button.

The digital controller allows you to manage the blanket's heat settings and features.

- **Power Button:** Turns the blanket on or off.
- **Up/Down Arrows:** Adjusts the heat setting.
- **PRE-HEAT Button:** Activates a rapid pre-heating function.
- **Digital Display:** Shows the current heat setting.

### Basic Operation

1. **Turning On:** Press the **Power Button** once. The digital display will illuminate, showing the last used heat setting or a default setting.
2. **Adjusting Heat:** Use the **Up Arrow** to increase the heat setting (1-10) or the **Down Arrow** to decrease it. Setting 1 is the lowest heat, and 10 is the highest.
3. **Pre-Heat Function:** Press the **PRE-HEAT Button** to quickly warm the blanket. The blanket will heat to a high setting for a short period, then return to your selected heat setting.
4. **Automatic Shut-Off:** For safety, the blanket is equipped with a 10-hour automatic shut-off timer. The blanket will turn off automatically after 10 hours of continuous operation.
5. **Turning Off:** Press the **Power Button** again to turn off the blanket. The digital display will turn off. Always unplug the blanket from the wall outlet when not in use.

## MAINTENANCE AND CARE

---

Proper care will extend the life of your electric heated blanket.

### Washing Instructions

1. **Disconnect Power:** Always disconnect the controller from the blanket and unplug the power cord from the wall outlet before washing.
2. **Pre-Soak (Optional):** For best results, pre-soak the blanket for 15 minutes in cool water with a small amount of mild detergent.
3. **Machine Wash:** Wash on the gentle or delicate cycle in a washing machine with cool water. Do not use bleach.
4. **Rinse:** Rinse on the normal cycle.
5. **Machine Dry:** Tumble dry on a low heat setting or air dry. Ensure the blanket is completely dry before reconnecting the controller or storing. Do not iron.

**Important:** Do not dry clean. Do not use an iron. Do not use bleach. Ensure the blanket is completely dry before use or storage.



Image: A detailed view of the micro plush fabric texture of the blanket, highlighting its softness and material quality.

## Storage

When not in use, store the blanket in its original bag or a breathable storage container in a cool, dry place. Avoid placing heavy objects on top of the blanket, as this can damage the internal heating wires.

## TROUBLESHOOTING

| Problem                                   | Possible Cause   | Solution   |
|---|--|--|
| Blanket not heating.                      | Not plugged in securely.<br>Controller not connected properly.<br>Power outage or circuit breaker tripped.<br>Blanket folded or bunched. | Ensure power cord is firmly plugged into a wall outlet.<br>Check that the controller is securely connected to the blanket.<br>Verify power to the outlet.<br>Spread the blanket flat and ensure no folds or bunches. |
| Controller displays "E" or error code.    | Internal malfunction.<br>Connection issue.   | Unplug the blanket from the wall outlet for 5 minutes, then plug it back in.<br>Ensure all connections are secure.<br>If the error persists, contact customer support.   |
| Blanket feels too hot or not warm enough. | Heat setting is too high/low.<br>External factors (room temperature, other bedding).   | Adjust the heat setting using the up/down arrows on the controller.<br>Allow time for the blanket to reach the desired temperature.  |

## SPECIFICATIONS

- **Model:** 2030-905191-700
- **Size:** Twin (62 x 84 inches)
- **Color:** Taupe
- **Material:** 100% Polyester Micro Plush
- **Heat Settings:** 10
- **Controller:** Digital, 1 per Twin/Full size
- **Safety Feature:** 10-hour Auto-Off
- **Power:** 120V AC (Standard household outlet)
- **Care:** Machine Washable, Dryer Safe
- **Item Weight:** Approximately 4.66 pounds
- **UPC:** 657812133541, 657812133695, 657812132353

## WARRANTY INFORMATION

This Biddeford Blankets product is covered by a **5-year limited manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. The warranty does not cover damage caused by misuse, abuse, accident, unauthorized service, or commercial use. Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance, or need to make a warranty claim, please contact Biddeford Blankets customer service.

For the most current contact information, please visit the official Biddeford Blankets website or refer to the contact details provided on your product packaging.

When contacting support, please have your product model number (2030-905191-700) and proof of purchase available.