

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gaiam](#) /

› [Holiday Collection: Movie 4 Pack DVD User Manual](#)

### Gaiam GTED0560880D

## Holiday Collection: Movie 4 Pack DVD User Manual

Model: GTED0560880D

### INTRODUCTION

This manual provides essential information for the proper use and care of your Holiday Collection: Movie 4 Pack DVD set. This collection includes four heartwarming holiday films: *Christmas Comes Home To Canaan*, *Moonlight & Mistletoe*, *The Christmas Pageant*, and *Gift Of The Magi*. Please read these instructions carefully to ensure optimal viewing experience and longevity of your discs.



Image: The DVD cover for the Holiday Collection Movie 4 Pack. It features individual posters for the four movies included in the set, arranged in a grid. The spine of the DVD case is visible on the left, labeled "Holiday Collection Movie 4 Pack" and showing the Gaiam logo.

## SETUP

To begin enjoying your movie collection, follow these simple steps:

- 1. Prepare Your DVD Player:** Ensure your DVD player or Blu-ray player is connected to your television or display device and powered on.

2. **Select a Disc:** Carefully remove one of the DVD discs from its case by pressing the center hub and lifting the disc by its edges. Avoid touching the shiny playback surface.
3. **Insert the Disc:** Gently insert the disc into the disc tray or slot of your DVD player with the label side facing up.
4. **Close the Tray:** If your player has a disc tray, press the eject/close button to retract the tray.

## OPERATING INSTRUCTIONS

Once the disc is loaded, the player should automatically begin playback or display a main menu. Use your DVD player's remote control to navigate.

- **Main Menu:** From the main menu, you can typically select options such as "Play Movie," "Scene Selection," "Audio Settings," or "Subtitles." Use the arrow keys on your remote to highlight an option and the "Enter" or "OK" button to select it.
- **Playback Controls:** During playback, use standard remote controls for functions like Play, Pause, Stop, Fast Forward, Rewind, and Skip Chapter.
- **Audio and Subtitles:** If available, these options can usually be accessed from the main menu or by pressing an "Audio" or "Subtitle" button on your remote during playback.

## CARE AND MAINTENANCE

Proper care will extend the life of your DVDs and ensure consistent playback quality.

- **Handling:** Always hold discs by their edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If a disc becomes dirty or smudged, gently wipe it from the center outwards with a soft, lint-free cloth. Do not use abrasive materials or harsh cleaning chemicals. For stubborn marks, a slightly damp cloth with water can be used, followed by immediate drying with a clean, dry cloth.
- **Storage:** Store discs in their original cases, away from direct sunlight, extreme temperatures, and high humidity. Laying discs flat or stacking them without cases can lead to warping or scratching.
- **Avoid Scratches:** Be careful not to drop discs or slide them across rough surfaces, as this can cause permanent damage.

## TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

- **Disc Not Playing/Skipping:**
  - Check if the disc is clean and free of smudges or scratches. Clean as per the "Care and Maintenance" section.
  - Ensure the disc is inserted correctly into the player (label side up).
  - Try playing another DVD to confirm your player is functioning correctly.
  - Restart your DVD player by unplugging it from the power outlet for a minute, then plugging it back in.
- **No Audio/Video:**
  - Verify that all cables connecting your DVD player to your TV are securely connected.
  - Check the input source on your TV to ensure it is set to the correct input for your DVD player.
  - Adjust the volume on your TV and/or audio receiver.
- **Menu Navigation Issues:**

- Ensure your remote control batteries are not depleted.
- Point the remote directly at the DVD player's sensor.

## SPECIFICATIONS

---

<b>Product Title</b>	Holiday Collection: Movie 4 Pack
<b>Format</b>	DVD, Box set, Color, Multiple Formats, NTSC, Widescreen
<b>Number of Discs</b>	2
<b>Run Time</b>	5 hours
<b>Release Date</b>	October 1, 2013
<b>Language</b>	English
<b>Studio</b>	Gaiam
<b>Item Model Number</b>	GTED0560880D
<b>Product Dimensions</b>	0.7 x 7.5 x 5.4 inches; 2.88 ounces

## WARRANTY AND SUPPORT

---

As a media product, this DVD set typically does not come with a manufacturer's warranty for playback issues beyond initial defects. If you purchased this product new and experience a defect upon first use, please contact the retailer from whom you purchased the item for their return or exchange policy.

For general inquiries about the content of the films, please refer to publicly available information or fan communities. Technical support for your DVD player should be directed to the manufacturer of your player.